



WELL WCU150N WiFi n USB klient 150 Mb/s, R-SMA
WELL WCU300N WiFi n USB klient 300 Mb/s, 1T2R



User's Manual

Table of Contents

WELCOME	3
PACKAGE CONTENTS	3
WIRELESS USB ADAPTER OVERVIEW	4
INTERFACE.....	4
LED DESCRIPTION	4
WPS BUTTON	4
WIRELESS USB ADAPTER INSTALLATION	5
WINDOWS 7	5
WINDOWS VISTA.....	8
WINDOWS XP	12
WINDOWS 2000	16
MAKING A BASIC WIRELESS NETWORK CONNECTION	20
INTRODUCTION TO THE WIRELESS LAN UTILITY.....	24
GENERAL	25
PROFILE	26
AVAILABLE NETWORK.....	27
STATUS	28
STATISTICS	29
WI-FI PROTECTED SETUP (WPS).....	30
UNINSTALL.....	38
TROUBLESHOOTING.....	40
SESSION OVERLAP	40
TIMEOUT!!	40
NO REALTEK 11N USB WIRELESS LAN	40
REALTEK 11N USB WIRELESS LAN IS DISCONNECTED.....	41
CANNOT GET IP ADDRESS FROM WIRELESS AP	41

Welcome

Thank you for purchasing the IEEE 802.11n Wireless USB Adapter. Wireless USB Adapter has an extra foundation which is designed to make Wireless USB Adapter get better signal when it is plugging into the foundation and can be easily move around. In addition, Wireless USB Adapter is backward compatible with 802.11b/g. When Wireless USB Adapter is connecting to the standard 802.11b, 802.11g or 802.11n APs or routers, it can perform much better than other standard stations.

Wireless USB Adapter supports higher data throughput than the IEEE802.11n standard (up to 150Mbps).

For the security of WLAN, Wireless USB Adapter supports 64/128-bit WEP data encryption which protects your wireless network from eavesdropping.

It also supports WPA/WPA2 which combines IEEE802.1x and TKIP technologies. Client users are required to authorize before accessing to APs or routers, and the data transmitted on the network is encrypted and decrypted by a dynamically changed secret key. Wireless USB Adapter supports WPA2 function which provides a stronger encryption through AES which is the most advanced WLAN solution for IEEE802.11i. Besides, Wireless USB Adapter supports WPS function which provides a stronger encryption and easier configuration through WPA2 which is the most advanced WLAN solution for IEEE802.11i.

Package Contents

The Wireless USB Adapter package includes the following.

1. Wireless USB Adapter
2. ANTENNA (only for WCU150N)
3. Quick Installation Guide
4. AUTORUN CD

Wireless USB Adapter Overview

Wireless USB Adapter has the USB interface, LED and WPS button below.



Interface

USB Interface: Connect the USB Interface to a USB port on your computer.

LED Description

LED: The LED stays lighted to indicate WLAN link established and active.

WPS Button

WPS Button: Press this button to do WPS with AP.

Wireless USB Adapter Installation

The following instructions will guide you through the process of installing the Wireless USB Adapter.

Windows 7

Step 1:

Once USB dongle connected to computer and the following will appear on screen.



Step 2:

Please insert the JOYCE CD into your CD-ROM drive.

The CD should auto-start, displaying the following window. If it does not start, click on **Start - Run** and type in **CD: start.html** (where CD is the drive letter of your CD-ROM drive.) Click „**WELL WCU150N - OVLADAC**”.




Step 3:

For Security reasons Windows 7 requires the installer program to have administrator privileges so the new policy called " **User Account Control** " has been introduced in Windows 7. If UAC is enabled Windows pops up a window " **User Account Control** " Windows need your permission to continue. User needs to Click " **Yes** " to proceed with the installation.


Step 4:

Click " Next ".

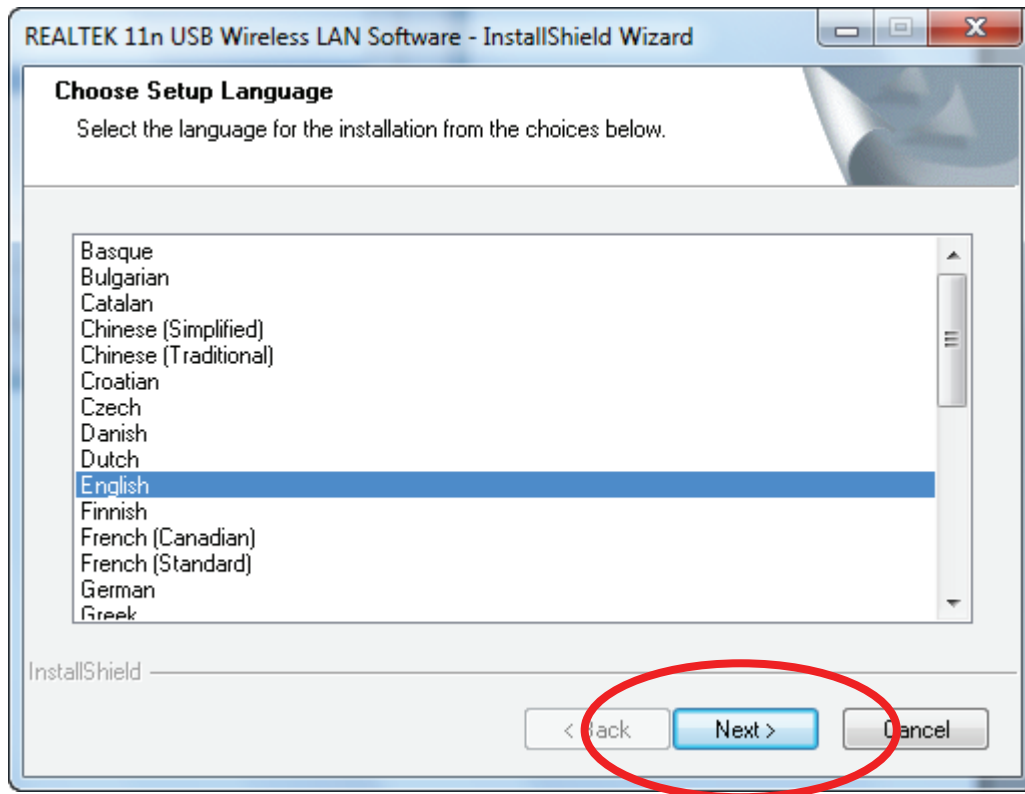


Step 5:

Click " Next ".

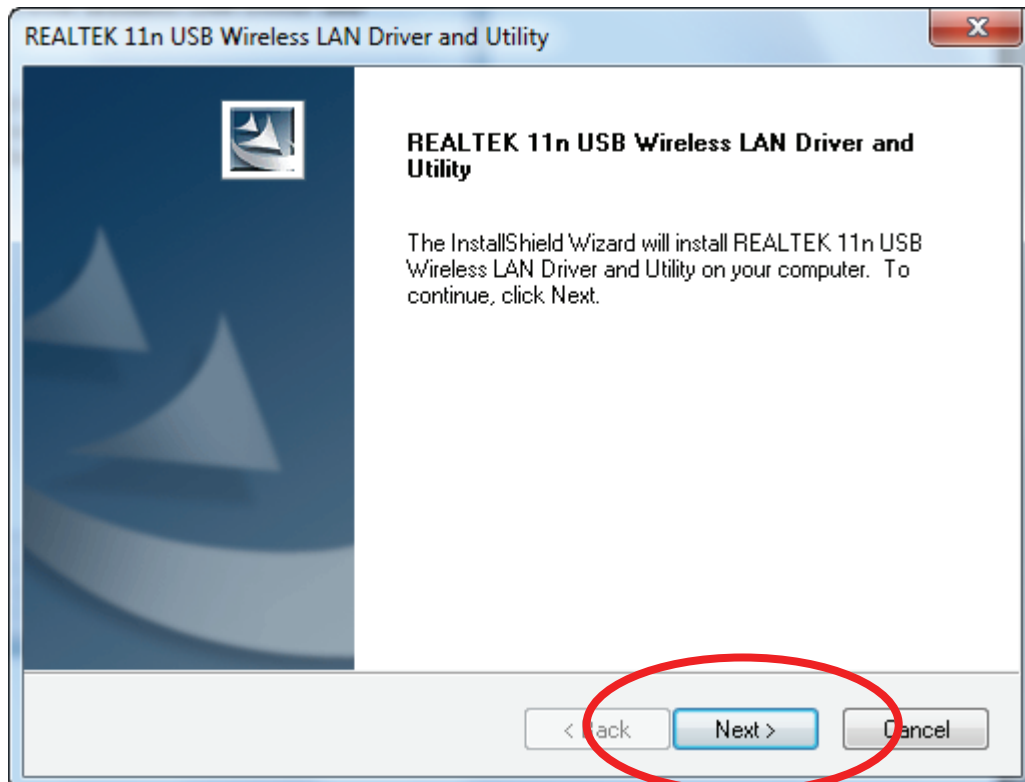


Step 6:

Click "Install".

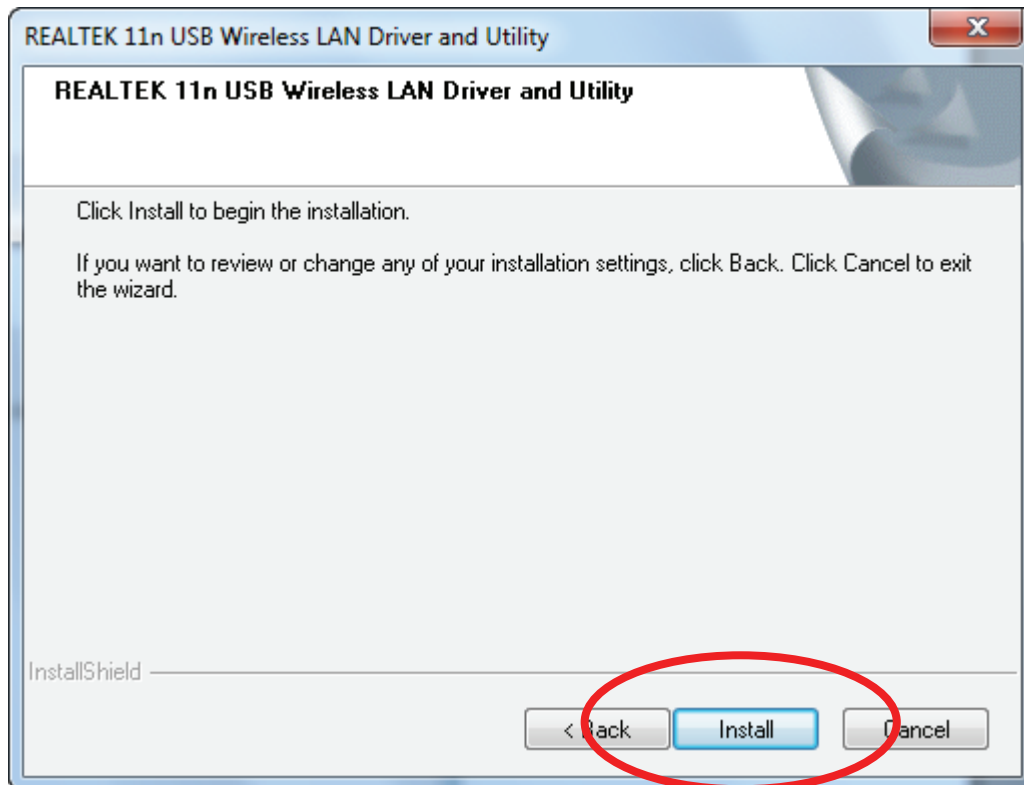

Step 7:


Click "Finish".

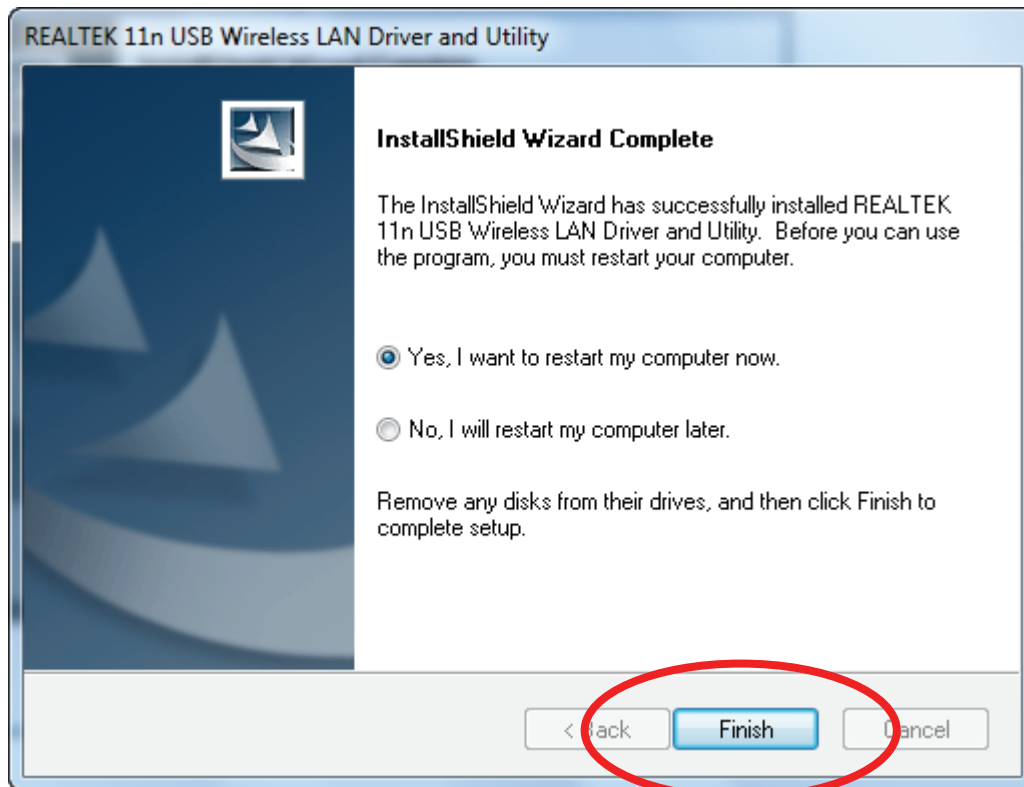

Windows Vista

Step 1:

As Windows starts it will detect that new hardware has been added, and start the " Found New Hardware Wizard ". Click on " Cancel ".

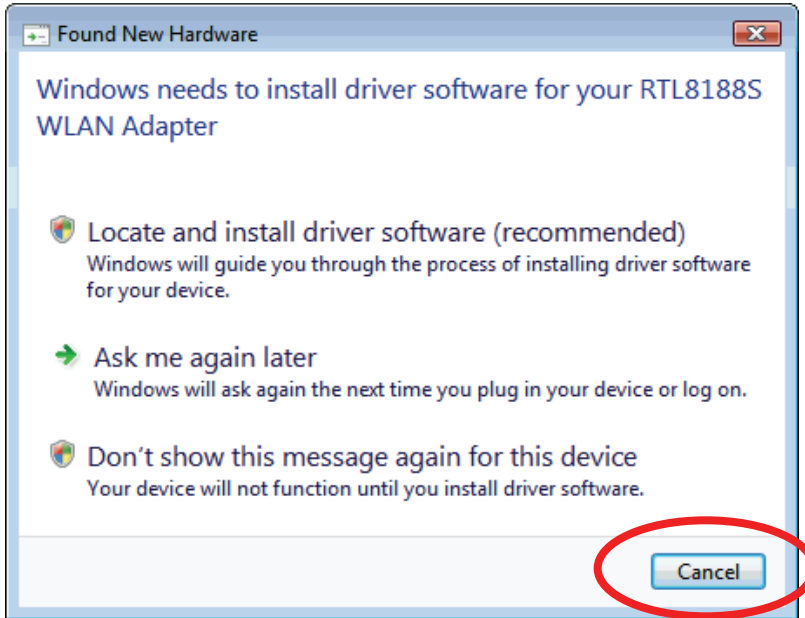

Step 2:

Please insert the JOYCE CD into your CD-ROM drive.

The CD should auto-start, displaying the following window. If it does not start, click on **Start - Run** and type in **CD: start.html** (where CD is the drive letter of your CD-ROM drive.) Click „**WELL WCU150N - OVLADAC**”.



JOYCE - Vyhrazení dovozců zařízení značky WELL

www.well.cz

1-2-3. Spojeno.

Děkujeme Vám za nákup zařízení značky WELL a věříme, že s ním budete spokojeni. Zde najdete k jednotlivým zařízením užitečné informace pro jejich snadné používání.

VoIP telefony	VoIP příslušenství	VoIP ústředny	VoIP brány
WELL SIP-T18P - novinka	WELL YHS32	WELL ePBX-100A-128	WELL Gate3512
WELL SIP-T20 a SIP-T20P	WELL IP 38PK	WELL LS200	WELL ATA171P
WELL SIP-T22P	WELL EHS36 - novinka	WELL RS120	WELL ATA172
WELL SIP-T26P		WELL TS300	WELL IAD162
WELL SIP-T28P			WELL Gate2608
WELL 3190IB - novinka			WELL Gate3504
WELL 3195IF a 3195IF PoE			WELL Gate3802/3804
WELL USB-M3K			
WELL VP-2009			
WELL VP-2009 PoE - novinka			


ADSL	WiFi	PowerLine	Routery/Firewally
WELL PTI-8111	WELL WRC3500_V2	WELL PTI-3014	Operační systém LINUX
WELL PTI-8411	WELL WRC5000N - novinka		WELL RF1120
WELL PTI-8511G	WELL WRC7000N - novinka		WELL RF2120
	WELL WCU150N - novinka OVLADAC		WELL RF2111

Step 3:

For Security reasons VISTA requires the installer program to have administrator privileges so the new policy called " **User Account Control** " has been introduced in Windows VISTA. If UAC is enabled Windows pops up a window " **User Account Control** " Windows need your permission to continue. User needs to Click " **Allow** " to proceed with the installation.


Step 4:

Click " **Next** ".

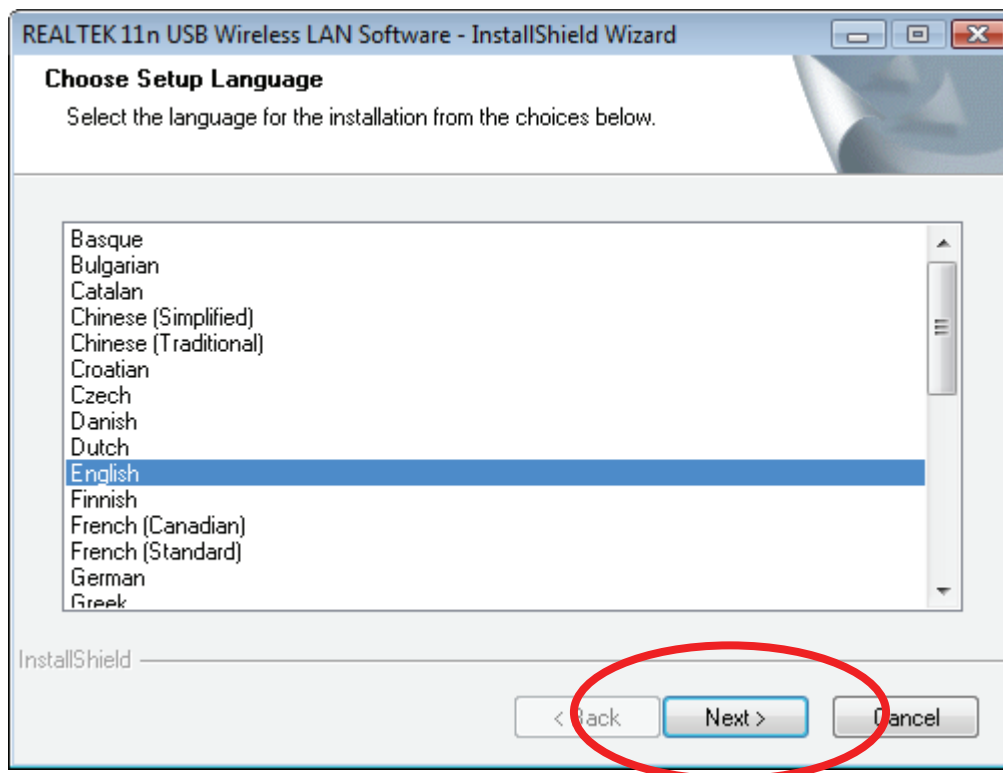


Step 5:

Click " Next ".

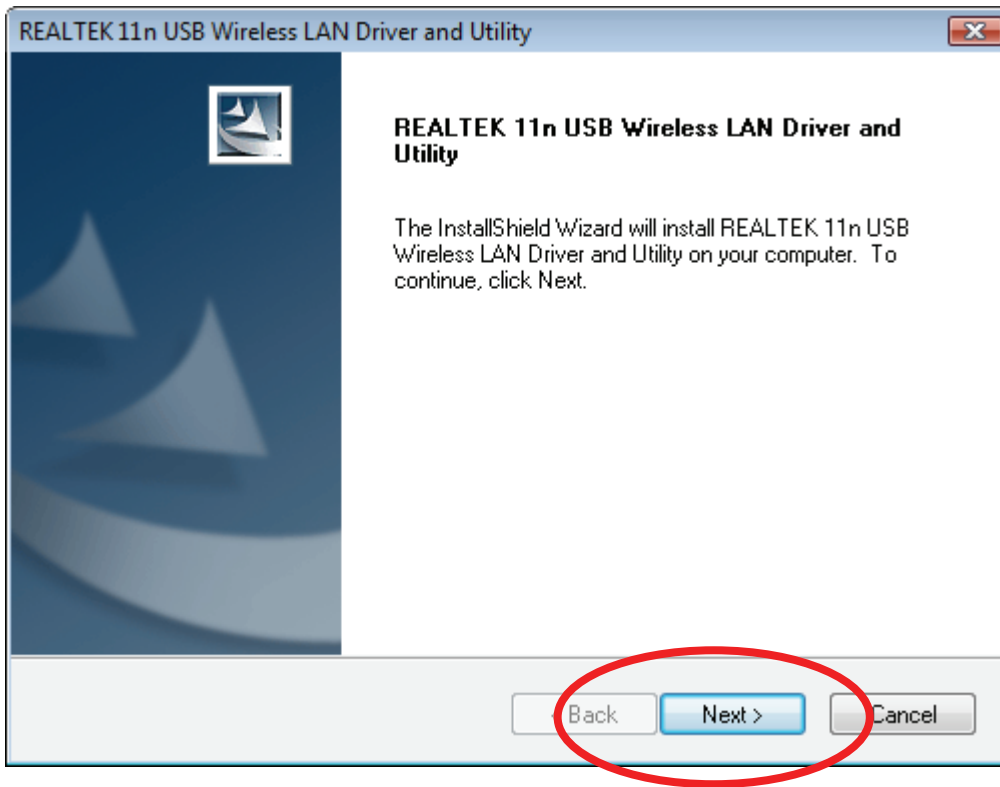


Step 6:

Click " Install ".

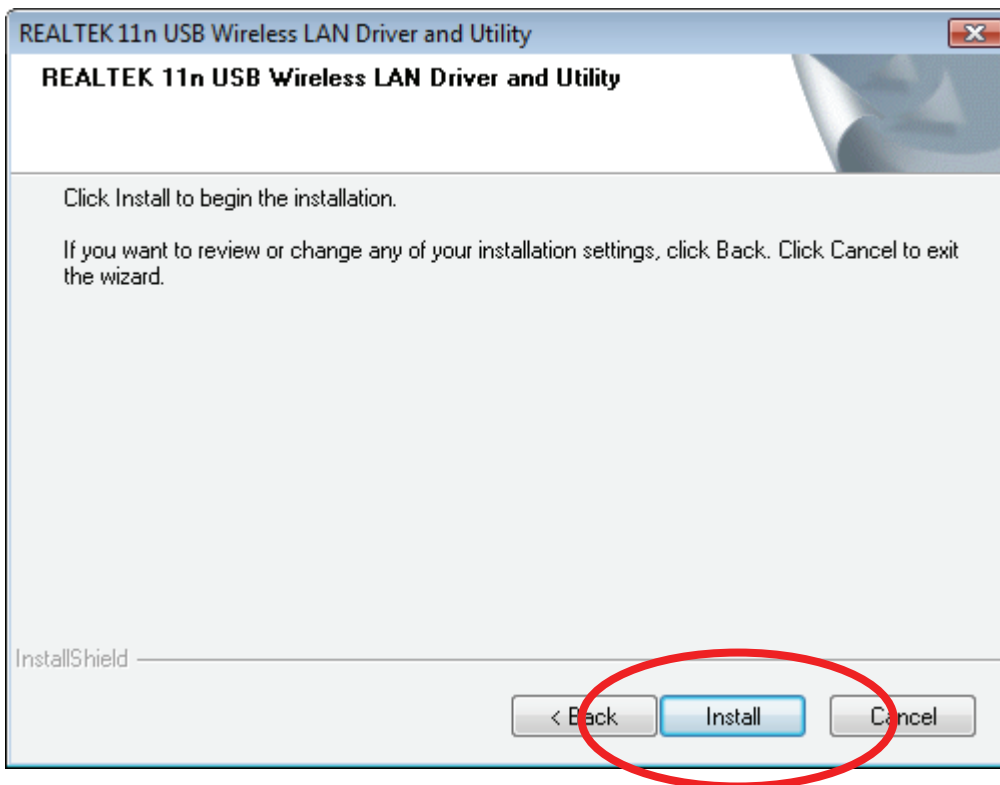

Step 7:


Click " Finish ".

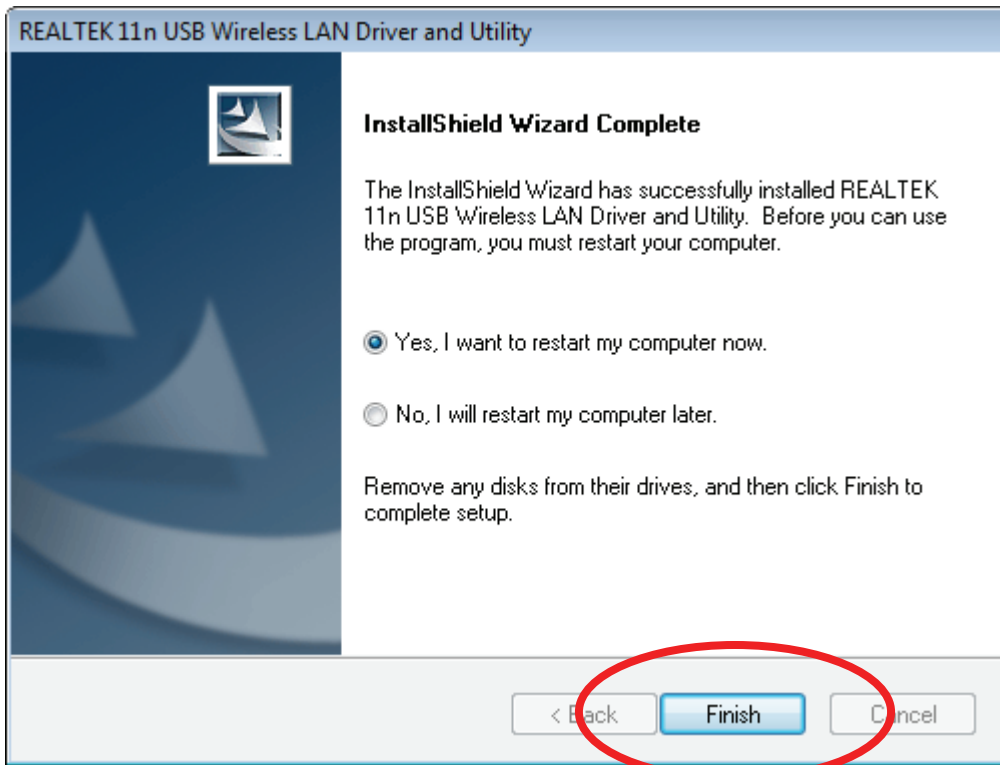

Windows XP

Step 1:

As Windows starts it will detect that new hardware has been added, and start the " Found New Hardware Wizard ". Click on " Cancel ".

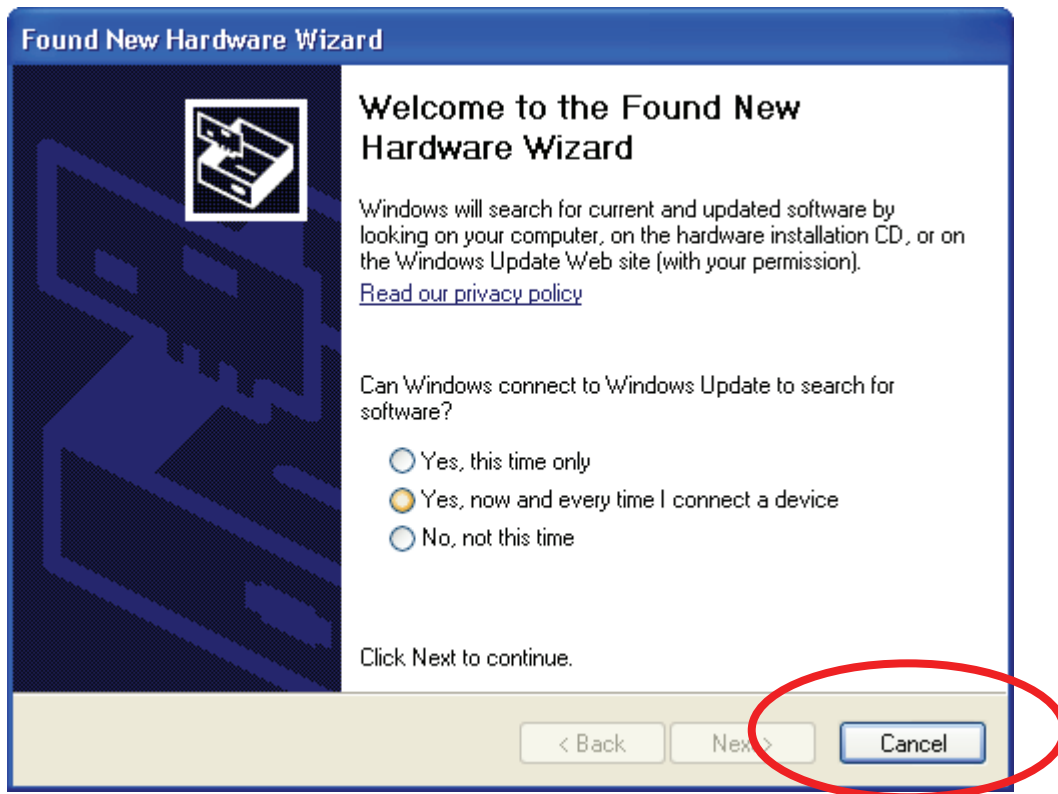

Step 2:

Please insert the JOYCE CD into your CD-ROM drive.

The CD should auto-start, displaying the following window. If it does not start, click on **Start - Run** and type in **CD: start.html** (where CD is the drive letter of your CD-ROM drive.) Click „**WELL WCU150N - OVLADAC**”.

Well

JOYCE = Vyhrazení dovozce zařízení značky WELL

www.well.cz

JOYCE

1-2-3. Spojeno.

Děkujeme Vám za nákup zařízení značky WELL a věříme, že s ním budete spokojeni. Zde najdete k jednotlivým zařízením užitečné informace pro jejich snadné používání.

VoIP telefony

- WELL SIP-T18P - novinka
- WELL SIP-T20 a SIP-T20P
- WELL SIP-T22P
- WELL SIP-T26P
- WELL SIP-T28P
- WELL 3190IB - novinka
- WELL 3195IF a 3195IF PoE
- WELL USB-M3K
- WELL VP-2009
- WELL VP-2009 PoE - novinka

VoIP příslušenství

- WELL YHS32
- WELL IP 38PK
- WELL EHS36 - novinka

VoIP ústředny

- WELL ePBX-100A-128
- WELL LS200
- WELL RS120
- WELL TS300

VoIP brány

- WELL Gate3512
- WELL ATA171P
- WELL ATA172
- WELL IAD162
- WELL Gate2608
- WELL Gate3504
- WELL Gate3802/3804

ADSL

- WELL PTI-8111
- WELL PTI-8411
- WELL PTI-8511G

WiFi

- WELL WRC3500_V2
- WELL WRC5000N - novinka
- WELL WRC7000N - novinka
- WELL WCU150N - novinka - **OVLADAC**

PowerLine


- WELL PTI-3014

Routery/Firewally

- Operační systém LINUX
- WELL RF1120
- WELL RF2120
- WELL RF2111

Step 3:

Click " Next ".

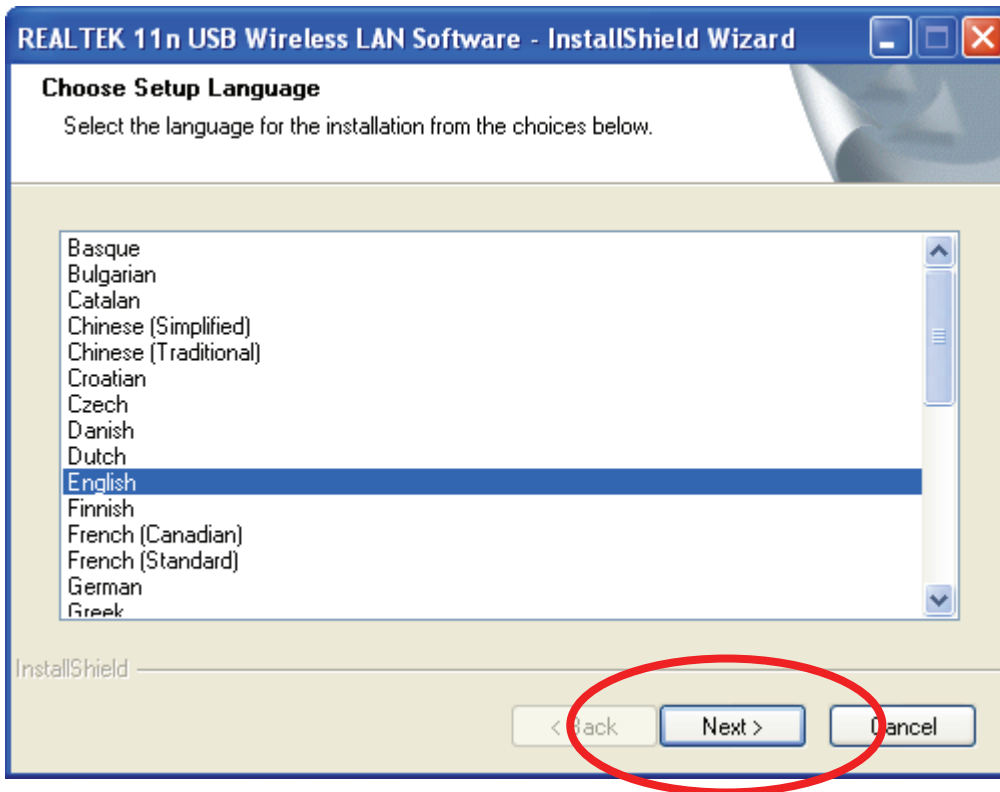


Step 4:

Click " Next ".




Step 5:

Click " Install ".

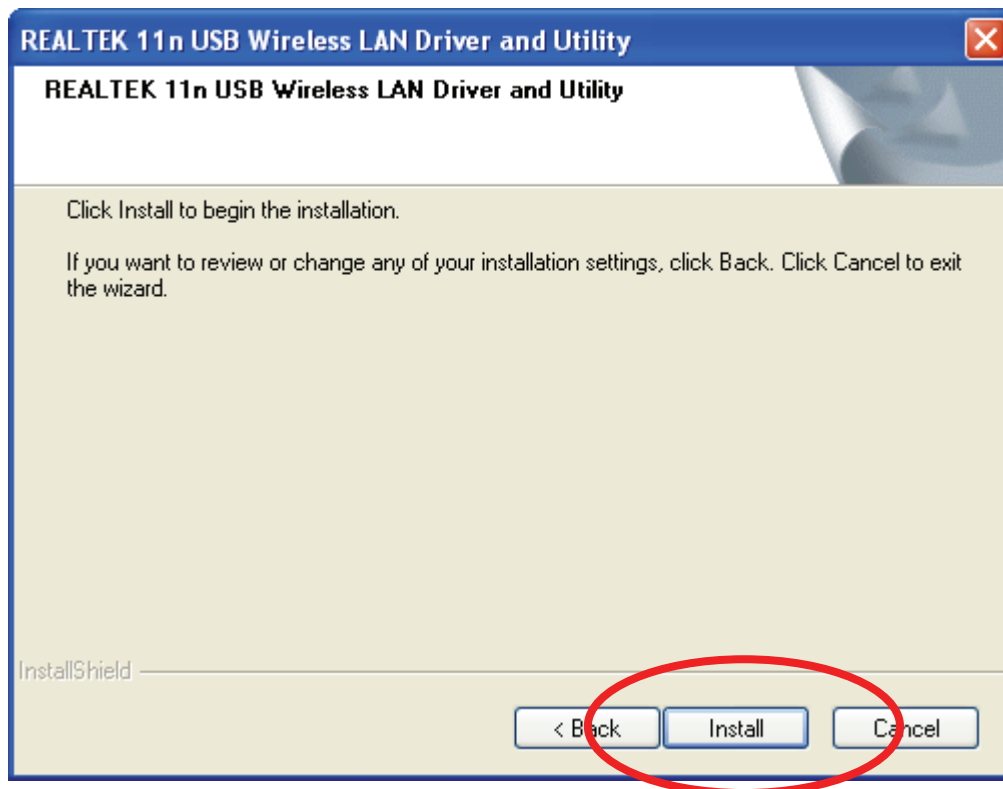

Step 6:


Click " Finish ".

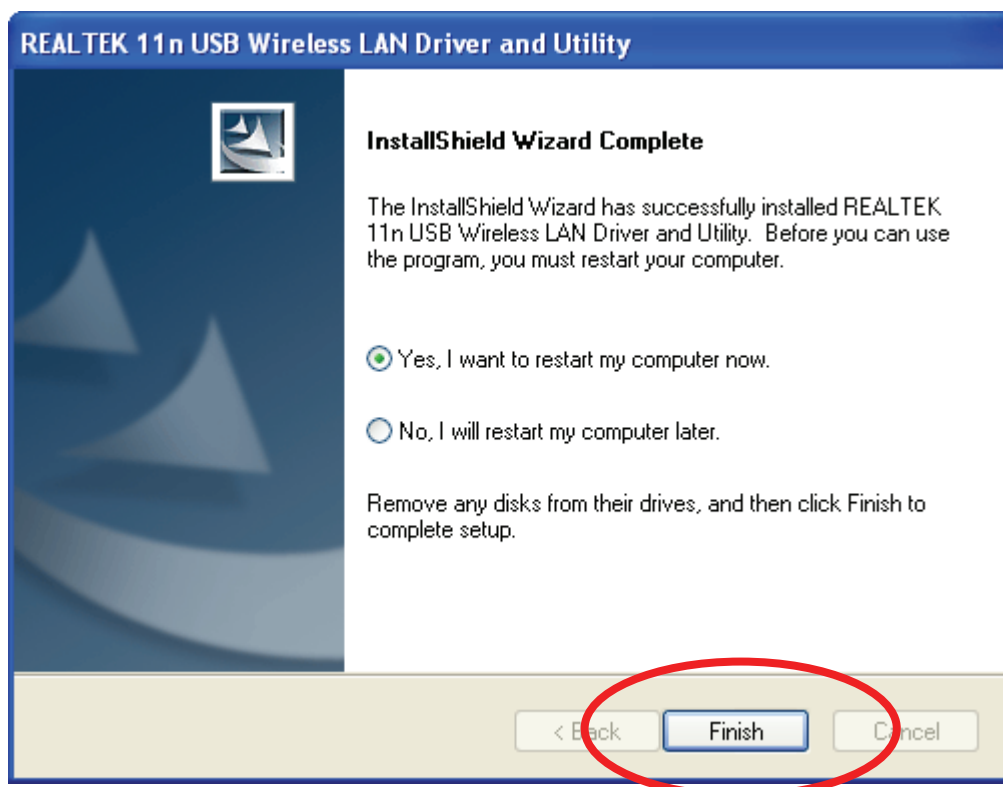

Windows 2000

Step 1:

As Windows starts it will detect that new hardware has been added, and start the " Found New Hardware Wizard ". Click on " Cancel ".

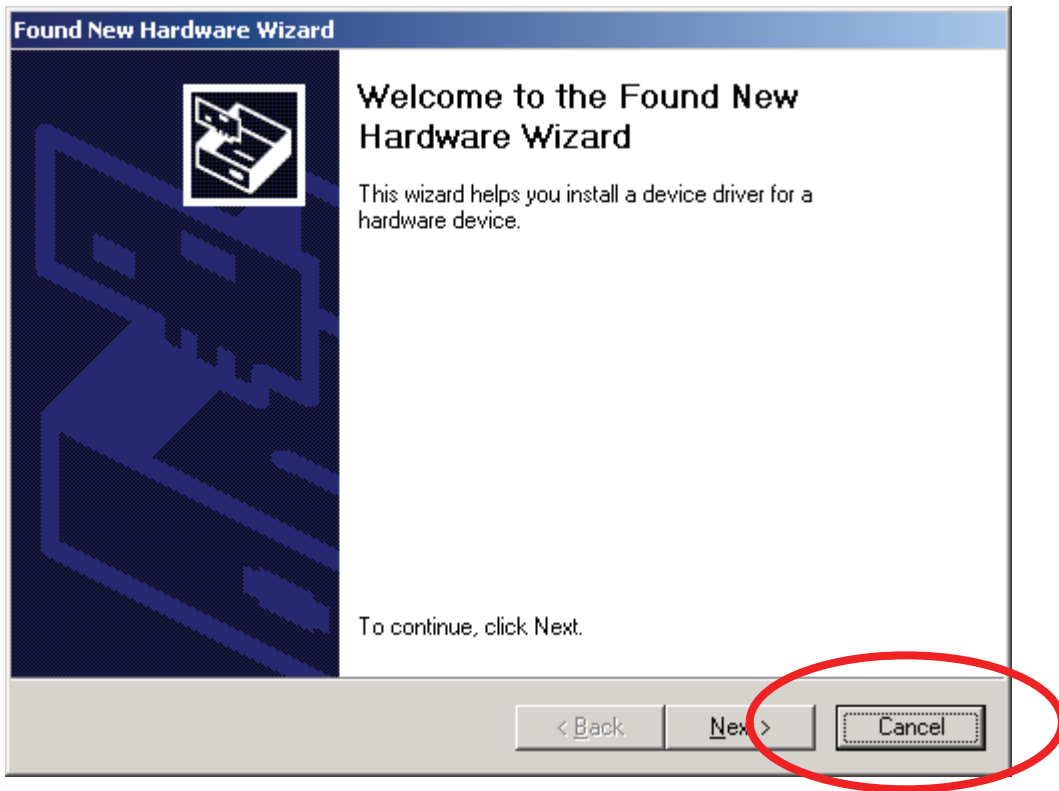

Step 2:

Please insert the JOYCE CD into your CD-ROM drive.


The CD should auto-start, displaying the following window. If it does not start, click on **Start - Run** and type in **CD: start.html** (where CD is the drive letter of your CD-ROM drive.) Click „**WELL WCU150N - OVLADAC**”.

Děkujeme Vám za nákup zařízení značky WELL a věříme, že s ním budete spokojeni. Zde najdete k jednotlivým zařízením užitečné informace pro jejich snadné používání.

VoIP telefony WELL SIP-T18P - novinka WELL SIP-T20 a SIP-T20P WELL SIP-T22P WELL SIP-T26P WELL SIP-T28P WELL 3190IB - novinka WELL 3195IF a 3195IF PoE WELL USB-M3K WELL VP-2009 WELL VP-2009 PoE - novinka	VoIP příslušenství WELL YHS32 WELL IP 38PK WELL EHS36 - novinka	VoIP ústředny WELL ePBX-100A-128 WELL LS200 WELL RS120 WELL TS300	VoIP brány WELL Gate3512 WELL ATA171P WELL ATA172 WELL IAD162 WELL Gate2608 WELL Gate3504 WELL Gate3802/3804
ADSL WELL PTI-8111 WELL PTI-8411 WELL PTI-8511G	WiFi WELL WRC3500_V2 WELL WRC5000N - novinka WELL WRC7000N - novinka WELL WCU150N - novinka OVLADAC	PowerLine WELL PTI-3014	Routery/Firewally Operační systém LINUX WELL RF1120 WELL RF2120 WELL RF2111


Step 3:

Click " Next ".

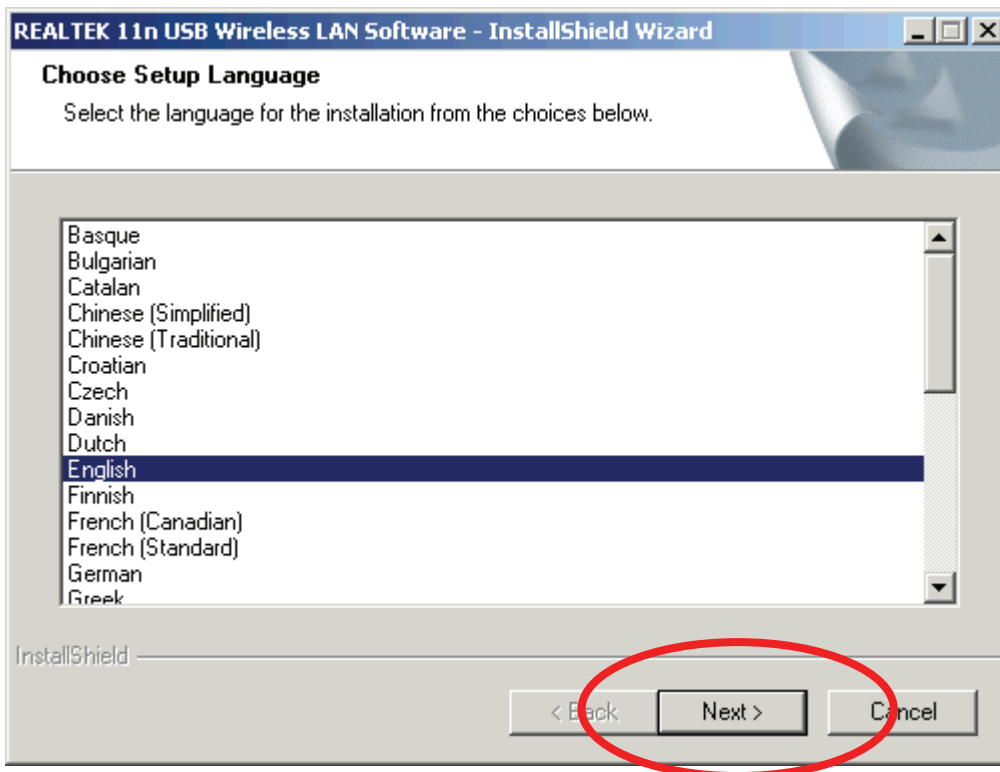


Step 4:

Click " Next ".

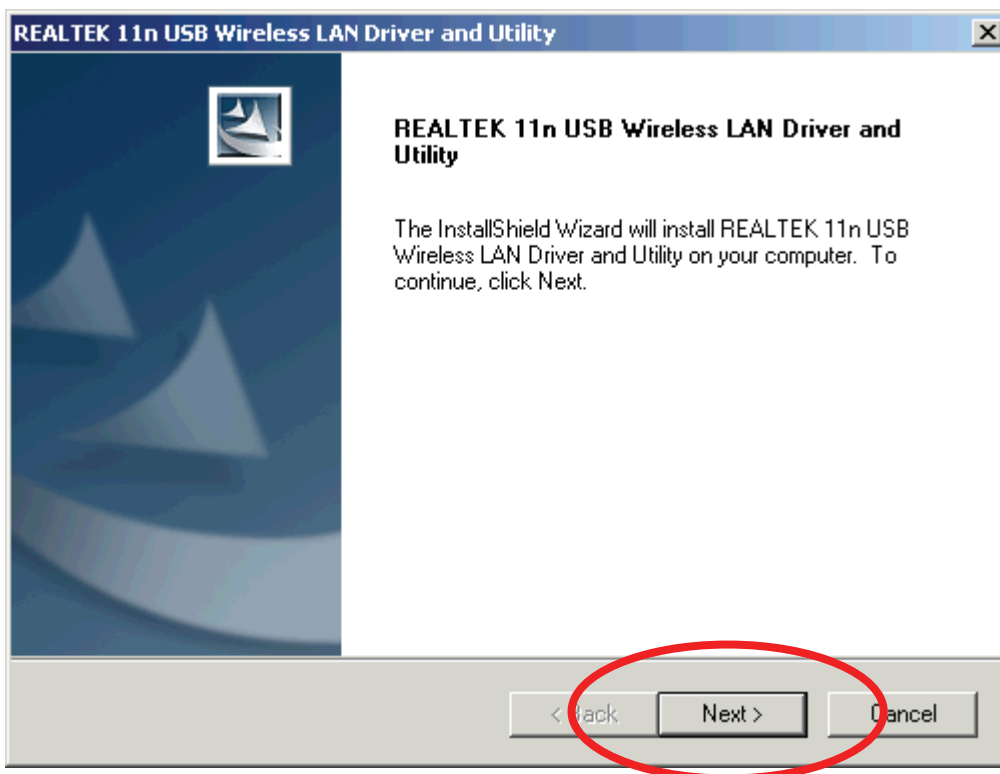


Step 5:

Click " Install ".

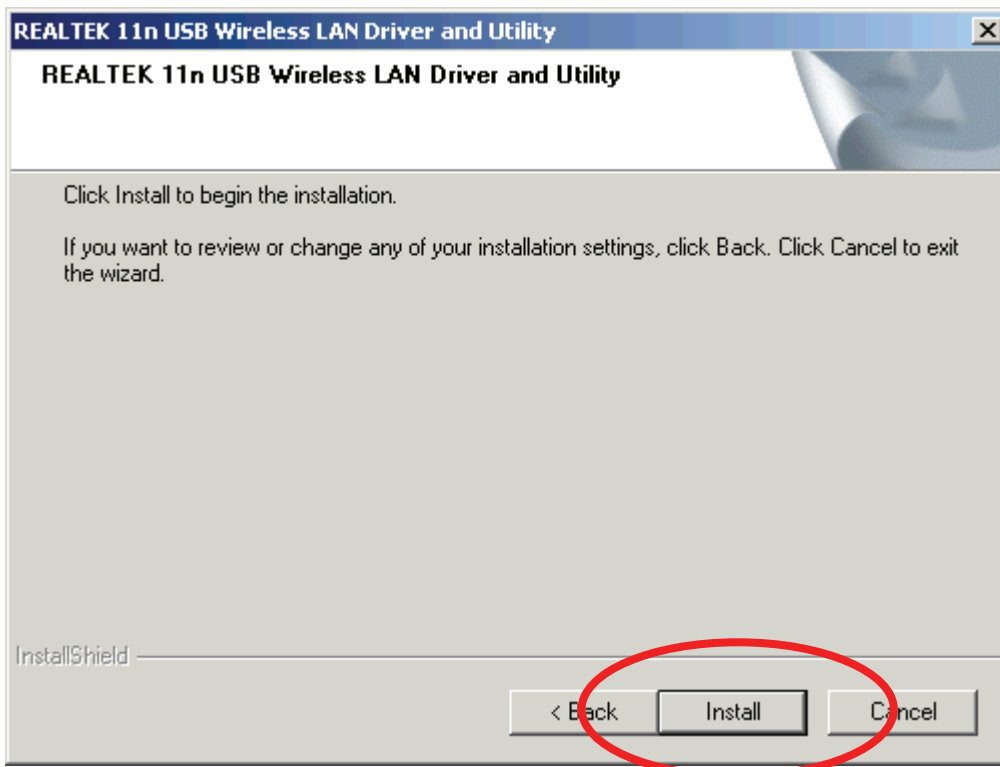

Step 6:

Click " Finish ".

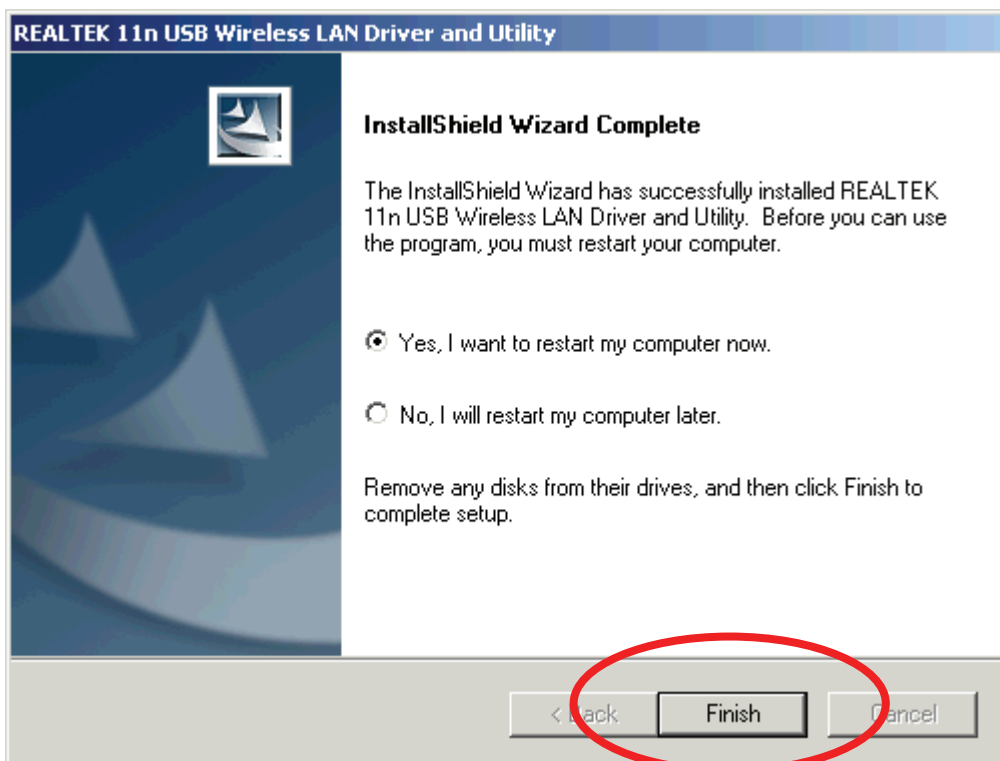



Making a Basic Wireless Network Connection


For Windows XP/Vista/7 users, your native Windows XP/Vista/7 wireless support (Wireless Zero Configuration Service) has been disabled by default.

Infrastructure mode

An Infrastructure Mode network contains at least one wireless client and one wireless AP or router. This client connects to Internet or intranet by communicating with this wireless AP or router.


Step 1:

Double click the  icon on your desktop to start the utility or  in the task bar.

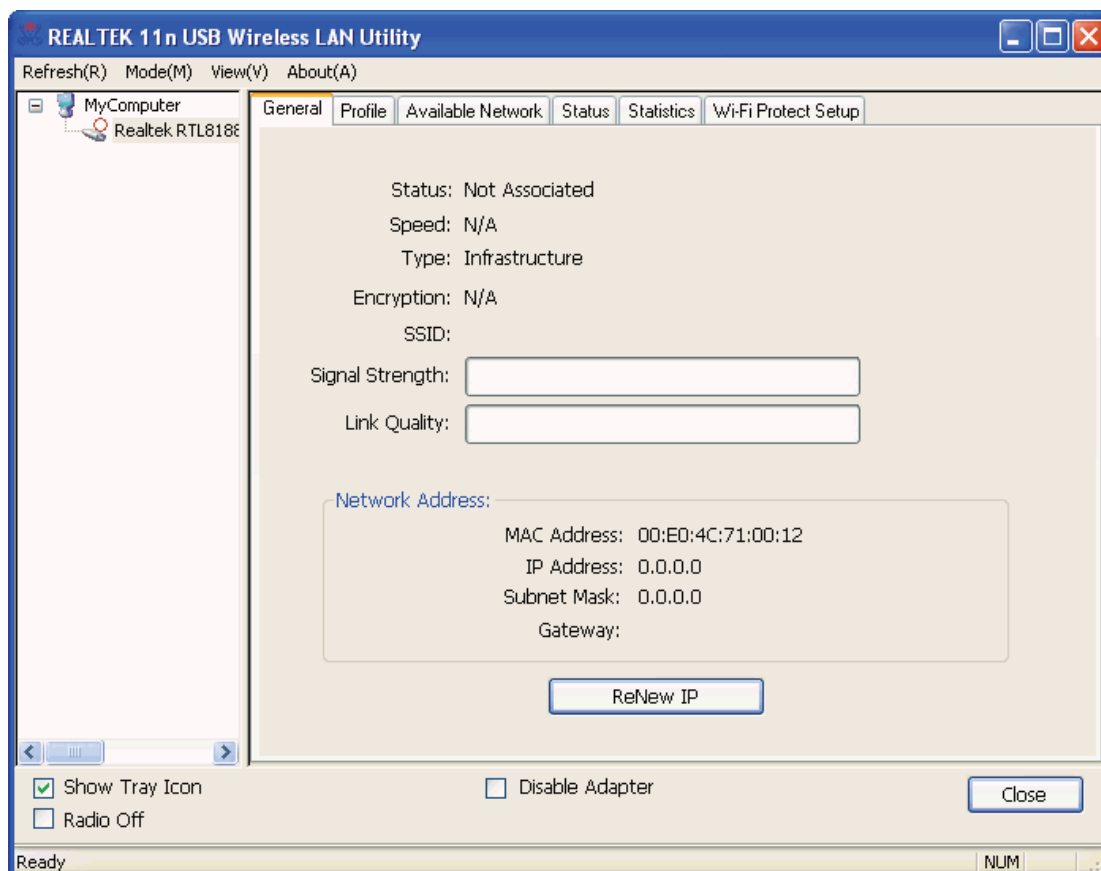


Step 2:

Click the " **Available Network** " button to scan available access points.

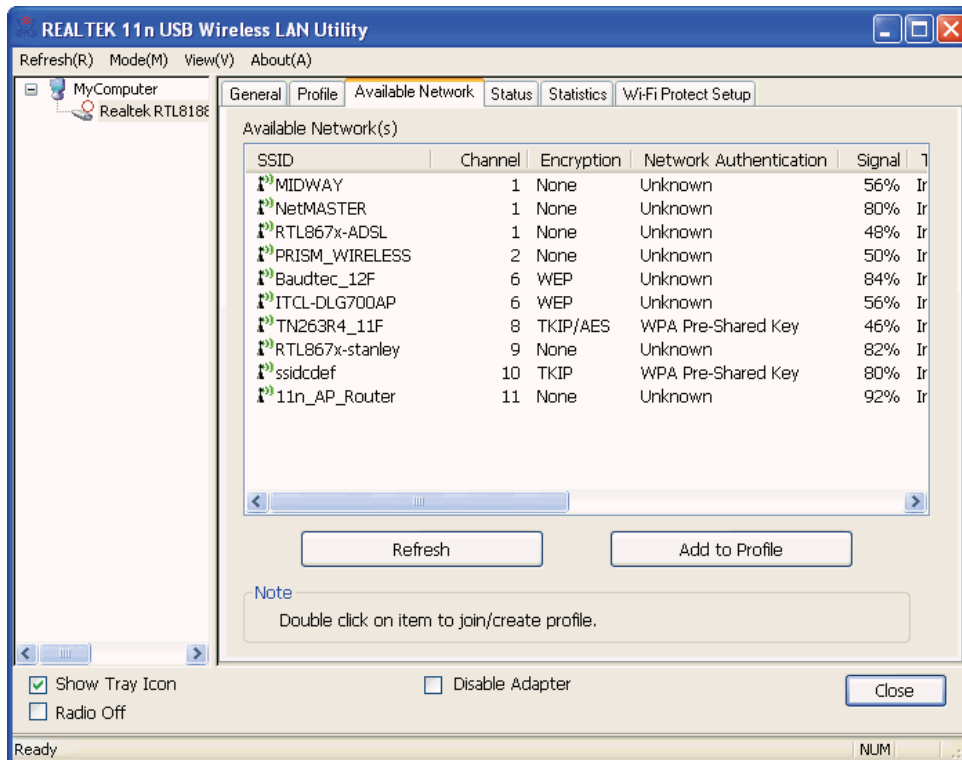

Step 3:

Double click on the SSID of AP that you are going to connect to and create profile that you are connecting to an open (Encryption is None) wireless network for example the SSID is 11n_AP_Router.

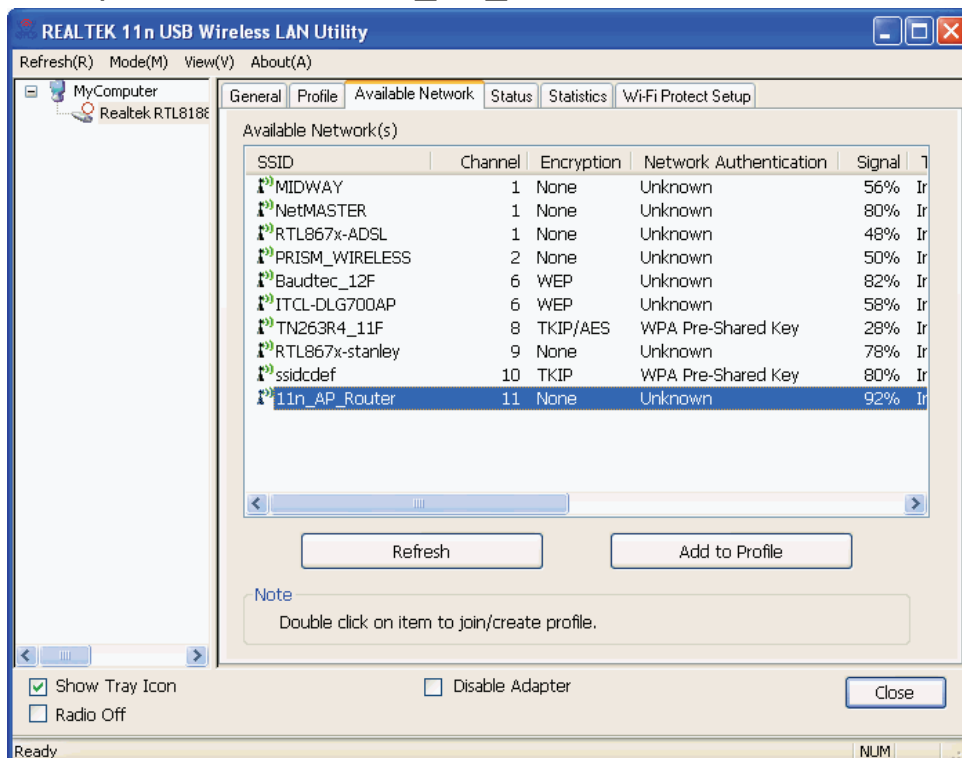


Step 4:

Click the " OK ".




Step 5:

Click the " OK ".

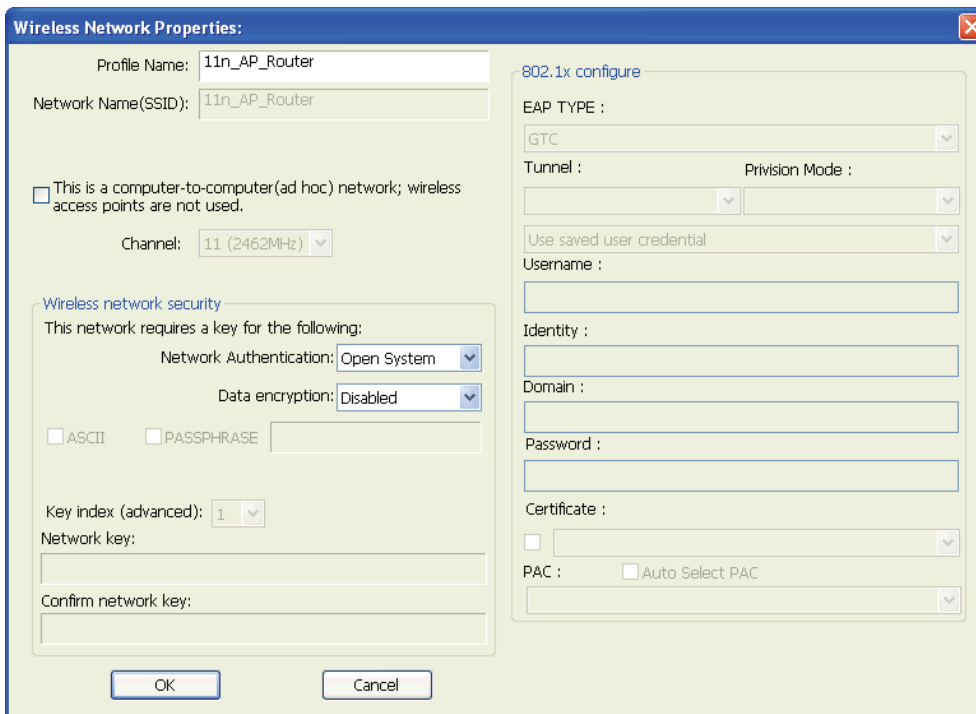


Step 6:

Now you are ready to use the Wireless Network to Internet or intranet.

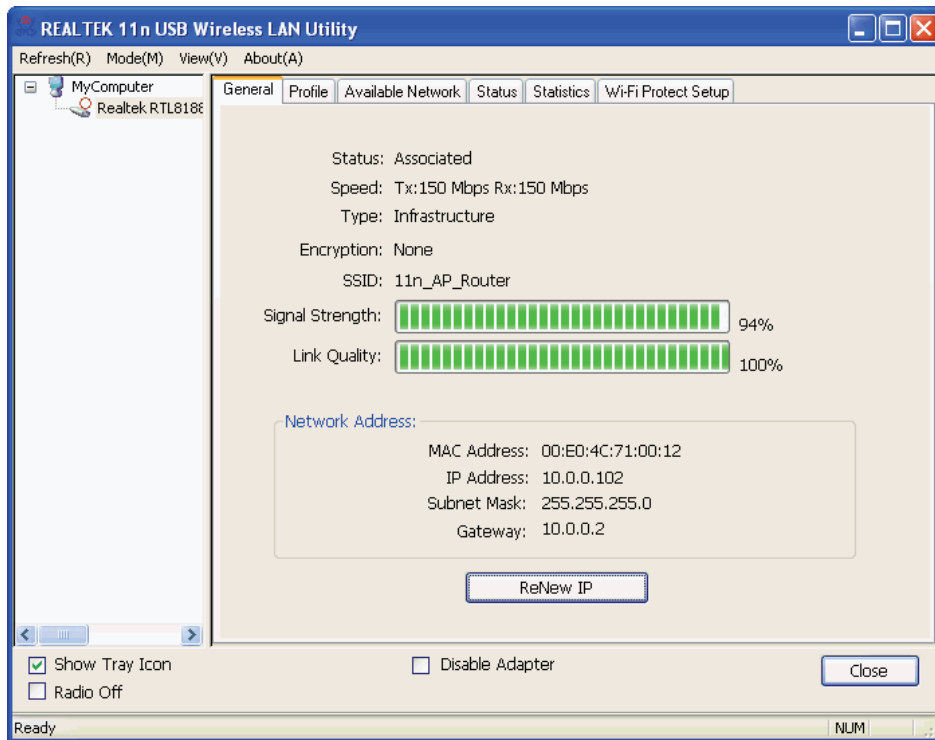

Note: This example is an open wireless network. If you are going to connect to a Wireless adapter with security protection, you will have to configure the encryption settings in this profile to be corresponding to the other wireless adapter. Please click on the " **Network Authentication** " drop-down list to select an authentication method, and then select a " **Data encryption** " type. Fill in each required blanks and click " **OK** ".

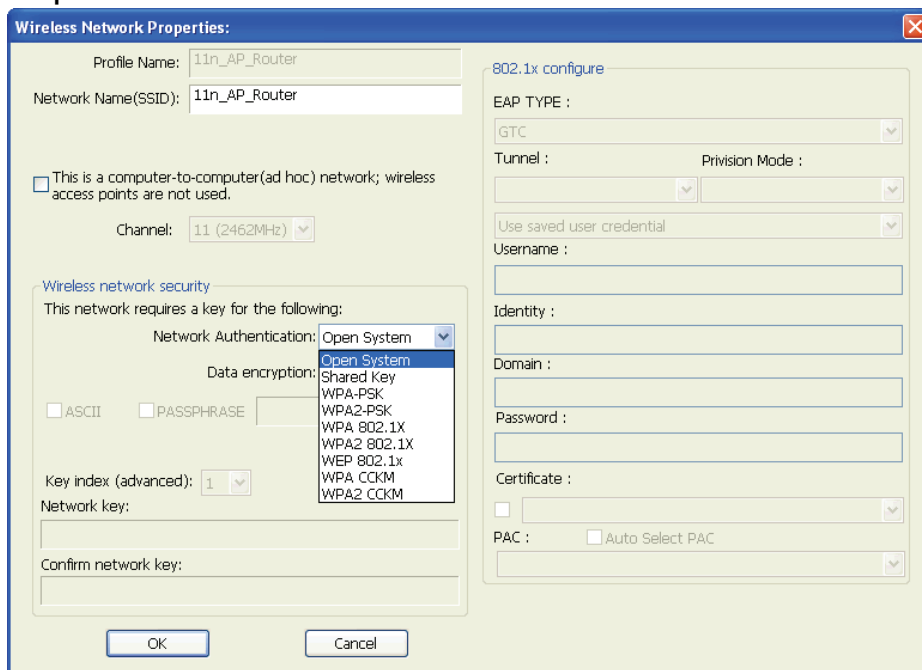

Introduction to the Wireless LAN Utility

Note: This management instruction uses Windows XP/Vista/7 as the presumed operation system.


Starting the Wireless LAN Utility

<input checked="" type="checkbox"/> Show Tray Icon	<input type="checkbox"/> Disable Adapter
<input type="checkbox"/> Radio Off	<input type="checkbox"/> Windows Zero Config

Checkboxes	Functions
Show Tray Icon	To disable or enable to show the utility icon on your system tray, which is in the notification area at the lower-right corner of the windows desktop.
Radio Off	To disable or enable to prevent this adapter from transmitting or receiving signals.
Disable Adapter	To disable or enable the wireless adapter.
Windows Zero Config	To disable or enable to use the native Windows XP/Vista/7 wireless support (Wireless Zero Configuration Service).

General


After starting the utility, the general page pops up. This **General** tab provides the information of your current wireless network connection. You may click the **Renew IP** button to refresh those listed information.

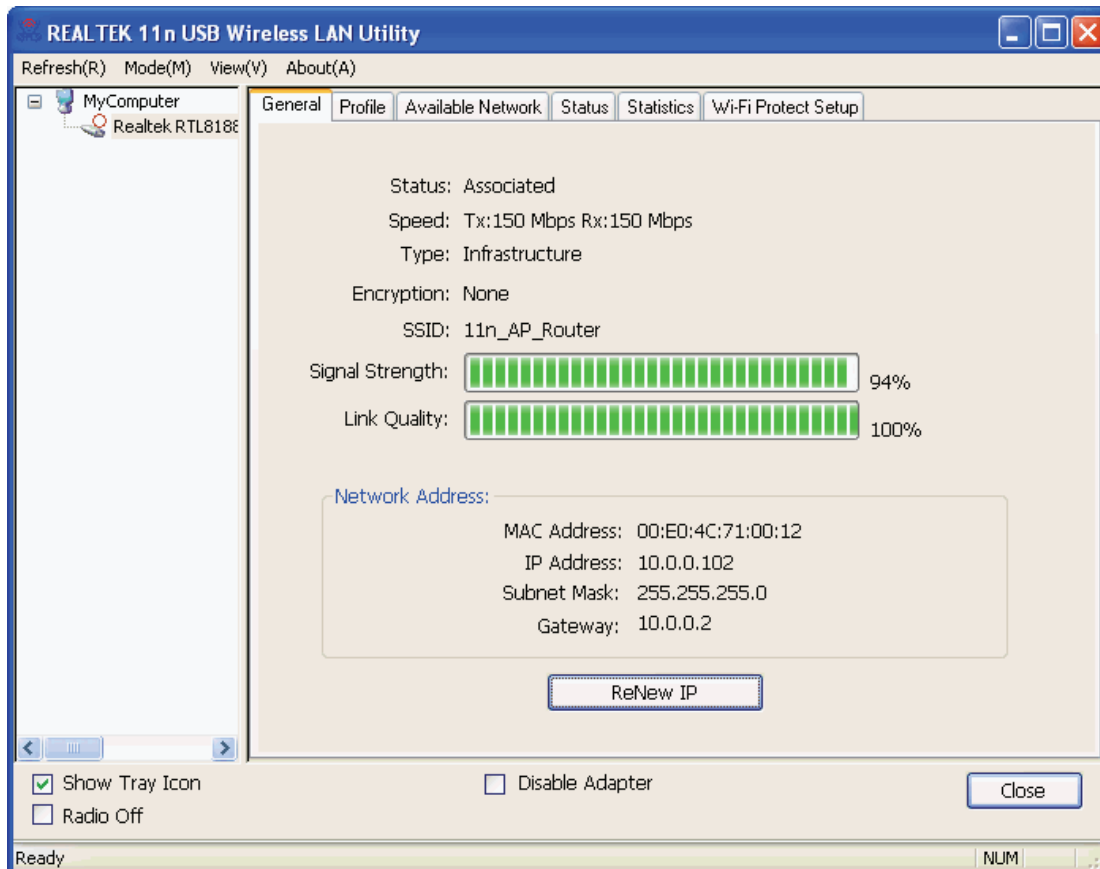

	Functions
Status	Check if the device associated to target network.
Speed	The current connection speed
Type	Infrastructure or Ad-Hoc mode.
Encryption	The encryption mode for connecting to current network profile.
SSID	The SSID (network name) of the connected wireless network.
Signal Strength	Indicates the signal strength.
Link Quality	Indicates the link quality.
Network Address	Shows the current IP addresses settings.

Profile


The **Profile** tab lists the preferred connections. You can click the buttons beside to do configure each connection.

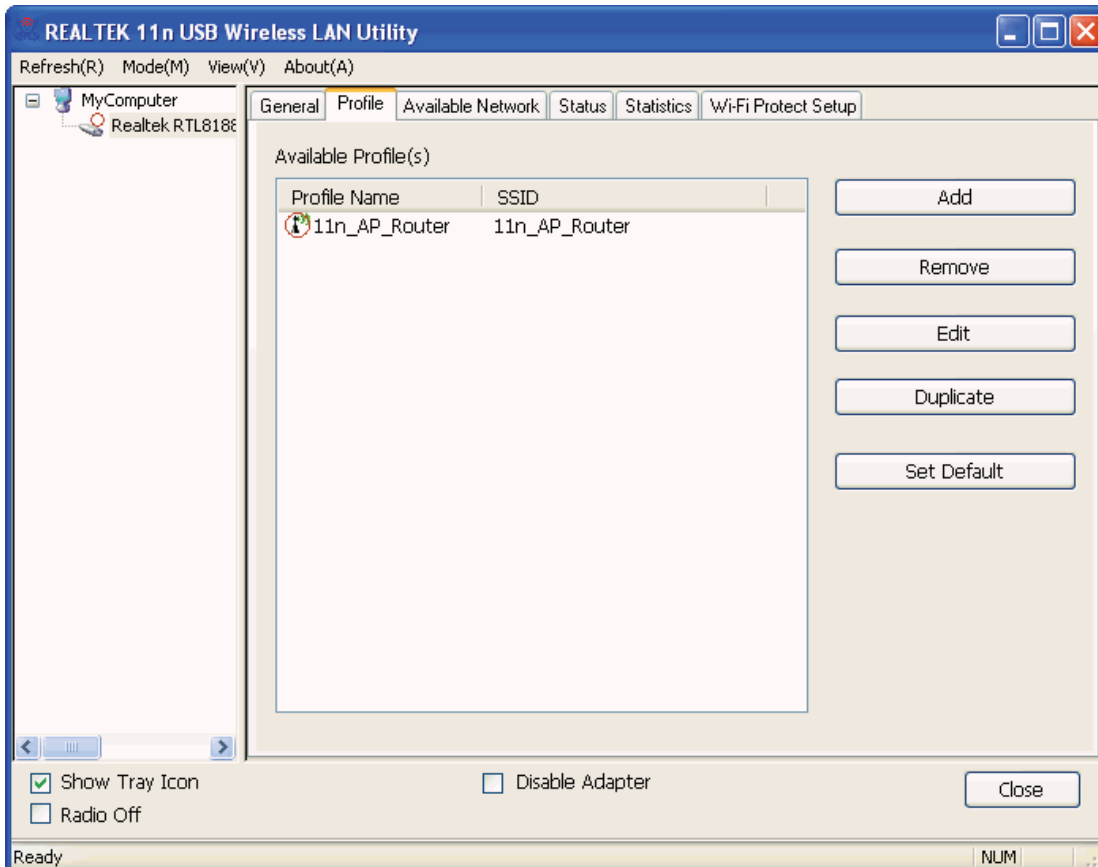

	Functions
Add	To add a connection profile.
Remove	To remove a connection profile.
Edit	To modify the configurations for a profile.
Duplicate	To make a copy of a profile.
Set Default	To select a profile as your default wireless connection.

Available Network


This **Available Network** tab lists the reachable wireless network.

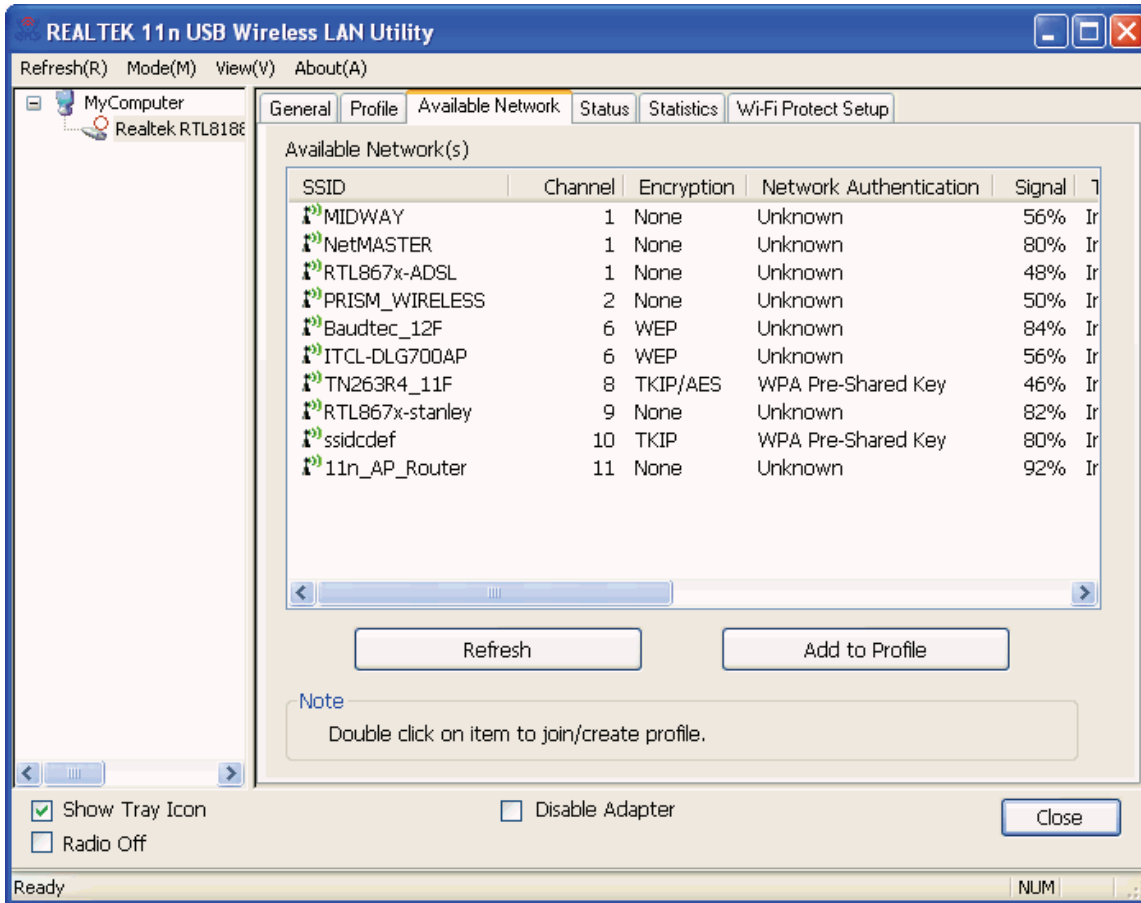

Functions	
Refresh	To rescan available Wireless Networks.
Add to Profile	To add an available Wireless Network to your profile list.


Status

The **Status** tab shows the current connection status.

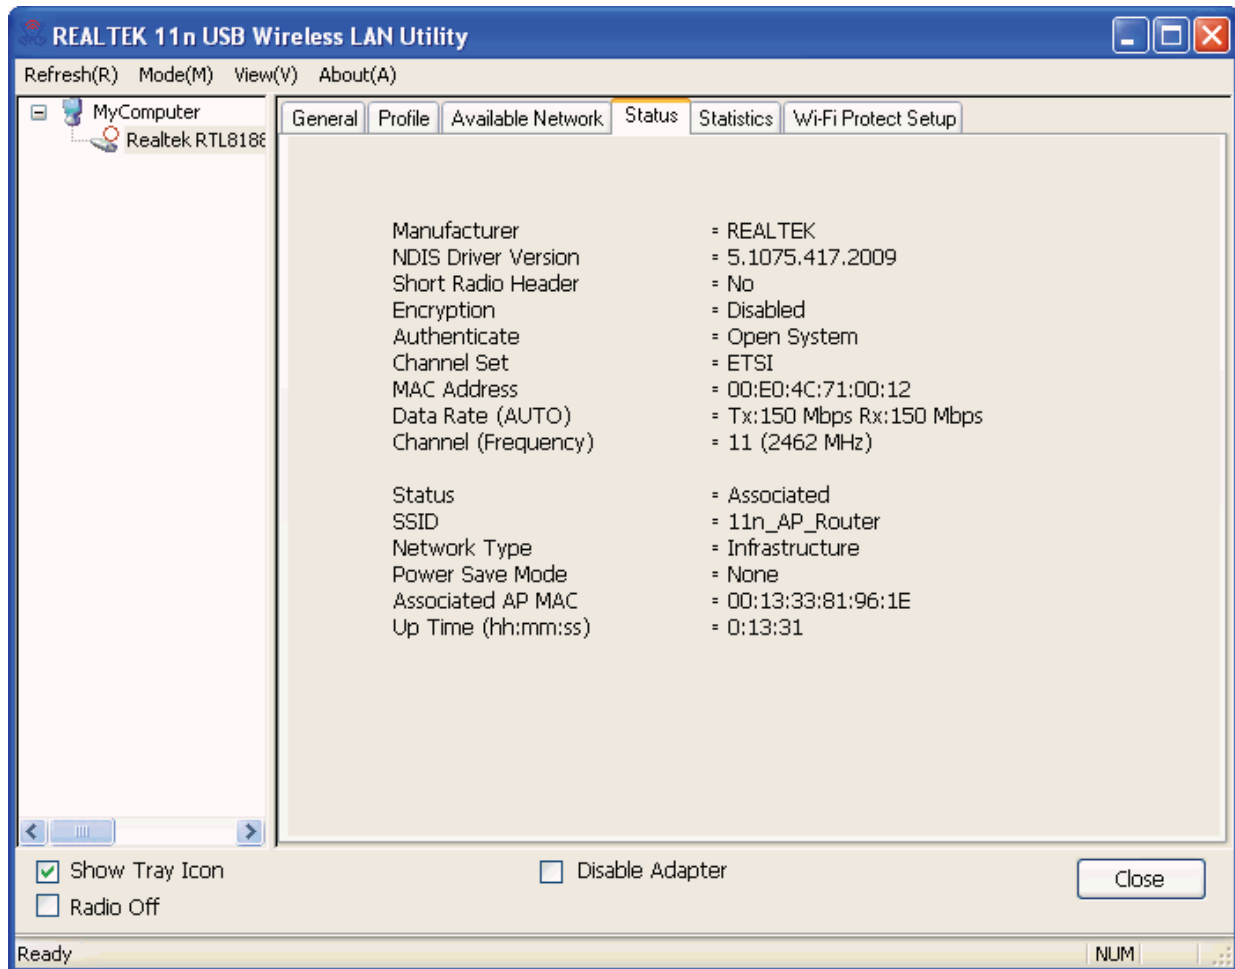


Statistics

The **Statistics** tab shows the transmission activity record. Clicking the " **Reset** " button recounts the values from zero.

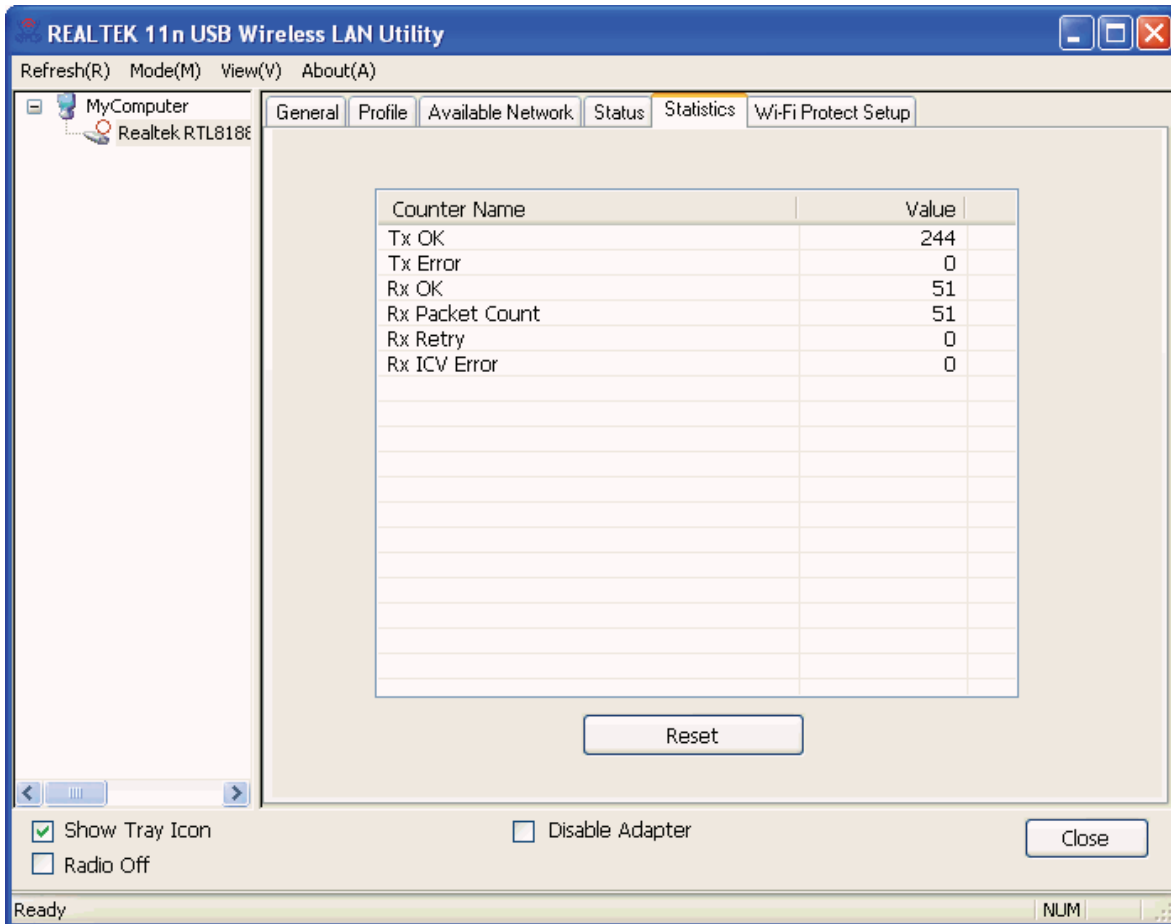

Wi-Fi Protected Setup (WPS)


An easy and secure setup solution for Wi-Fi network.

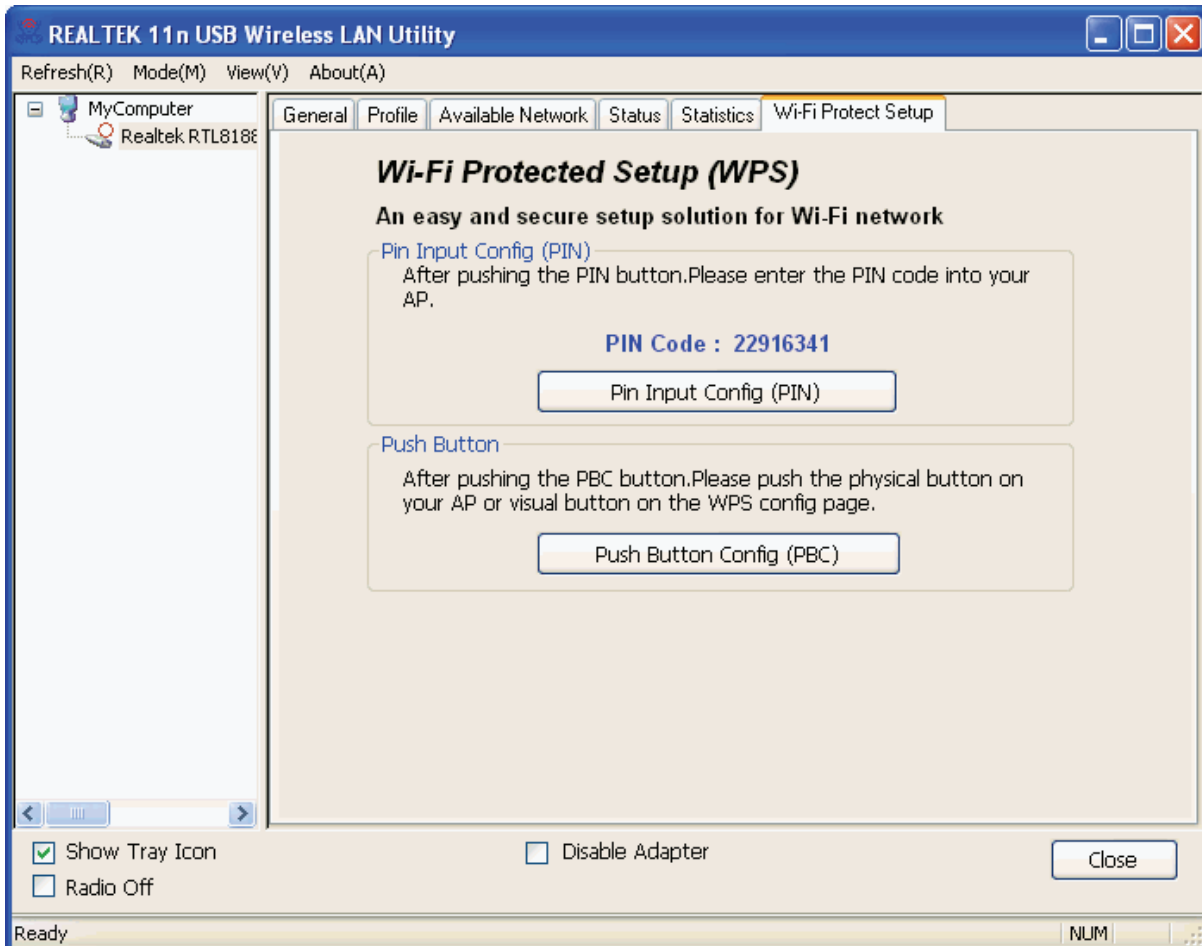


Push Button Config (PBC) Method

If both AP and users' Wireless LAN Utility has the physical button or visual button of Push Button Config (PBC), please follow steps below to complete the WPS.



Step 1:

Double click the  icon on your desktop to start the utility or  in the task bar and then click the " **Wi-Fi Protected Setup** " tab.

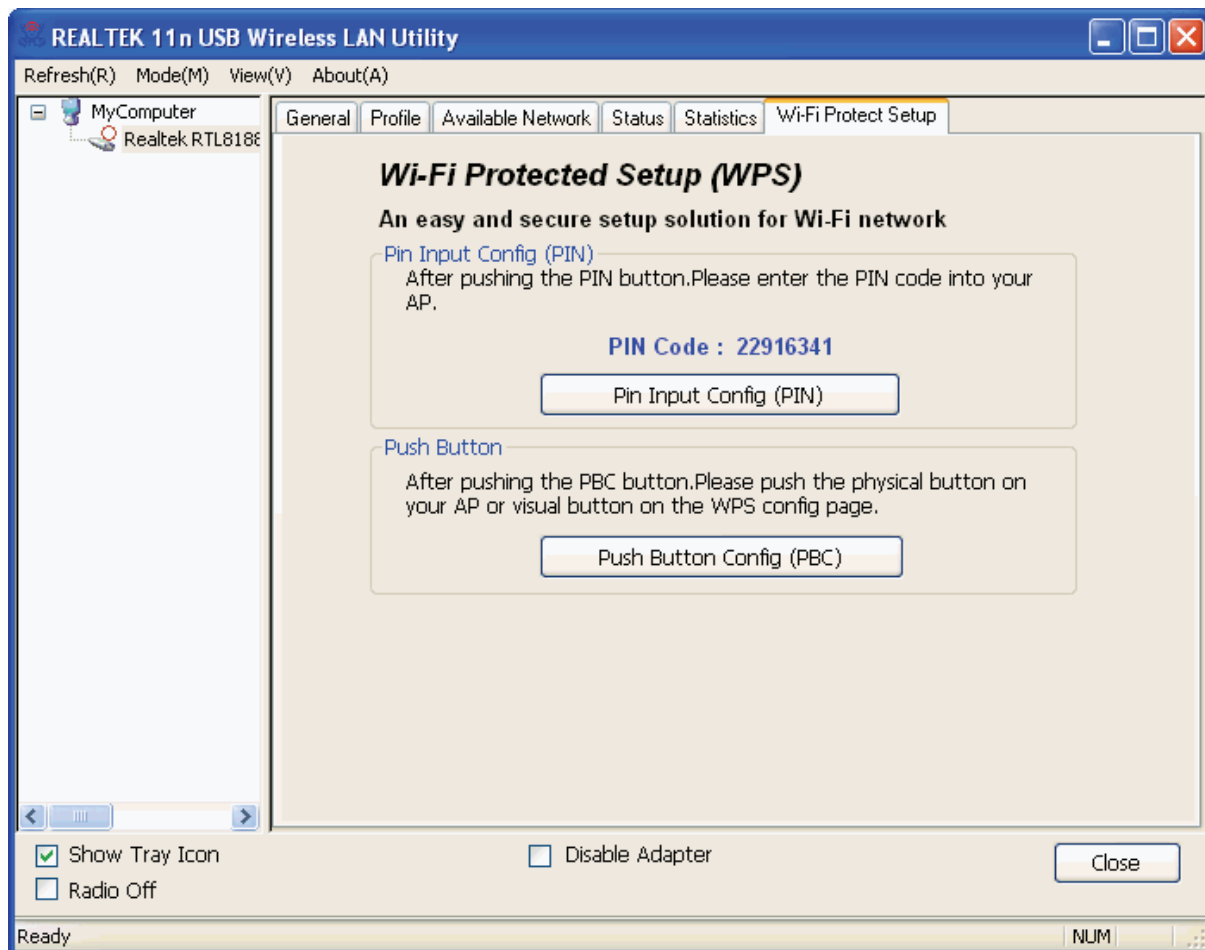


Step 2:

Click on " **Push Button Config (PBC)** " button.

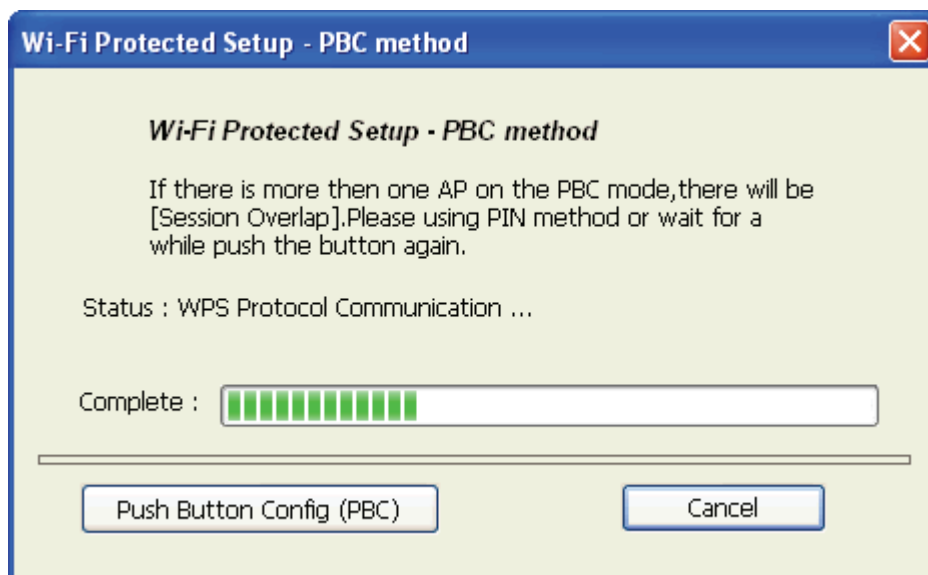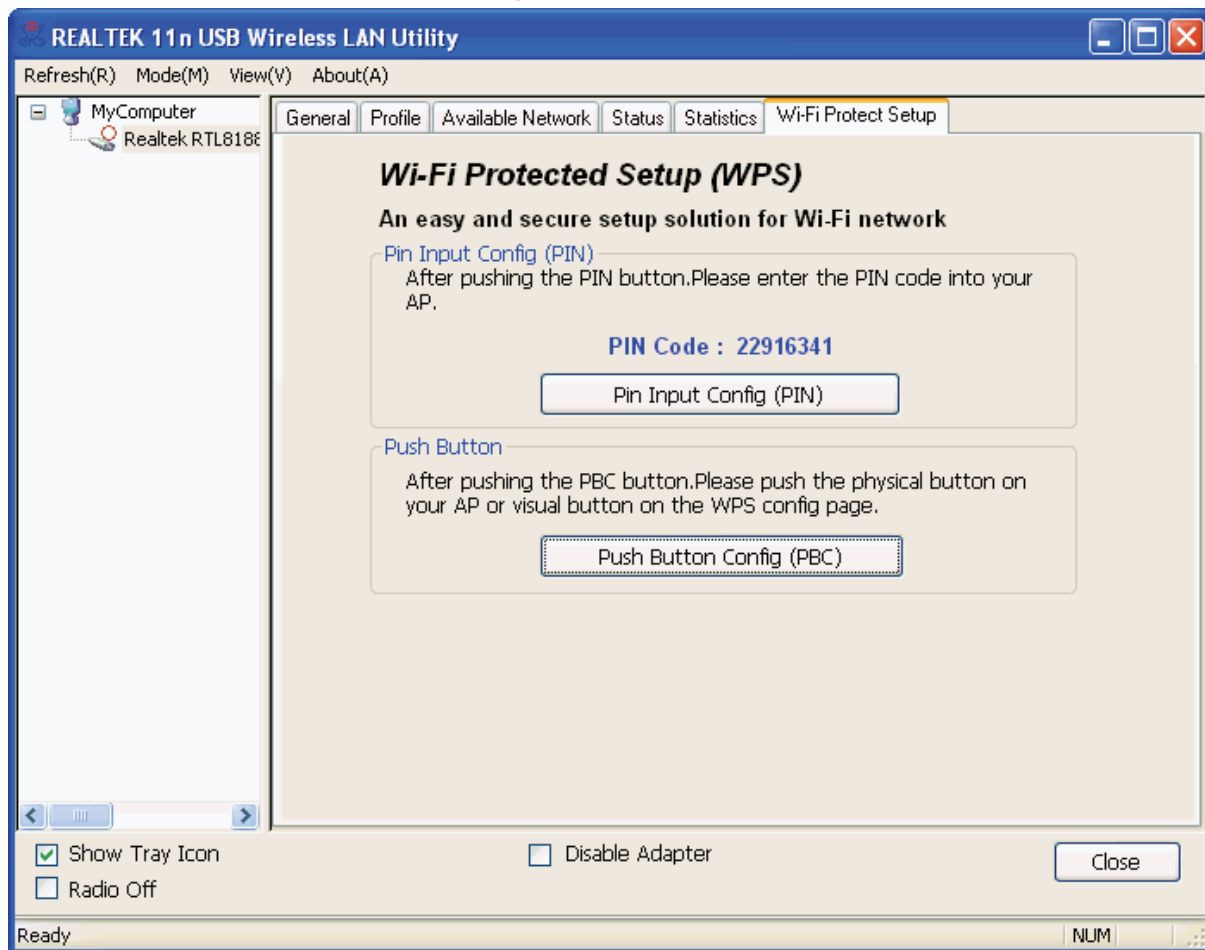

Step 3:

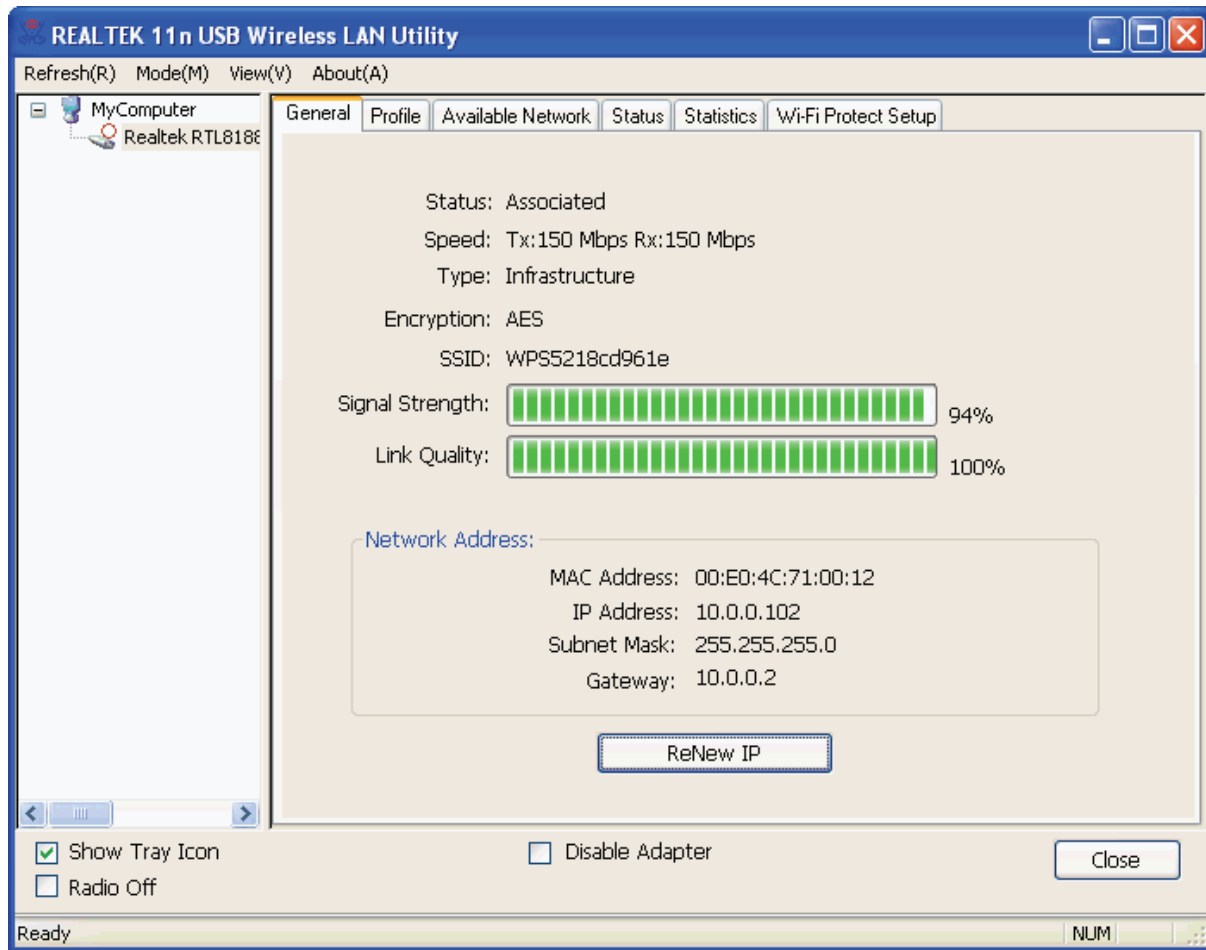

Now you are ready to use the Wireless Network to Internet or intranet.




PIN Method 2

If AP know users' PIN code and the PIN code is 81332342, please follow steps below to complete the WPS.


Step 1:

Double click the  icon on your desktop to start the utility or  in the task bar and then click the " **Wi-Fi Protected Setup** " tab.

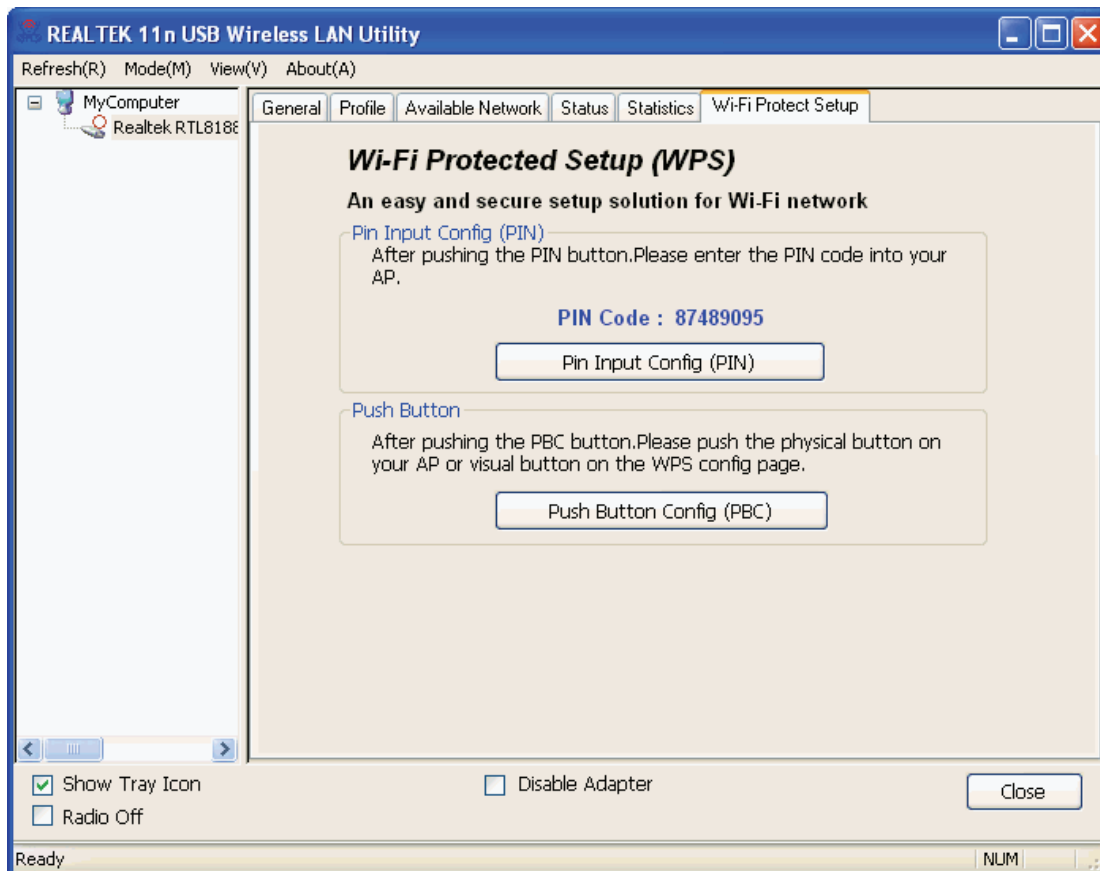


Step 2:

Click on " Pin Input Config (PIN) " button.

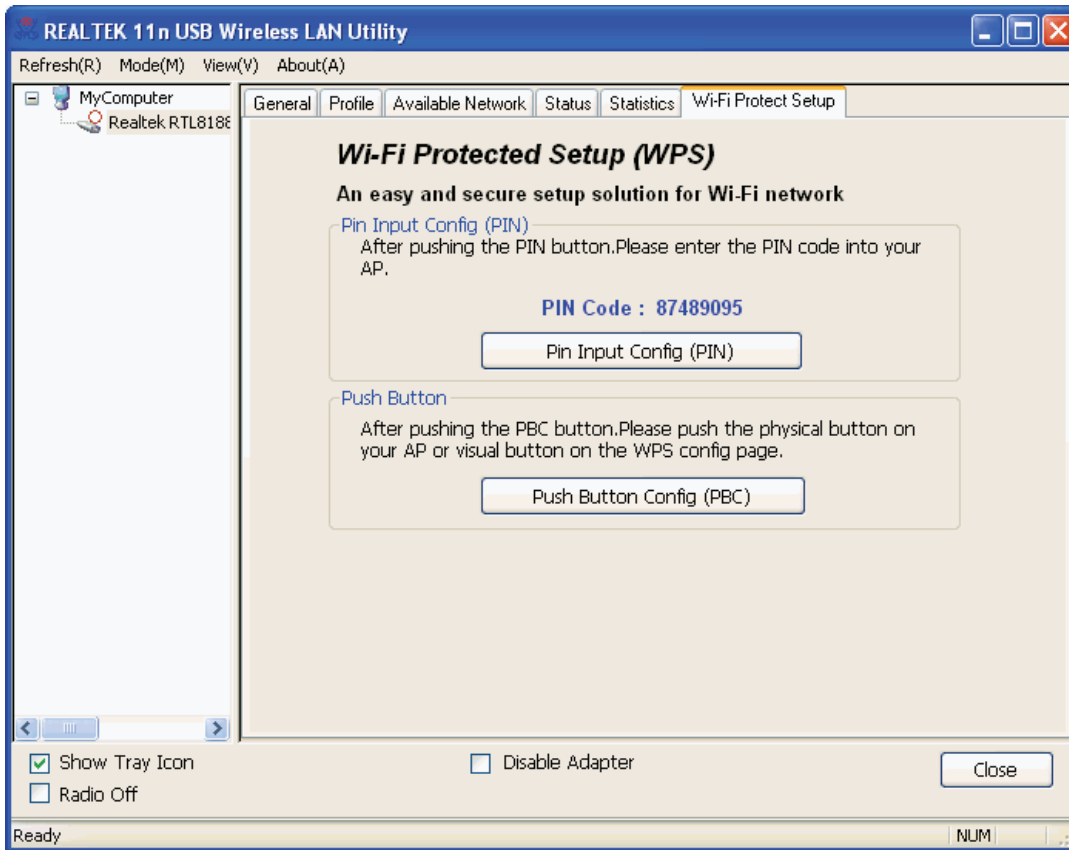


Step 3:

Click on " Yes " button.

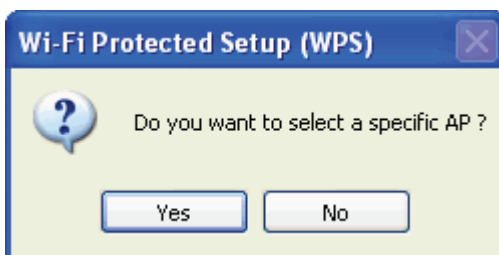


Step 4:

Select the desired WPS AP Name and then click on " **Select** " button.

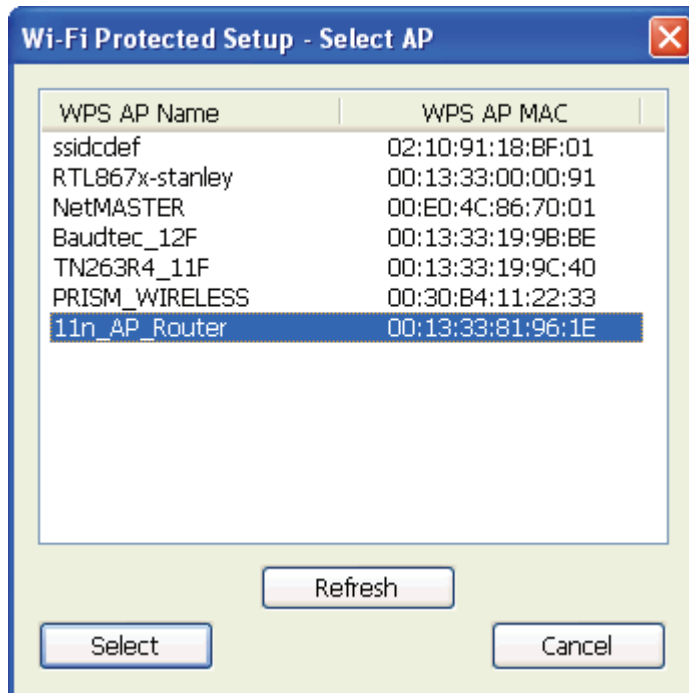


Step 5:

Please enter the PIN Code into your AP.

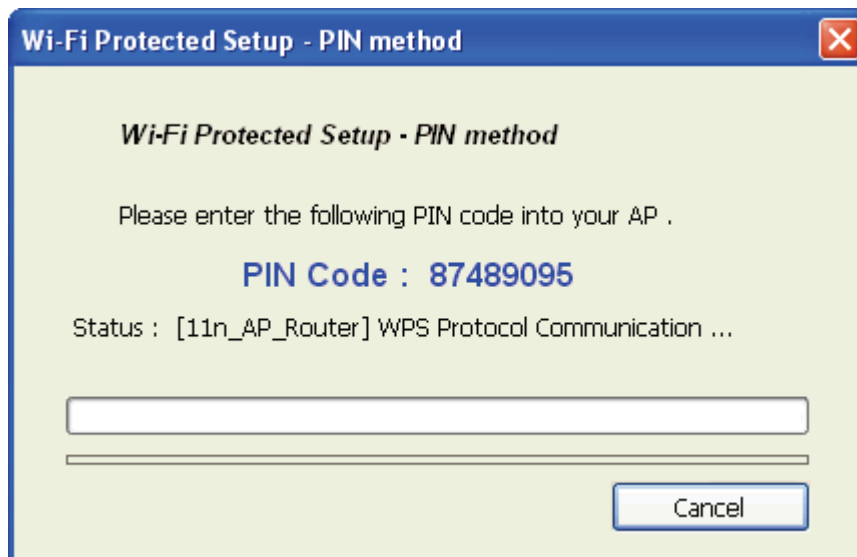

Step 6:


Now you are ready to use the Wireless Network to Internet or intranet.

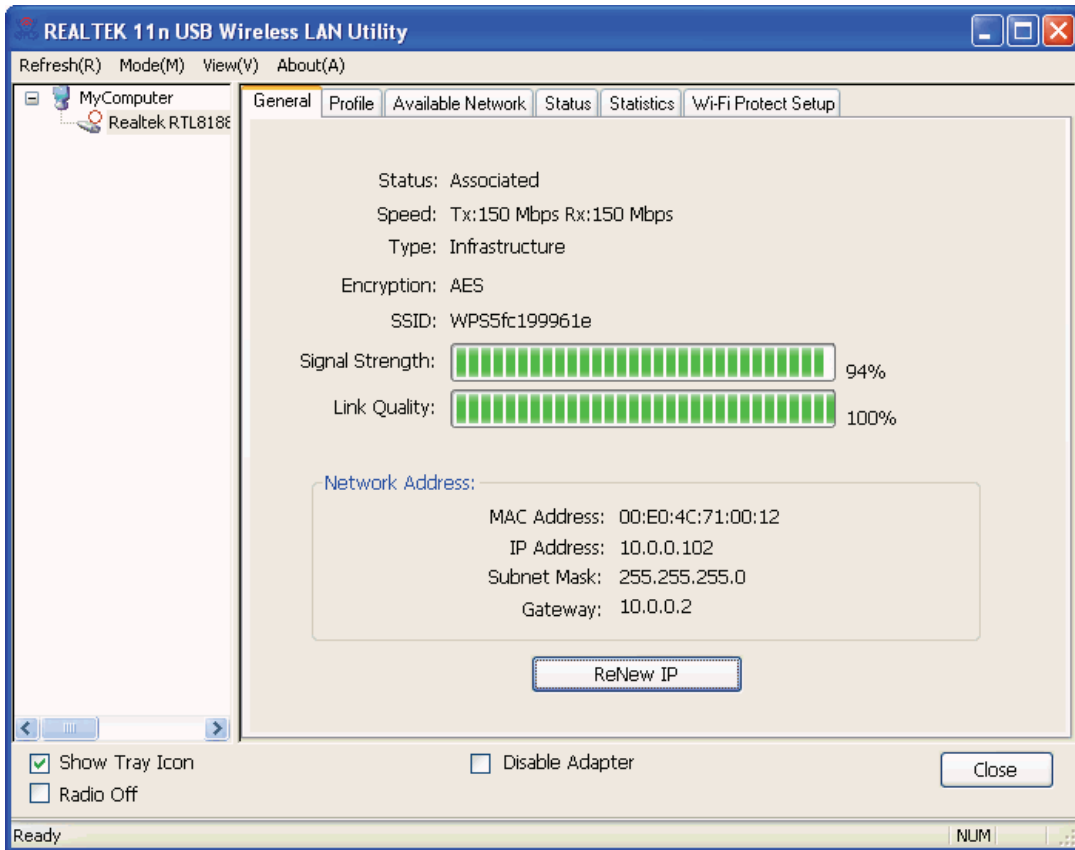

Uninstall


Step 1:

Click " **Start -> All Programs -> REALTEK 11n USB Wireless LAN Utility -> Uninstall** ".

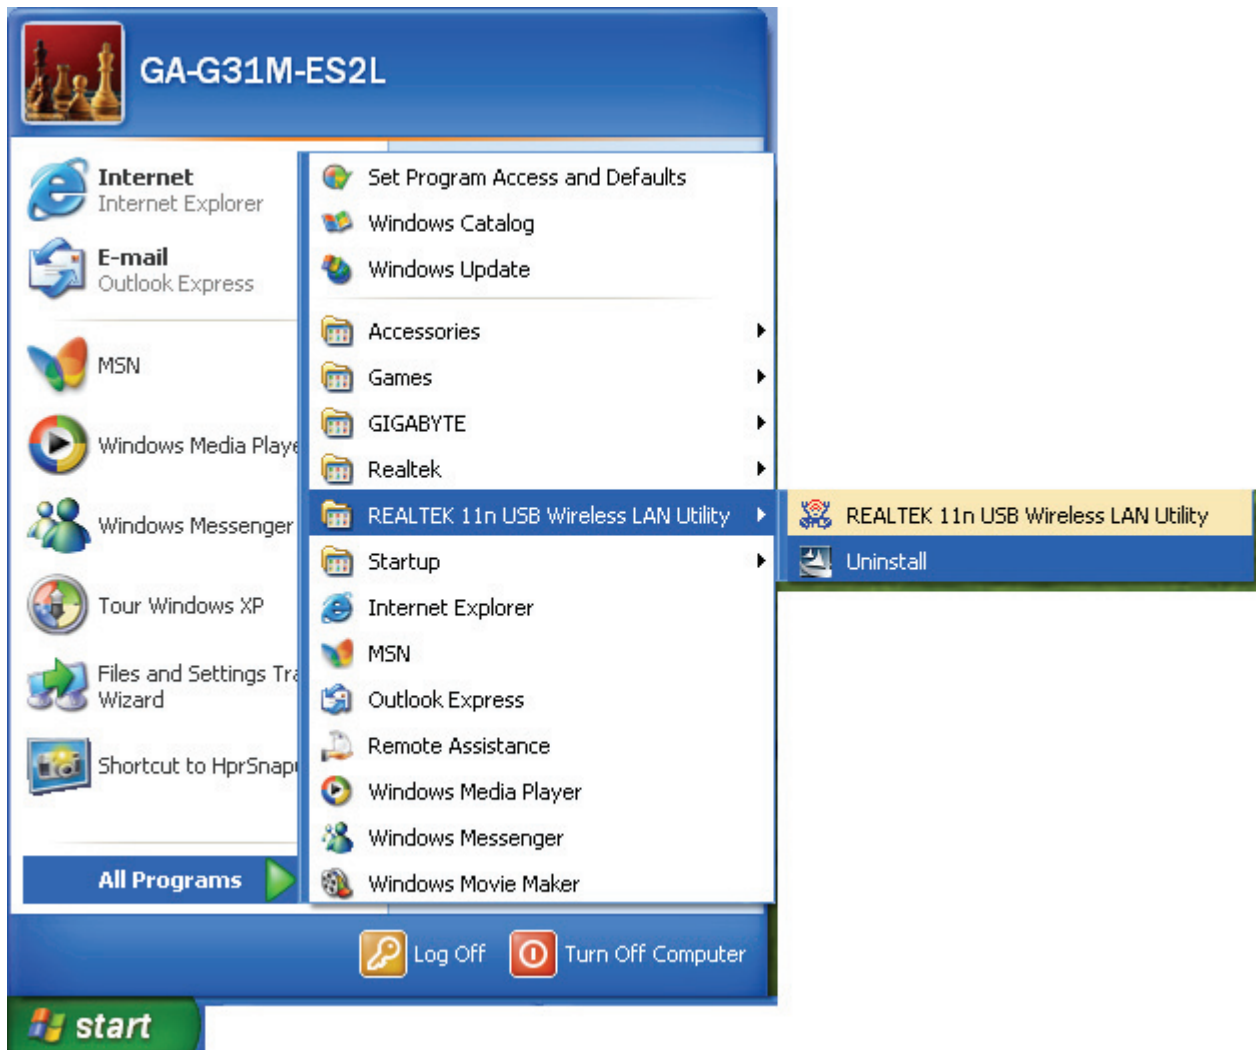


Step 2:

Click " **Yes** ".

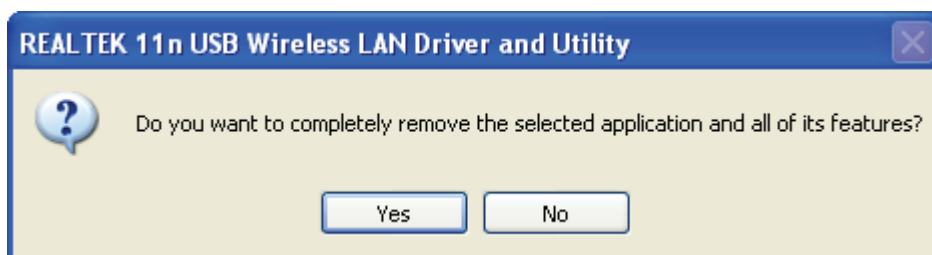

Step 3:


Click " **Finish** ".

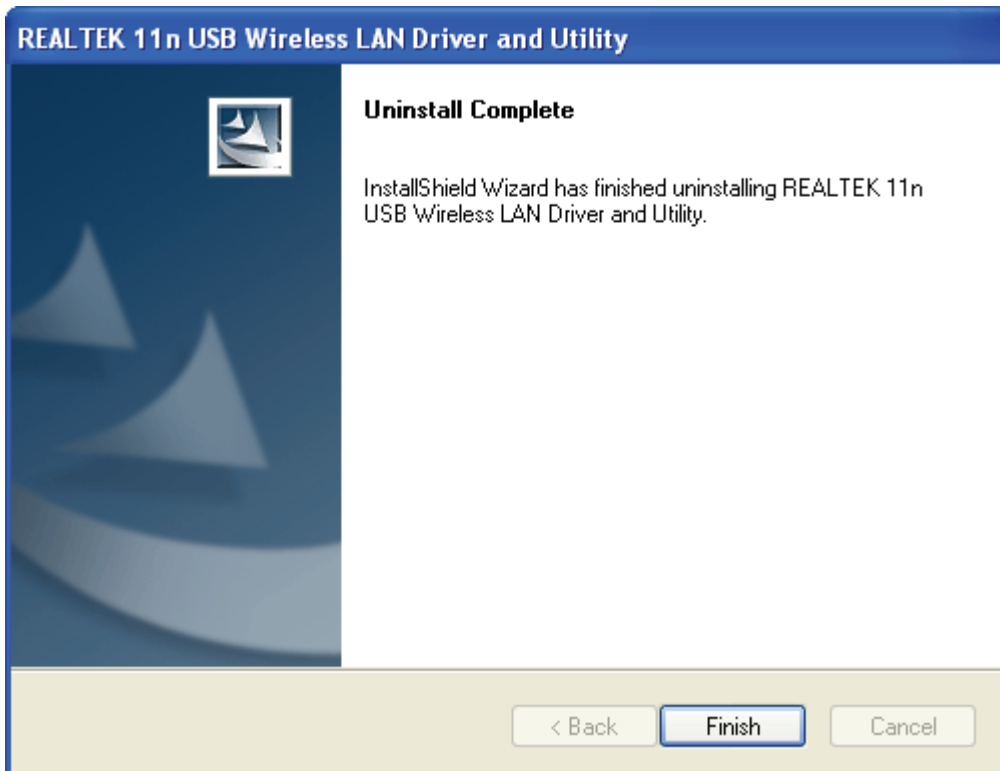

Troubleshooting

Session Overlap

If there is more than one AP on the PBC mode, there will be [Session Overlap]. Please use the PIN method or wait for a while and push the button again.

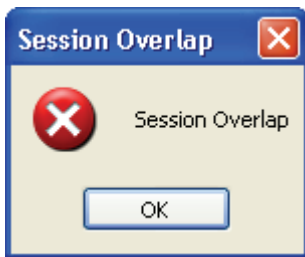

TimeOut!!

If you see the message below while doing WPS!! Please retry again!



NO REALTEK 11n USB Wireless LAN

If you see the message below, please plug in the **REALTEK 11n USB Wireless LAN** to the USB port of PC.



REALTEK 11n USB Wireless LAN is Disconnected

If you see the message below, please refer to the chapter **Making a Basic Wireless Network Connection** to make a Wireless Network Connection.



Cannot get IP Address from Wireless AP

If the Wireless LAN Utility cannot get any the real IP Address from AP, please click on **ReNew IP** button to request IP Address again or configure the static IP Address for **REALTEK 11n USB Wireless LAN**.

