



Milesight NVR

User Manual

V3.01



More in Sight

Installation Notes

Please be advised of the following tips before using your NVR:

- Keep all liquids away from the NVR.
- Place the NVR in a well-ventilated environment.
- Ensure NVR is running within the allowed humidity and operating temperature.
- It will lead to shorting when dust on the circuit board of NVR gets damp; please dedust regularly with banister brush regarding the circuit board, connector, chassis and chassis fan.
- Improper replacement of the battery may result in hazard of explosion. Direct replacement conducted by users is prohibited. Replace with the same or equivalent type only.

Note

The equipment mainly mentioned in this manual is MS-N1000/MS-N5000/MS-N7000 /MS-N8000 Series NVR, including:
MS-N1004/MS-N1008/MS-N5008/MS-N5016/MS-N7016/MS-N8016.

Content

1. Product Introduction	1
1.1 Introduction.....	1
1.2 Product Key Functions.....	1
2. Hardware.....	3
2.1 Panel Buttons and Lights Instructions.....	4
2.2 Using a USB Mouse.....	7
2.3 IR Remote Controller.....	8
3. Local Operation	10
3.1 Wizard Setting.....	10
3.2 Playback.....	12
3.2.1 Video Playback.....	12
3.2.2 Picture Playback.....	17
3.3 Camera Settings	20
3.3.1 Camera Management	20
3.3.2 Camera Search	27
3.3.3 PTZ Configuration	30
3.3.4 Privacy Mask.....	37
3.3.5 OSD configuration	38
3.4 Record Settings	40
3.4.1 Record Mode.....	41
3.4.2 Record Schedule Setting	42
3.4.2 Advanced settings.....	48
3.5 Event Settings	49
3.5.1 Video Loss.....	49
3.5.2 Motion Detection	53
3.5.3 Alarm Input	59
3.5.4 Alarm Output.....	62
3.5.4 Exception	63
3.6 Status.....	65
3.6.1 Device Information	65
3.6.2 Network Status	65
3.6.3 Camera Status	66
3.6.4 Disk Status	67
3.6.5 Event Status.....	67
3.7 Live View Settings	69
3.7.1 Live View.....	69
3.7.2 Layout Configuration	71
3.7.3 More Settings	72
3.8 System Settings	73
3.8.1 General Setting.....	73
3.8.2 Network Settings.....	74
3.8.3 Disk Management	81

3.8.4 Holiday Configuration	84
3.8.5 User Account Settings	85
3.8.6 Upgrade	88
3.8.7 Save/Load Configuration	90
3.8.8 Auto Maintenance	92
3.9 Shutdown	93
3.9.1 Logout	93
3.9.2 Reboot	93
3.9.3 Shutdown	93
3.9.4 Close.....	93
4. Service.....	94

1. Product Introduction

1.1 Introduction

Milesight NVR Series are positioned at management and storage application of HD video data, and own multi-disc management systems, front end HD device management system, HD video analysis system and high-capacity system for video. It adopts the technology of high flow capacity data network transmitting & transmission, with multi-channel video decoding, to achieve functions like intelligent management, safe storage, HD decoding etc.

1.2 Product Key Functions

Basic Information

- Milesight NVR Series including MS-N1000/MS-N5000/MS-N8000, can work with IP camera and connect with third party IP cameras which support ONVIF.

Monitoring

- Supports HDMI video output, can live view and play back separately.
- For HD HDMI display, maximum to 1920*1080P resolution.
- Supports 1/4/8/8_1/9 /16 screen live view, channel sequence is adjustable.
- Supports live view fast menu operating.
- Supports live view group switch, manual switch and automatic patrol, the interval of automatic sequence can be adjusted.
- Supports motion detection, video loss alert.
- Supports various PTZ protocols, PTZ preset, auto patrol and patrol pattern.
- Supports central zoom in by clicking the mouse at arbitrary area.
- Supports privacy mask
- Supports OSD title and date configuration

HDD Management

- Supports S.M.A.R.T technology.

Recording/Snapshot and Playback

- Support holiday's time.
- Support recycle and non-recycle recording mode.
- Support multiple recoding types, including timing, alarm, motion detection, motion or alarm, motion and alarm, etc.
- Support 12 recording time periods with separate recording types.
- Support pre-record and post-record time for motion detection or snapshot, alarm recording or snapshot, motion and alarm recording, motion or alarm recording. And supports pre-record for manual and timing.

- Supports local recording/snapshot.
- Supports digital zoom function at arbitrary area in playback.
- Supports video data playback.
- Supports pause, fast play, slow play, skip forward, and skip backward when playback, locating in progress bar by dragging the mouse.
- Supports snapshot manually.

Backup

- Supports USB port backup.
- Supports FAT32 format backup
- Supports backup device maintenance and management.

Alarm & Exception

- Supports video loss alarm.
- Supports motion detect configure and alarm
- Supports Network disconnected/HDD Full/Record Fail/HDD Error abnormal alarm
- Supports various alarm response such as audible warning, send email, camera motion detecting, on/off relay

Other Functions:

- Supports multi-level user management, administrator can create multiple users with access rights.
- Supports manual triggering and clearing of alarms.
- Supports operation of configured information import/export.

Network:

- Supports unicast and multicast, support TCP, UDP, and RTP for unicast.
- Supports remote search, playback and download of video files, support breakpoint resume.
- Supports remote acquiring and configuring of parameters, support remote import and export of device parameters.
- Supports P2P remote access.
- Supports remote acquiring of device status, system log and alarm status.
- Supports remote button operation.
- Supports remote operate system maintenance by format of hard disk, upgrade, and reboot, etc.
- Supports upload alarm and exceptions to remote host.
- Supports remote manual start or stop of recording.
- Supports remote manual start or stop of alarm output.
- Supports remote BMP image capturing.
- Supports remote PTZ control
- Built-in WEB Server

Model		MS-N1004/ MS-N1008	MS-N5008	MS-N5016	MS-N7016	MS-N8016
Video/Audio Input	Network Video Input	4/8	8	16	16	
	Bandwidth Requirement	20Mbps/40 Mbps	40Mbps	80Mbps	80Mbps	
	Audio Input	-	-	1*3.5mm	1*RCA	
Video/Audio Output	HDMI Output	1	1	1	1	
	VGA Output	-	-	-	1	
	Audio Output	-	-	1*3.5mm	1*RCA	
	Recording Resolution	3MP/1080P/UXGA/720P/VGA/D1/CIF/QCIF			5MP/3MP/1080P/UXGA/720P/V GA/D1/CIF/QCIF	
	Synchronous Playback	4/8	8	16	16	
Video/Audio Compression	video	H.264				
	Audio Compression	G.711 U-Law				
	Audio Bit Rate	8Kbps				
Storage	Drivers	2 SATA HDD (2.5’)	2 SATA HDD (3.5’)		4 SATA HDD (3.5’)	8 SATA HDD (3.5’)
	External Storage	-	-	-	1 eSATA	
	Capacity	Up to 2TB capacity for each HDD	Up to 4TB capacity for each HDD			
Recording Management	Recording	Manual recording, timer recording, motion detection recording, alarm recording, motion detection recording or alarm recording, motion detection recording and alarm recording				
	Snapshot	Manual Snapshot, Motion Detection Snapshot, Alarm Snapshot, Snapshot to Email				
	Playback	Video playback, Image playback				
Backup	Backup	Video backup/Image backup				
Network	Protocol	IPv4, HTTP, NTP, SMTP, PPPoE, DDNS				
External Interface	Network Interface	2 RJ45 100M/1000M			2 RJ45 100M/1000M	
	Serial Interface	-	-	-	1 RS-485 for PTZ	
		-	-	-	1 RS-232 for Console	
		-	-	-	1 RS-485 for Keyboard	
	USB Interface	2 USB 2.0			4 USB 2.0	
	Alarm Input	-	-	4	16	
	Alarm Output	-	-	2	4	
Power Supply	DC12V 1.5A	DC12V 5A		AC 100-240V 47Hz-63Hz		

2. Hardware

2.1 Panel Buttons and Lights Instructions

(1) MS-N1000 Series: MS-N1004/MS-N1008




(2) MS-N5000 Series: MS-N5008/MS-N5016



NO.	Item	Description
1	POWER	Powers NVR on/off.
2	USB Ports	USB ports for additional devices such as USB mouse, USB flash drive and USB HDD.
3	IR Receiver	Receiver for IR signal.

(3) MS-N8000 Series: MS-N8016

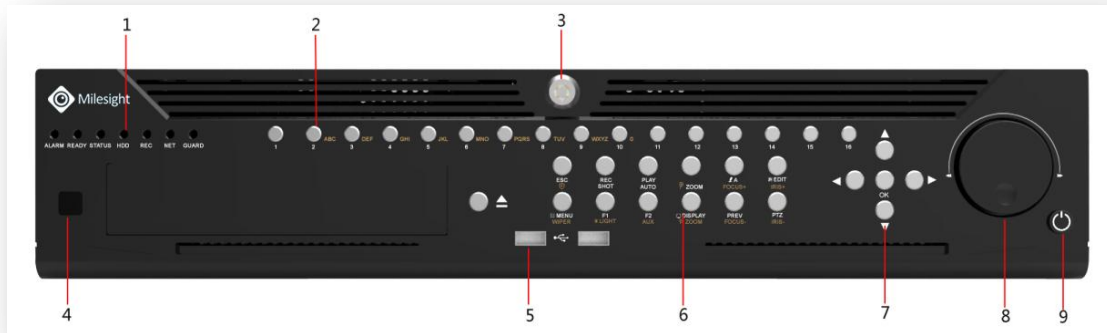

1	Alarm	Alarms indicator turns red when switching value is detected.
	Ready	Ready indicator turns red in process of boot; indicator turns green when NVR is in normal operation.
	Status	Status indicator turns green when NVR is controlled by a remote controller, indicator turns red when controlled by a keyboard and turns orange when remote controller and keyboard are used at the same time.
	HDD	HDD indicator turns red when data is being read or written.
	Recording	Recording indicator turns red when NVR is being recorded.
	Network	Network indicator turns to green when network connection is normal.
	Guard	Guard indicator turns green when the device is armed, turns off when the device is unarmed. The arm/disarm state can be switch by pressing and holding on ESC button for more than 3 seconds.
2	Alphanumeric Buttons	(1)Alphanumeric buttons are used to switch the corresponding channel in live view or PTZ Control mode. (2)Alphanumeric buttons are used to input numbers and characters in edit mode.
3	Control Panel Locker	Control panel can be locked or unlocked by the dedicated key.
4	IR Receiver	Receiver for IR signal.
5	USB Ports	USB ports for additional devices such as USB mouse, USB


		flash drive and USB HDD.
6	ESC	<ol style="list-style-type: none"> (1) ESC button is used to return to previous menu (2) To disarm the NVR by pressing and holding more than 3 seconds in live view mode.
	REC/SHOT	<ol style="list-style-type: none"> (1) The REC/SHOT button is used to enter recording configuration interface. (2) When controlling a PTZ, press the REC/SHOT Button to invoke preset positions. (3) Open and close sound system when playback.
	PLAY BACK/AUTO	<ol style="list-style-type: none"> (1) Enter the playback interface. (2) Auto scan when in PTZ control.
	ZOOM	Zoom control when in PTZ control.
	A/focus+	<ol style="list-style-type: none"> (1) Switch the input methods including figure, letters and symbols. (2) Auto scan when in PTZ control.
	EDIT/IRIS+	<ol style="list-style-type: none"> (1) Used to enter the edit state. (2) Delete the character in front of the cursor. (3) Open up the IRIS of the camera when in PTZ state.
	MENU	<ol style="list-style-type: none"> (1) Enter the main menu interface. (2) Display/cover playback toolbar when in playback state. (3) Open/close the sound of front panel by pressing and holding more than 3 seconds.
	F1/Light	<ol style="list-style-type: none"> (1) Select all items on the list. (2) Control light status when in PTZ control. (3) Switch to playback or sequence play in playback state.
	F2/AUX	The F2/AUX button is used to switch menu attribute page.
	MAIN/SPOT/ZOOM-	<ol style="list-style-type: none"> (1) Switch between main and spot output. (2) To zoom the camera in PTZ mode.
	Multi-frame/Focus-	<ol style="list-style-type: none"> (1) Used to switch between single screen and multi screen mode. (2) Adjust the focus in PTZ mode.
	PTZ/IRIS-	<ol style="list-style-type: none"> (1) Enter the PTZ control interface. (2) Control IRIS of camera in PTZ control
7	Direction	<ol style="list-style-type: none"> (1) Move the active selection in a menu, select menu items setting. (2) Up/down button stands for single frame fast forward/playback, left/right button stands for speed up/slow down the video. (3) Switch live view channel or screen in live view mode. (4) Move the PTZ when in PTZ control.
	Enter	<ol style="list-style-type: none"> (1) Confirm selection in menu modes. (2) Switch to tick checkbox and ON/OFF. (3) In playback mode, can be used to play or pause the

		video. (4) In cruise mode, press to pause/restart the cruise.
8	JOG SHUTTLE Control	(1) In menu mode, it can move active bar of the menu up and down. (2) Switch the live view channel or screen in live view mode. (3) Move the PTZ up and down in PTZ control.
9	POWER	Powers NVR on/off.

2.2 Using a USB Mouse

Item	Click	Description
Left Button	Single- click	Live view: select the channel and show the live view fast menu interface. Menu: select and confirm.
	Double-click	Switch between single screen to multi-screen when in live view mode and playback mode.
	Click and drag	(1) Control rotation direction in PTZ mode. (2) Set the target area in tamper-proof, motion detection and privacy mask alarm settings. (3) Drag the digital zoom area. (4) Drag the channel and the time scroll bar.
Right Button	Single-click	Live view: shows pop-up menu. Menu: escape and go to previous menu.
Scroll- wheel	Scroll up	Scroll up the page.
	Scroll down	Scroll down the page.

2.3 IR Remote Controller

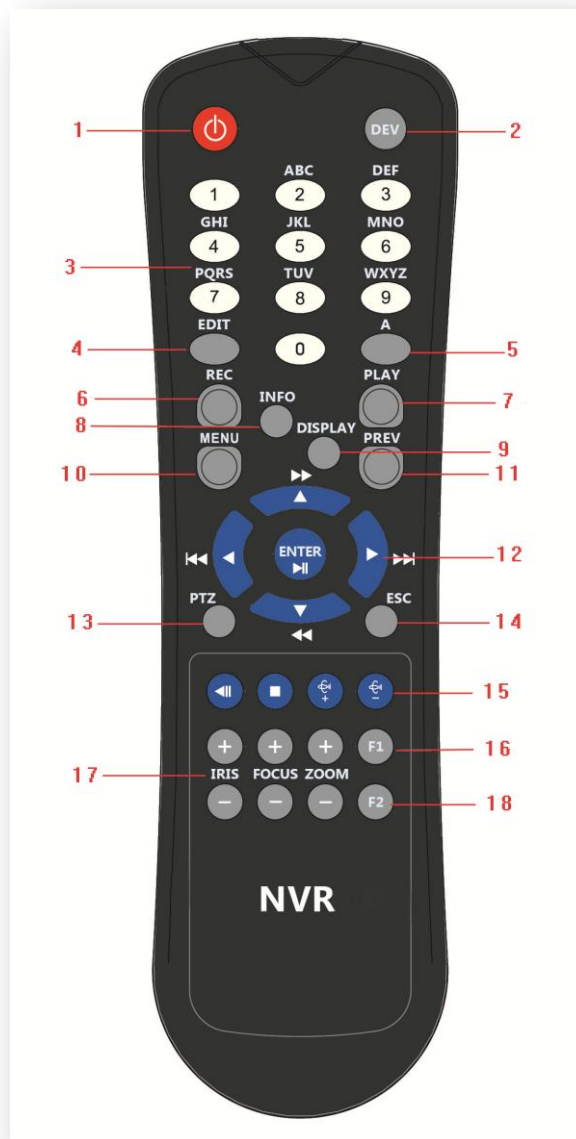

F-2.1

NO	Name	Description
1	POWER	Power on/off the NVR
2	DEV	Enables/disables remote control
3	ABC/123	(1)Alphanumeric buttons are used to switch the corresponding channel in live view or PTZ Control mode. (2)Alphanumeric buttons are used to input numbers and characters in edit mode.
4	EDIT	(1)Used to enter the edit state. (2>Delete the character in front of the cursor.

		(3) Open up the IRIS of the camera when in PTZ state.
5	A	(1)Switch the input methods including figure, letters and symbols. (2) Auto scan when in PTZ control.
6	REC	(1)The REC/SHOT button is used to enter recording configuration interface. (2)When controlling a PTZ, press the REC/SHOT Button to invoke preset positions. (3)Open and close sound system when playback.
7	PLAY	(1)Enter the playback interface. (2)Auto scan when in PTZ control.
8	INFO	Zoom control when in PTZ control.
9	DISPLAY	(1)Switch between main and spot output. (2)To zoom the camera in PTZ mode.
10	MENU	(1)Enter the main menu interface. (2)Display/cover playback toolbar when in playback state. (3)Open/close the sound of front panel by pressing and holding more than 3 seconds.
11	PREV	(1)Used to switch between single screen and multiscreen mode. (2)Adjust the focus in PTZ mode.
12	DIRECTION/ ENTER	(1)Move the active selection in a menu, select menu items setting. (2)Up/down button stands for single frame fast forward/playback, left/right button stands for speed up/slow down the video. (3)Switch live view channel or screen in live view mode. (4)Move the PTZ when in PTZ control.
13	PTZ	(1)Confirm selection in menu modes. (2)Switch to tick checkbox and ON/OFF. (3)In playback mode, can be used to play or pause the video. (4)In cruise mode, press to pause/restart the cruise.
14	ESC	Same as ESC button on front panel
15	RESERVED	Reserve the settings
16	F1	(1)Select all items on the list. (2)Control light status when in PTZ control. (3)Switch to playback or sequence play in playback state
17	PTZ CONTROL	To adjust the iris, focus and zoom of a PTZ camera.
18	F2	The F2 button is used to switch menu attribute page.

3. Local Operation


3.1 Wizard Setting

By default, the Setup Wizard will start once the NVR has loaded. The Setup Wizard will guide you complete some important settings to make sure the device function well. You can choose if you will enable wizard when device starts.

Please complete the configuration as following:

Step1. Input the username and password (Default username is 'admin' and password is '123456')

If you want to modify the admin password, input the new password.

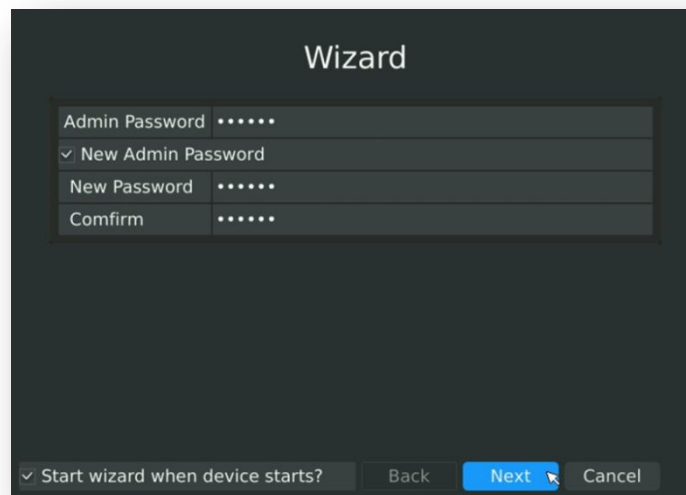

Wizard


Admin Password	*****
<input checked="" type="checkbox"/> New Admin Password	
New Password	*****
Comfirm	*****

Start wizard when device starts? Back Next Cancel

F-3.1.1

Step2. Date and time setting

Select the Time Zone and Date Format or you can set date and time manually.

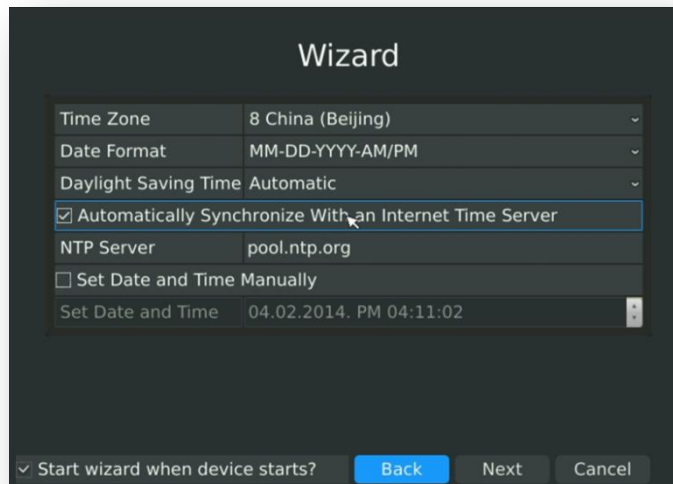

Wizard


Time Zone	8 China (Beijing)
Date Format	MM-DD-YYYY-AM/PM
Daylight Saving Time	Automatic
<input checked="" type="checkbox"/> Automatically Synchronize With an Internet Time Server	
NTP Server	pool.ntp.org
<input type="checkbox"/> Set Date and Time Manually	
Set Date and Time	04.02.2014, PM 04:11:02

Start wizard when device starts?
 Back
Next
Cancel

F-3.1.2

Step3. Network setting

Input the IP Address, Subnet Mask, Gate Way and Preferred DNS Server.

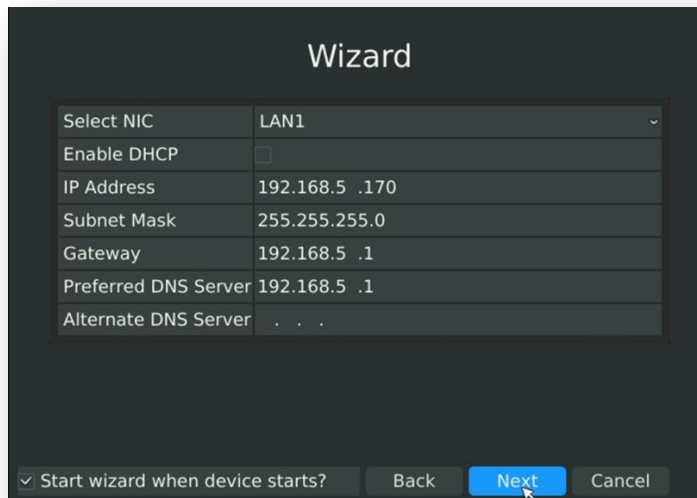

Wizard


Select NIC	LAN1
Enable DHCP	<input type="checkbox"/>
IP Address	192.168.5 .170
Subnet Mask	255.255.255.0
Gateway	192.168.5 .1
Preferred DNS Server	192.168.5 .1
Alternate DNS Server	. . .

Start wizard when device starts?
 Back
Next
Cancel

F-3.1.3

Step4. Login

Input the username and password.

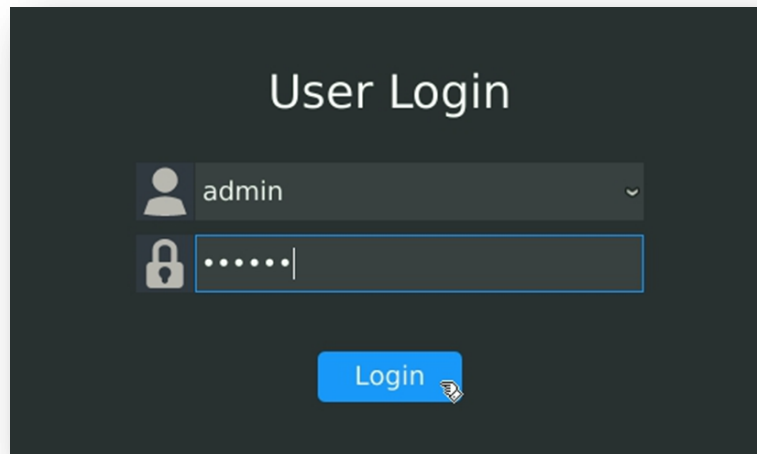


F-3.1.4


3.2 Playback

To play and backup the recorded files in specified time period.

3.2.1 Video Playback


It can support playback according to recorded time. Play recorded files in specified time period; synchronous playback of multi channels is supported.


Step1. Enter Video Playback Interface shown in F-3.2.1 by clicking Main menu→Playback
→

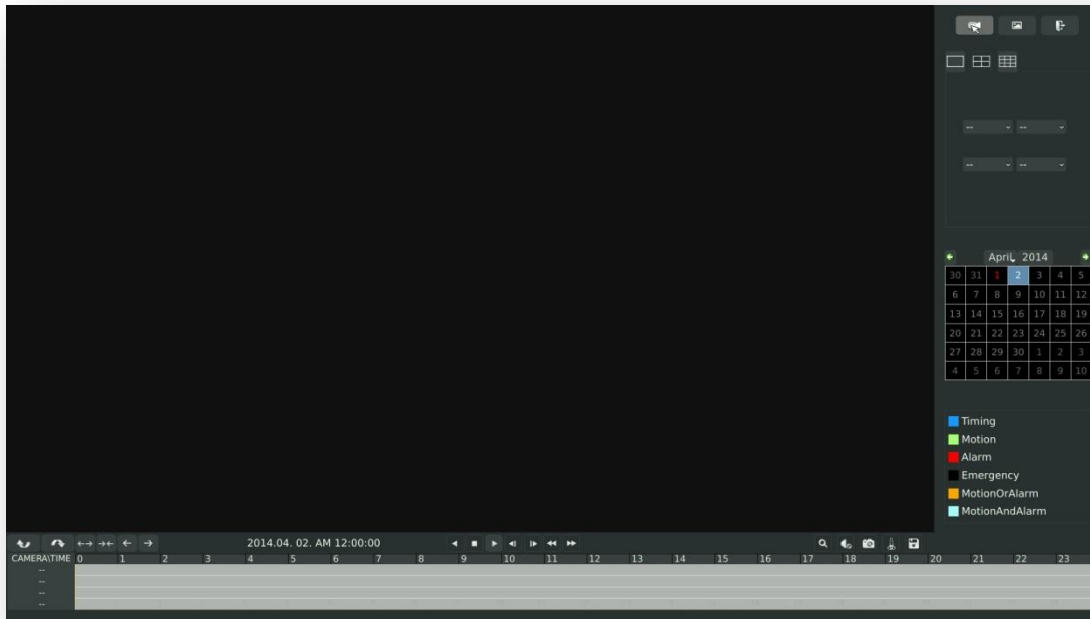

F-3.2.1

Step2. Select a desired channel and date

Select playback layout and channel. Click the date in red when there are recorded files of the selected channels, the record type with recording data will be show as below, and then click  to playback.

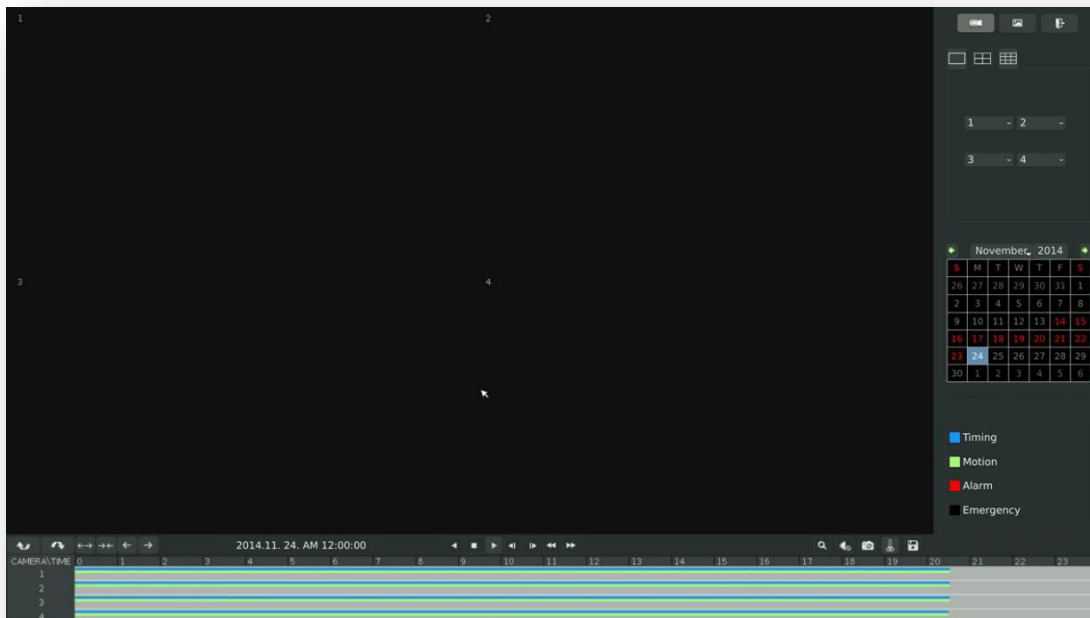

F-3.2.2

Note:

- 1. The day in red has recording files; please select the date in red to playback.**
- 2. 16 channels can be selected to playback synchronously.**























Video Playback Tool Bar Description



The tool bar can display multi-event record. It shows that **in this record period** what kind of event has happened. The symbolic meaning of each color is as showed bellow:

Blue—Timing Green --- Motion
 Red --- Alarm Black --- Emergency


And take this bar above for example, it means in this recording period there are motion and timing event which have triggered.

Button	Description	Button	Description	Button	Description	Button	Description
	Rewind		Stop		Play		Pause
	Reverse Step		Forward Step		Fast Backward		Fast Forward
	Previous 4 Cams		Next 4 Cams		Timeline Backward		Timeline Forward
	Timeline Zoom In		Timeline Zoom Out		Timeline		Playback Position
	Timeline Cutting		Timeline Cut Off		Audio On		Audio Off
	Snapshot		Backup				

3.2.1.1 Video Files Backup

Regular recorded files can be backed up by various devices, such as USB flash drives (USB flash disk, USB HDDs, USB writer), CD/DVD writer and eSATA, etc.

Satep1. Enter video playback interface by clicking Main menu → Playback → 

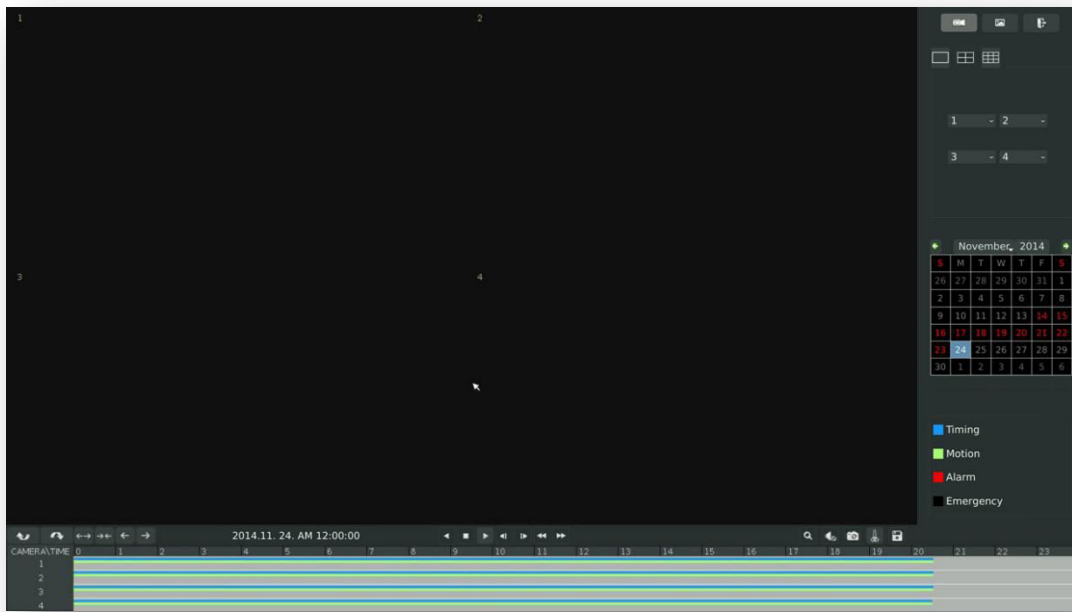


F-3.2.3

Step2.Select Recorded files for Backup


Select the channel and date you want to backup, then select the start time at time line and click

, it will change into  which means cut begins.

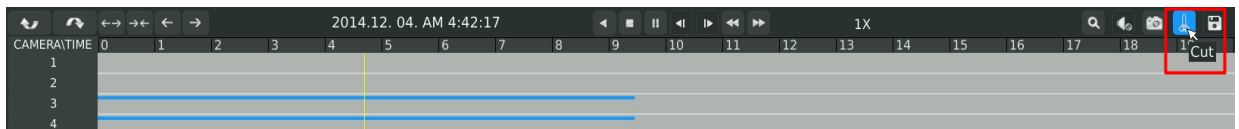


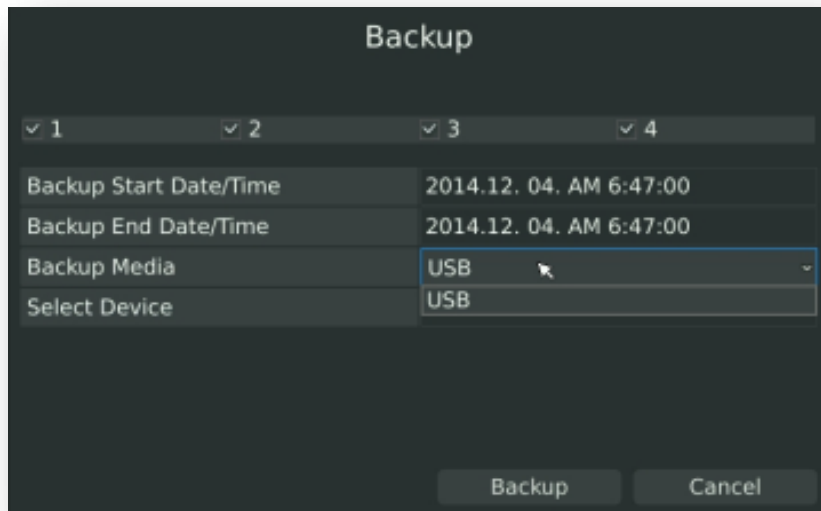
F-3.2.4

Select the end time at time line and click , it will change into , which means cut ends.

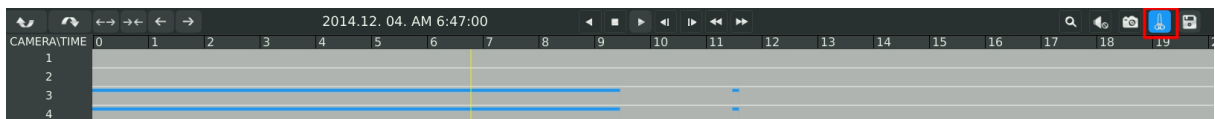


F-3.2.5

Step3. Click  enters to backup interface, select Backup media and click [Backup].




F-3.2.6

Step4. The pop-up window will prompt: Please wait...

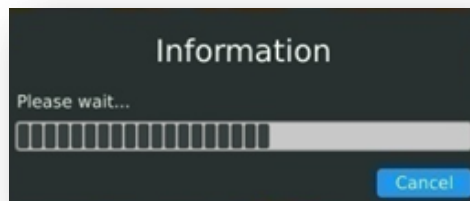

F-3.2.7

Step5. When all backup files have been exported, 'Backup Success' will be prompted.

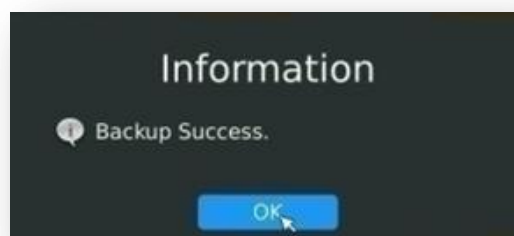


F-3.2.8

3.2.2 Picture Playback

Search and look for the snapshot files saved in HDD.



Step1. Enter Picture Playback Interface by clicking Main menu→Playback→ 

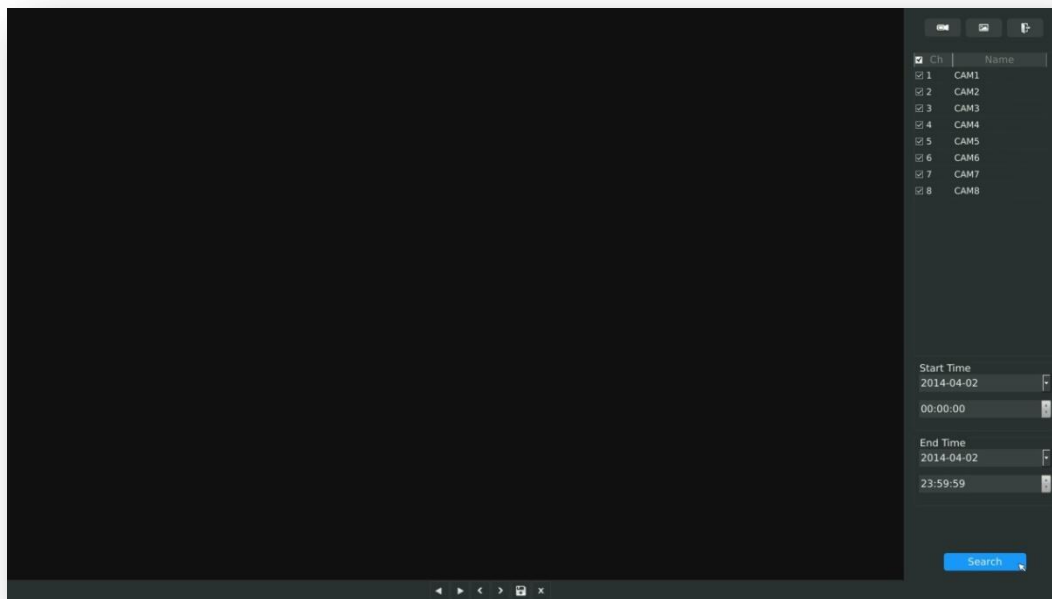Select a desired channel, start time and end time, click [Search]



F-3.2.9

Step2. Enter Picture Info List, Look up the Pictures.

Click  to play the desired pictures. Or click  to auto play the picture.



F-3.2.10


Picture Playback Tool Bar Description



Button	Description	Button	Description	Button	Description	Button	Description
	Backward Play		Play		Previous Picture		Next Picture
	Backup pictures		Close				


3.2.2.1 Picture Files Backup

Step1: Select pictures you want to backup in picture playback interface.

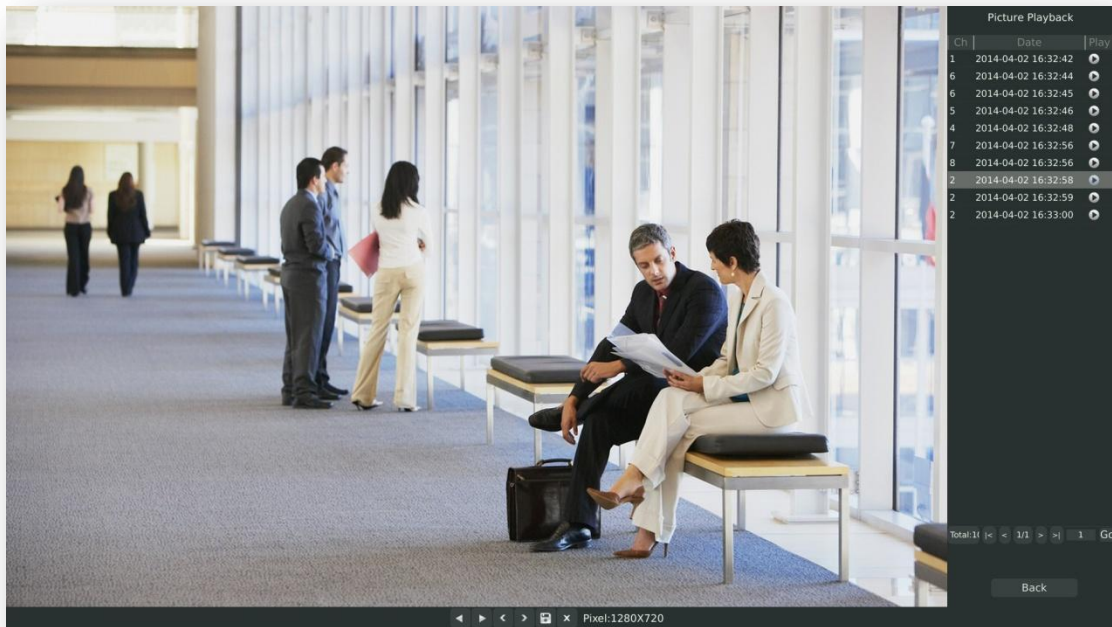

F-3.2.11

Step2: Select backup media and click  to save picture.

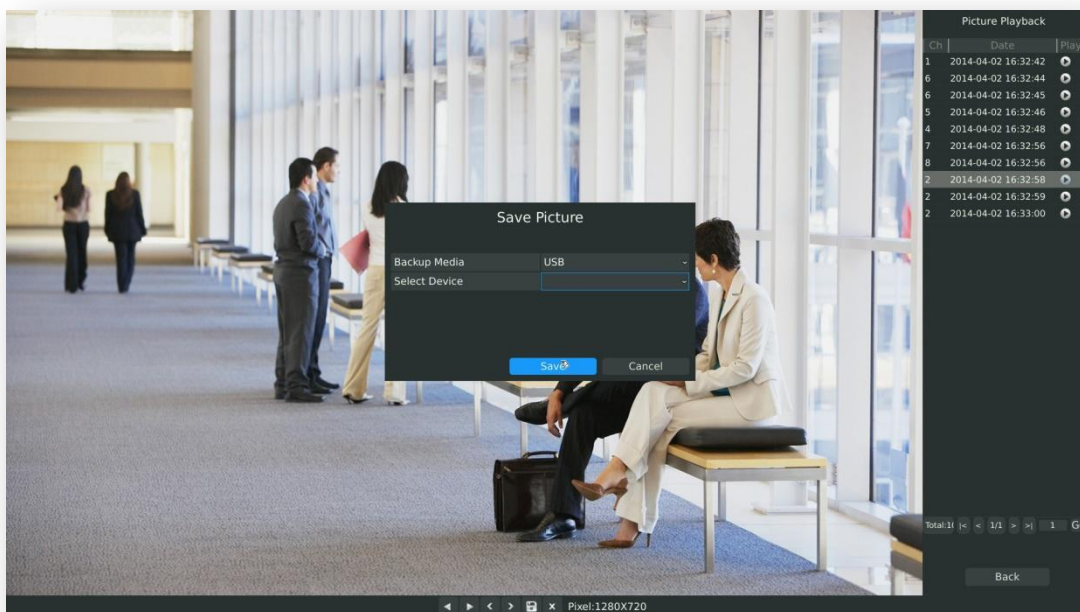


F-3.2.12

3.3 Camera Settings

Before configuration, please ensure that the IP device is connected to the same network as your NVR and that the network setting for your NVR is properly setup.

3.3.1 Camera Management

Step1.Enter camera management interface by clicking main menu→Camera →Camera Management to enter camera management interface.

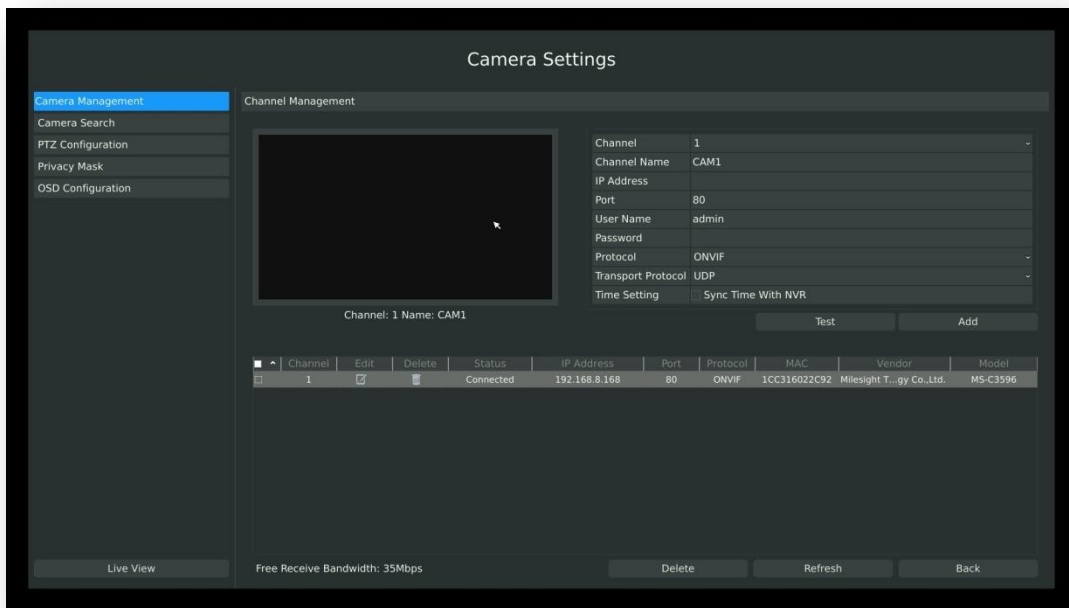


F-3.3.1

Step2.Add IP Channel


Method1. Add IP Channel in camera search interface

1.Enter to camera search interface by clicking Main Menu→ Camera→ Camera to Search.

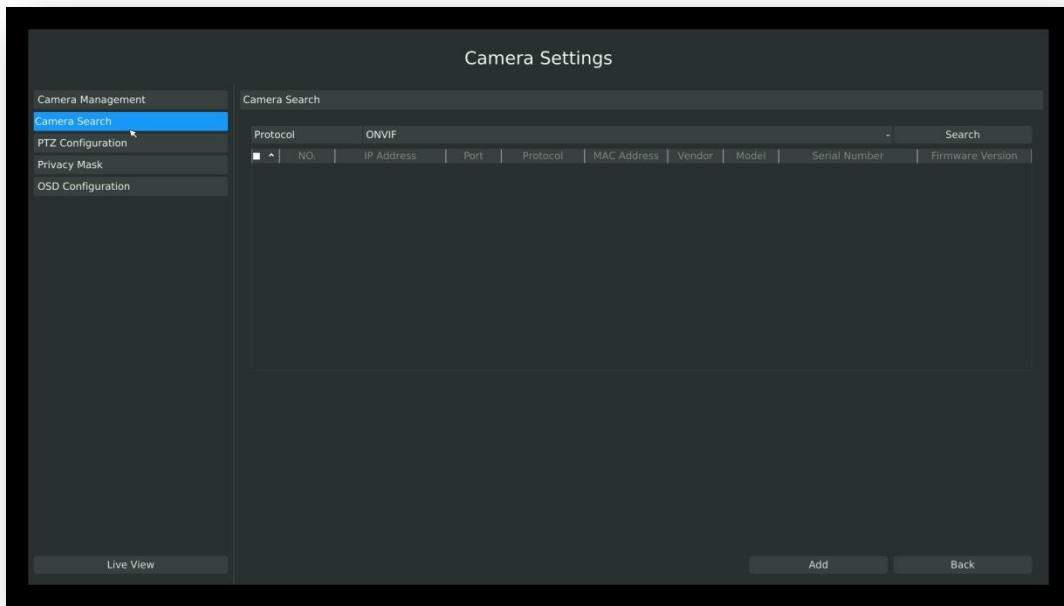


F-3.3.2

2. Click [search] button to quickly search the IP devices that support ONVIF at the same network segment with NVR.

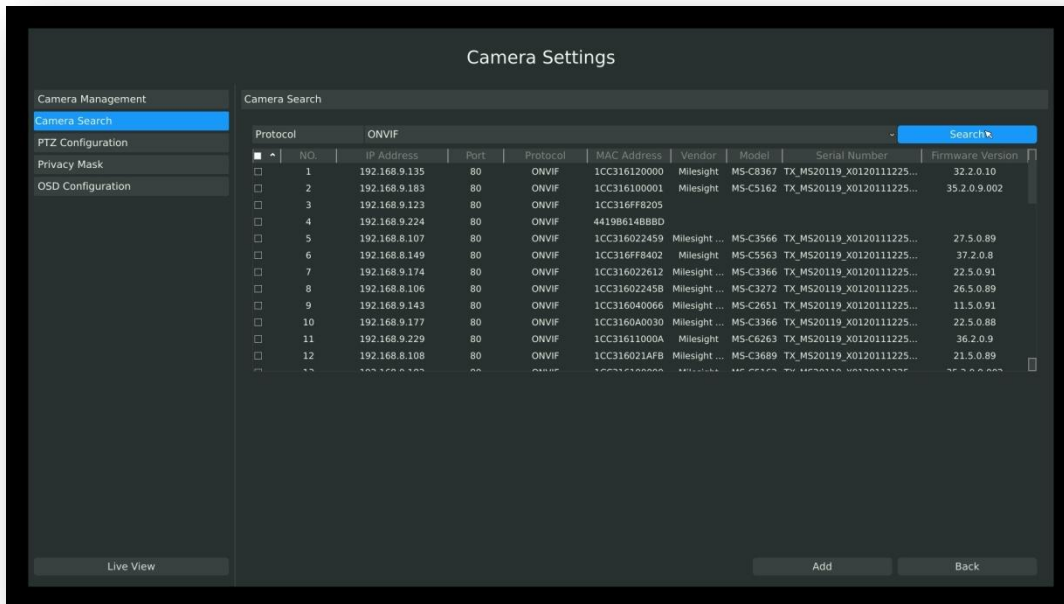


F-3.3.3

3. Double click the channel, input password and click [Add] button.

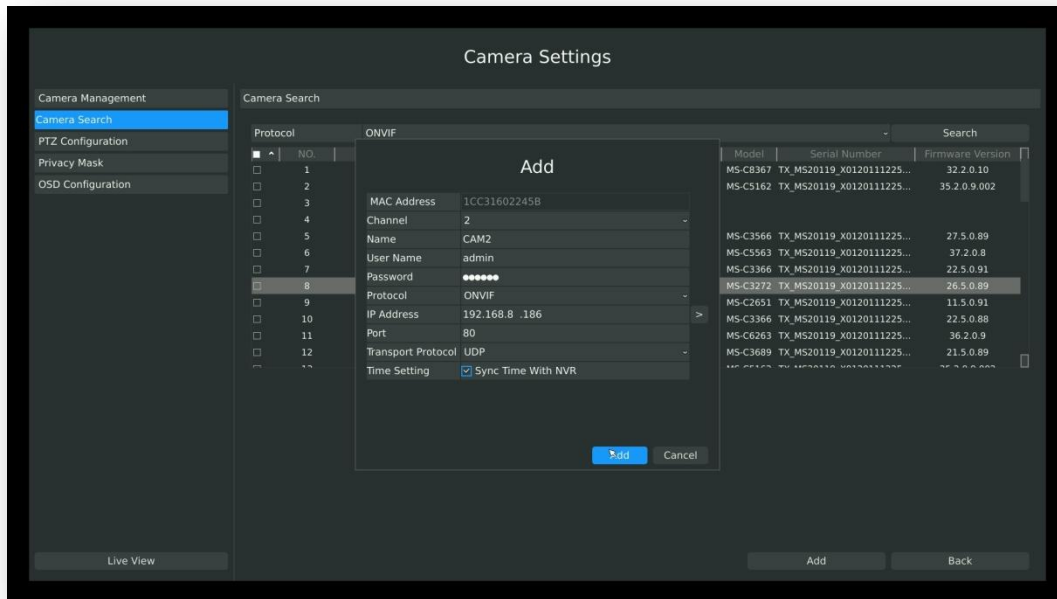

F-3.3.4


Or Check to bulk adding the IP cameras if they are with same password.

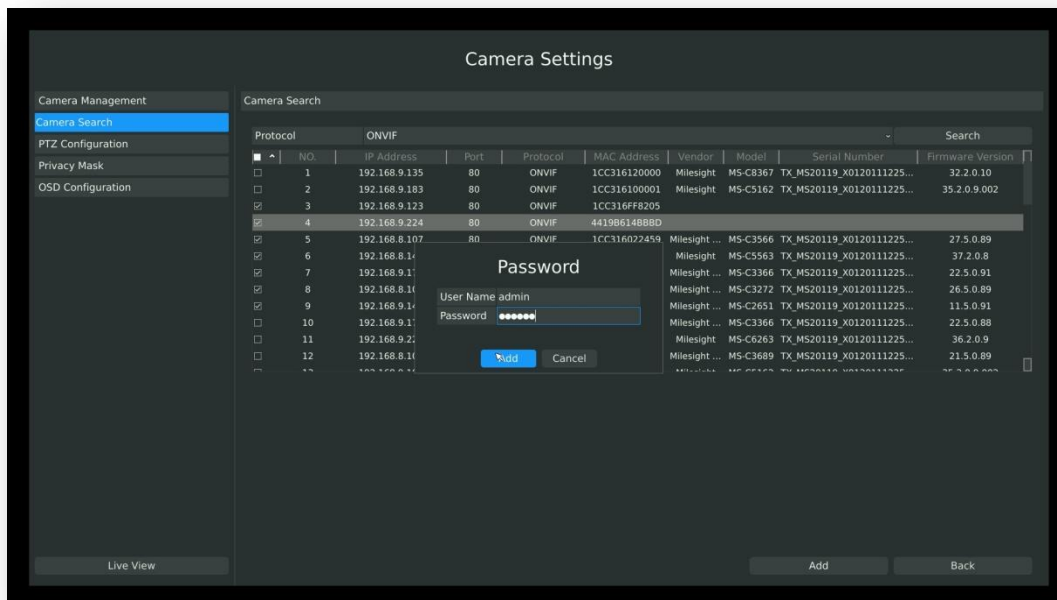

F-3.3.5

Method2. Add IP Channel in camera management interface

1. Enter to camera management menu by clicking Main Menu → Camera → Camera to Management

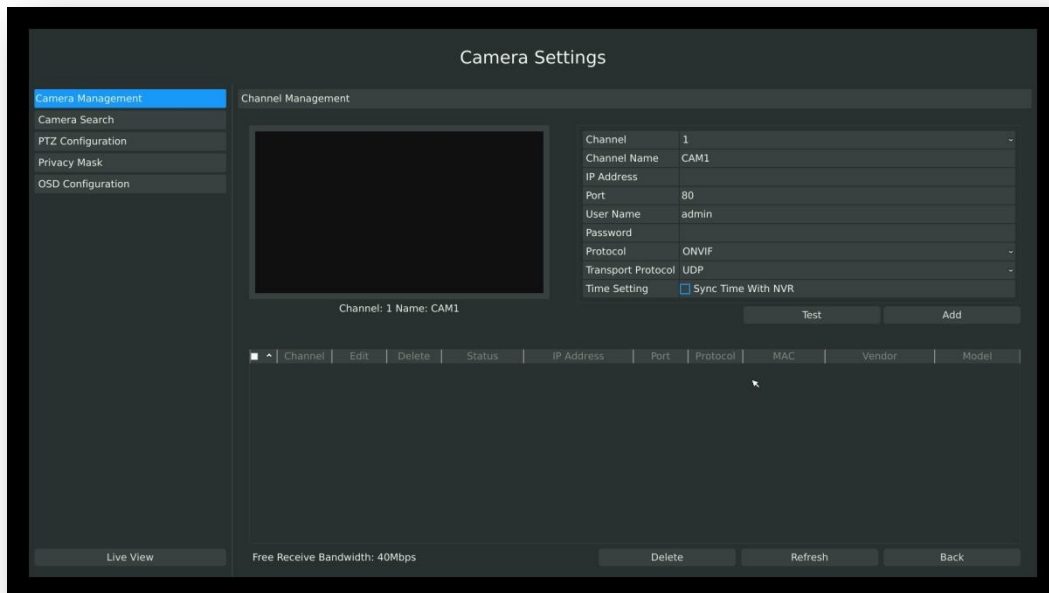

F-3.3.6

2. Select the attribute page of 'IP Channel', select idle channel then input complete information Click [Add] button.

There are **3** ways to add camera:


1. ONVIF: Add the camera with ONVIF protocol, you can add any IP cameras with ONVIF compatible if select this protocol. The detail formats are showed in F-3.3.7;

2. RTSP: Use RTSP to add camera. You can add any IP cameras which have RTSP protocol streams.


You need select 554 for the port and input the resource path for the camera. Take Milesight device for example, for main stream the resource path is “/main” and the second stream is “/sub”.

The details about adding format are showed in F-3.3.8;


3. MILESIGHT: If your IP camera is a milesight device you can select this protocol to add cameras. The detail formats are showed in F-3.3.9;

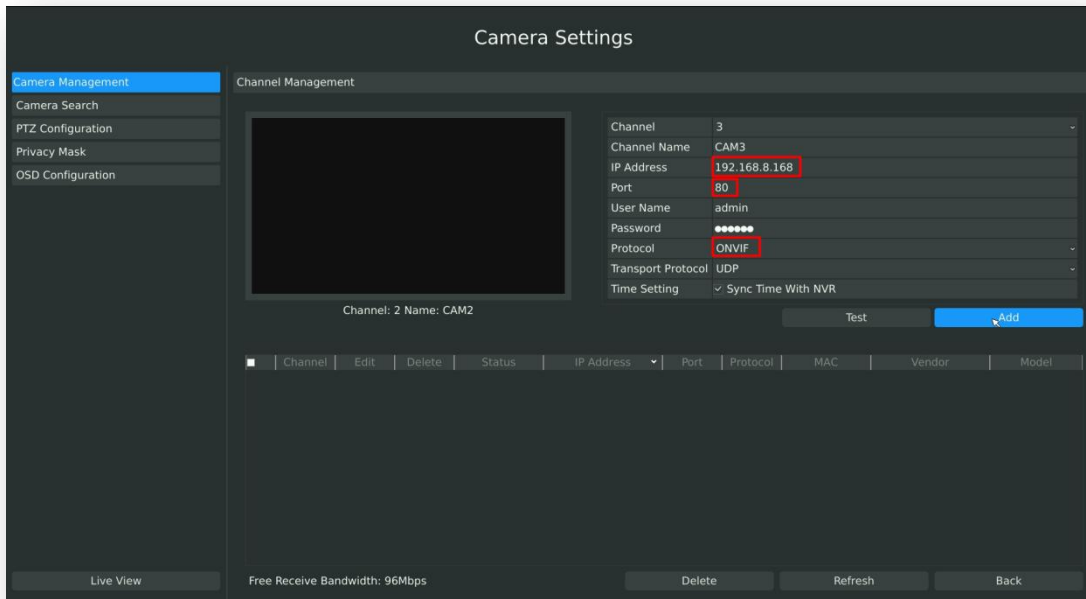

F-3.3.7 ONVIF

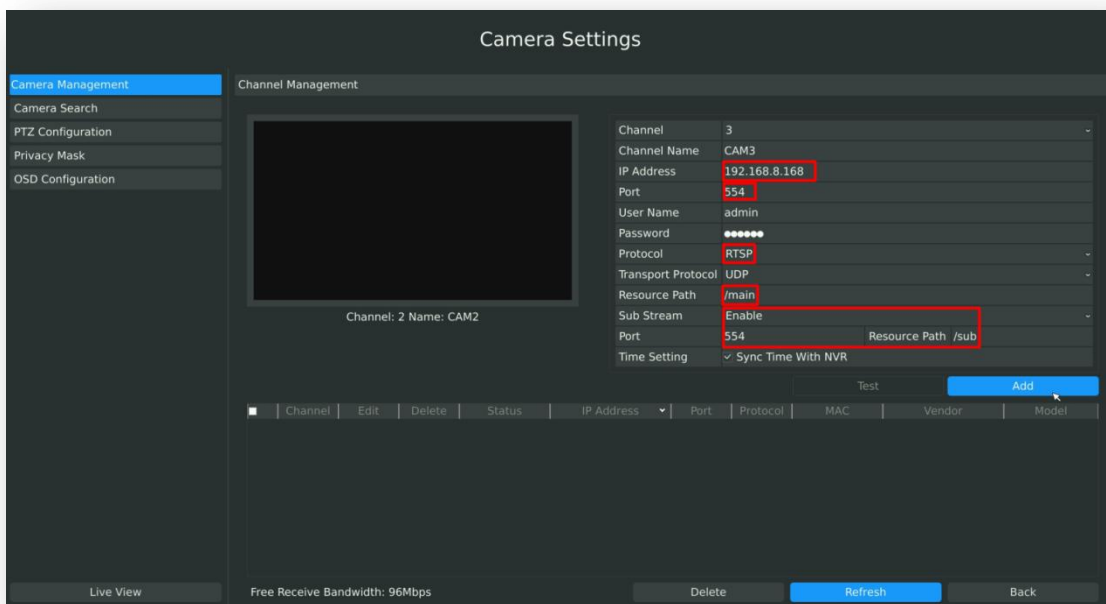

F-3.3.8 RTSP

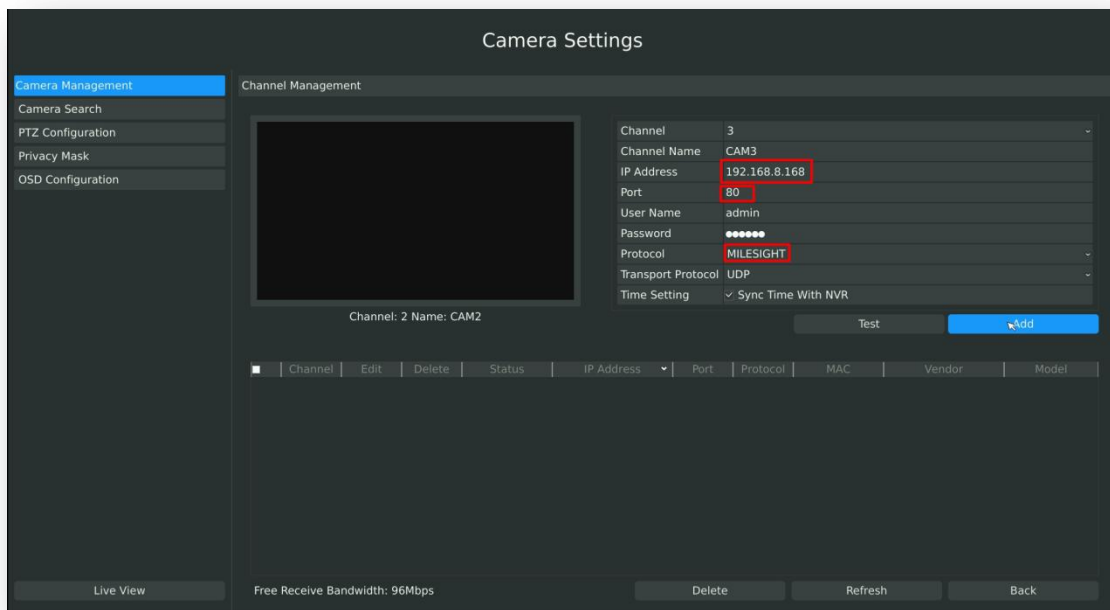

F-3.3.9 MILESIGHT

Step3. Check the connection status


After adding the IP channels, click [Refresh] button, the [state] will show [connected] as below, If not, you need to check if the network is connected or whether the user name, password is correct or not.

Channel	Edit	Delete	Status	IP Address	Port	Protocol	MAC	Vendor	Model
1			Connected	192.168.5.168	80	ONVIF	1cc3160a014e	Milesight T...gy Co.,Ltd.	MS-C3366
2			Connected	192.168.5.169	80	ONVIF	1cc316020046	Milesight T...gy Co.,Ltd.	MS-C3658
3			Connected	192.168.5.153	80	ONVIF	1cc31601024f	Milesight T...gy Co.,Ltd.	MS-C2662
5			Connected	192.168.5.191	80	ONVIF	1cc316020059	Milesight T...gy Co.,Ltd.	MS-C3658
6			Connected	192.168.5.192	80	ONVIF	1cc31602002b	KAREL	NBE-213RM-24
7			Connected	192.168.5.152	80	ONVIF	1cc316080009	Milesight T...gy Co.,Ltd.	MS-C3662

F-3.3.10

Step4. Configure IP Channel

1. After successfully adding the channel, click  or double-click this channel to re-edit the channel info, address, and password, etc.

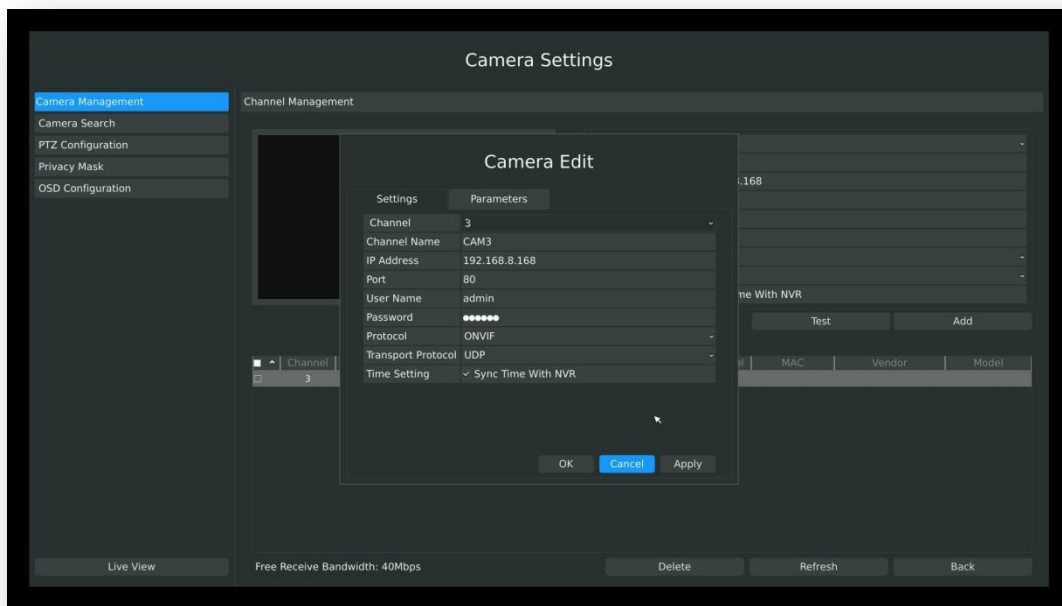


F-3.3.11

Note:


By default, the user name and password entered here are the default user name and password. The management port is 80 and the default Transport protocol is UDP.

2. Select [Parameters] attribute page to re-edit this channel parameters. Click [Save] to save the configuration

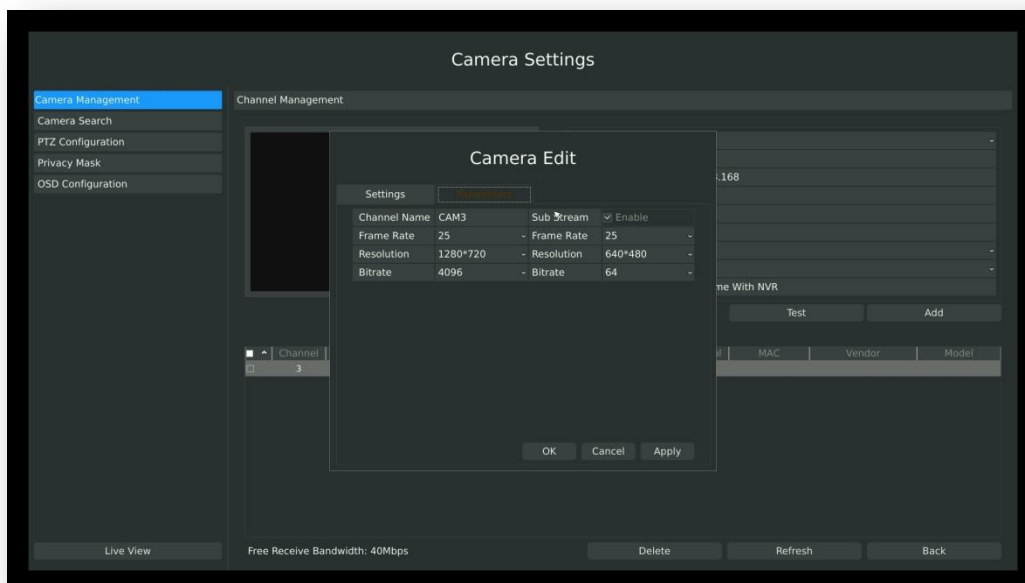


F-3.3.12

3. You can delete this IP channel by clicking , or you can multi-select the devices and then

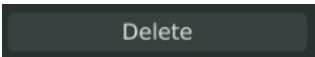click  to delete.

	Channel	Edit	Delete	Status	IP Address	Port	Protocol	MAC	Vendor	Model
<input type="checkbox"/>	1	<input checked="" type="checkbox"/>		Connected	192.168.8.168	80	ONVIF	1CC316022C92	Milesight T...gy Co.,Ltd.	MS-C3596
<input type="checkbox"/>	2	<input checked="" type="checkbox"/>		Connected	192.168.8.169	80	ONVIF	1CC3160112DF	Milesight T...gy Co.,Ltd.	MS-C2182
<input type="checkbox"/>	3	<input checked="" type="checkbox"/>		Connected	192.168.8.172	80	ONVIF	1CC3160A0160	Milesight T...gy Co.,Ltd.	MS-C3662
<input type="checkbox"/>	4	<input checked="" type="checkbox"/>		Connected	192.168.8.170	80	ONVIF	1CC316020032	Milesight T...gy Co.,Ltd.	MS-C3658

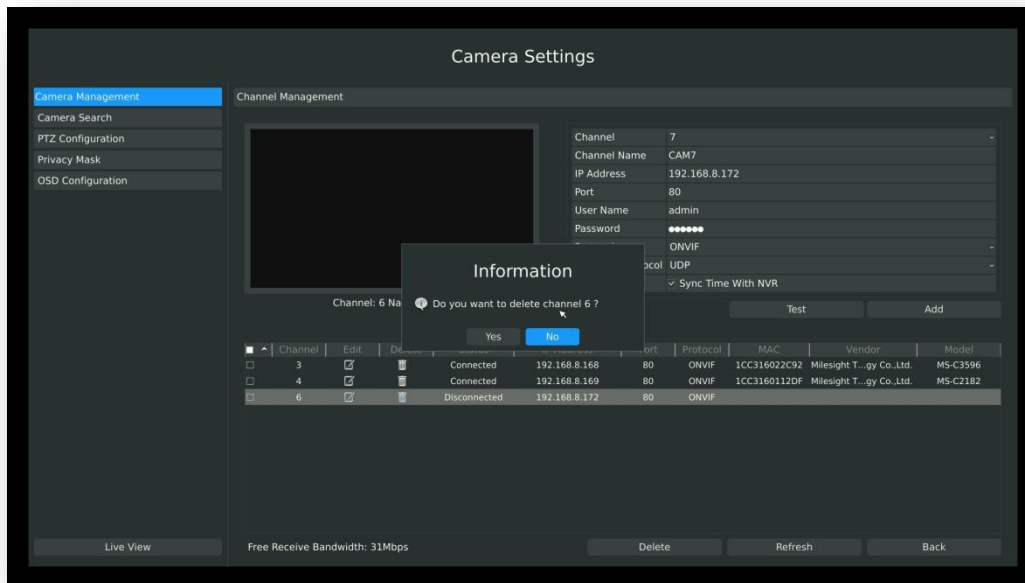


F-3.3.13

3.3.2 Camera Search


You can search and add IP cameras here

Step1.Enter camera search interface by clicking Main menu → Camera → Camera Search

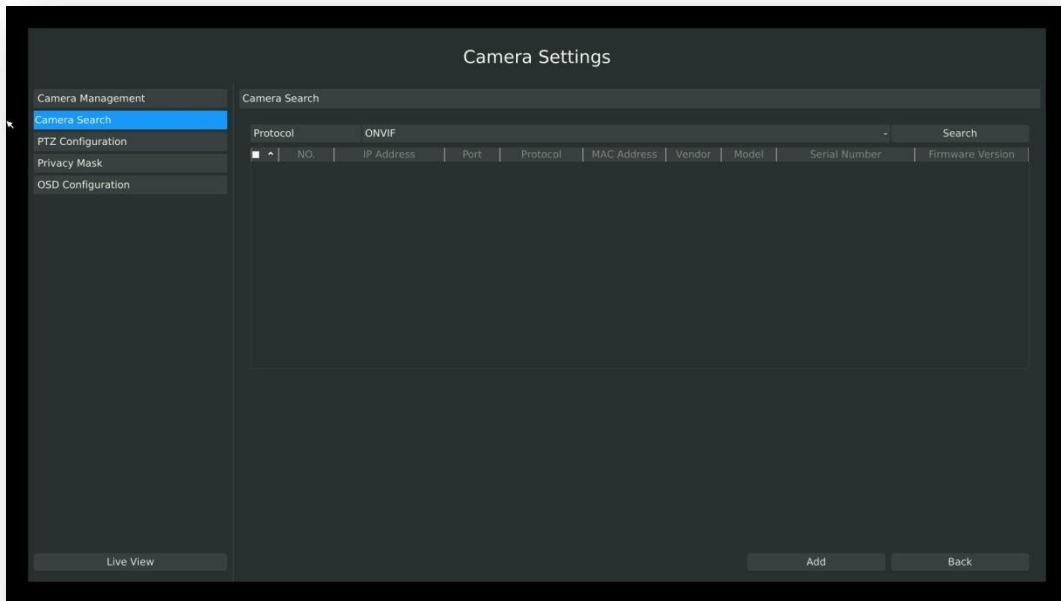

F-3.3.14

Step2. Click [search] to quickly search the IP devices that support ONVIF at the same network segment with NVR.

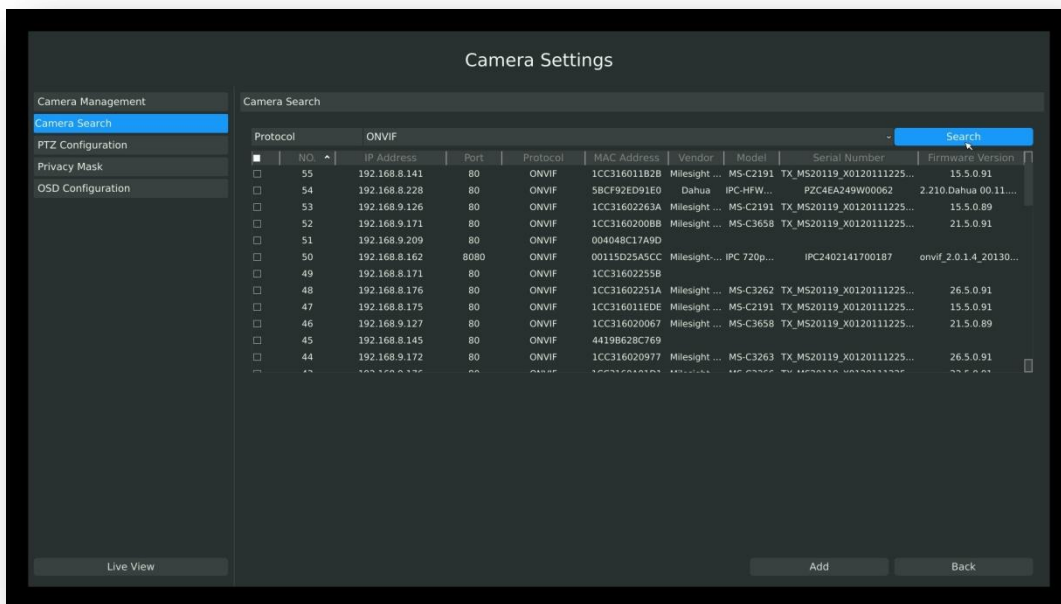


F-3.3.15

Note:

The IP devices found in the list are those that support ONVIF protocol and in the same network segment with NVR.


Step2.Add IP Camera

Double click the channel, input password and click [Add] button.

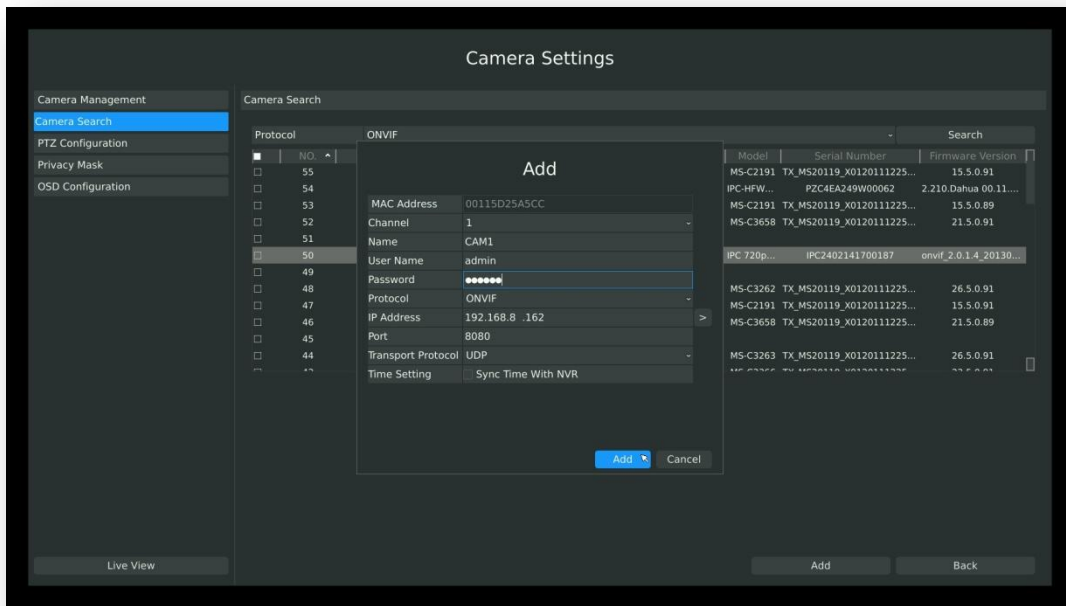

F-3.3.16

Or you can bulk adding the IP cameras if they are with same password. Click [OK] to finish bulk adding.

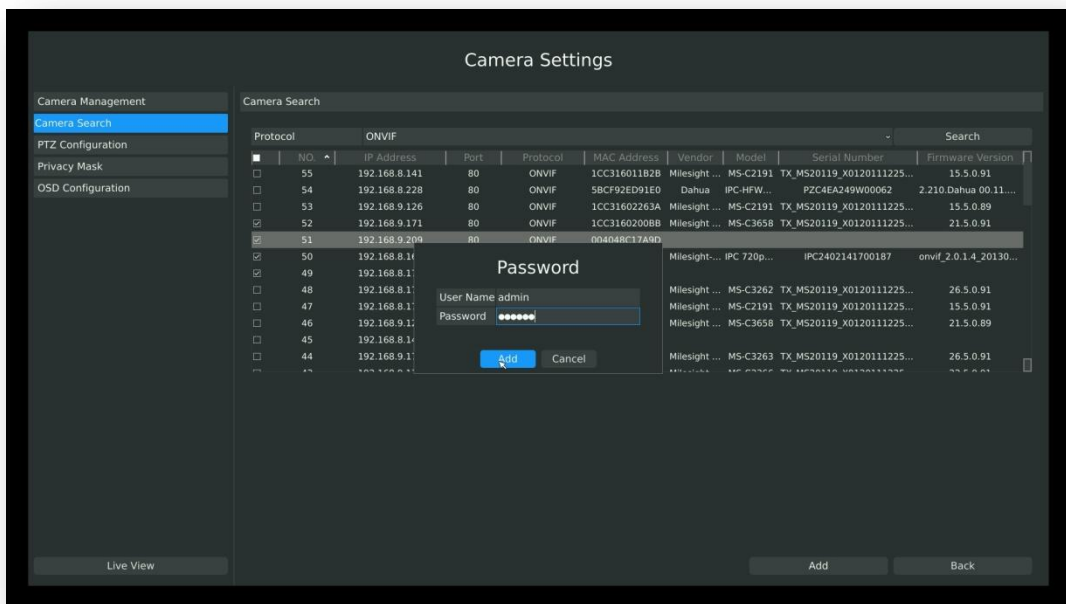

F-3.3.17

3.3.3 PTZ Configuration


3.3.3.1 PTZ control Parameters Configuration

Note:

Settings for a PTZ camera must be configured before it can be used. Make sure that the PTZ and RS-485 of the NVR are connected properly.

Step: Enter configuration interface by clicking Main Menu → Camera → PTZ Configuration, select “Configuration” page

Select a channel and set the PTZ parameters. You can click [Copy] to copy the same configuration to other channels.

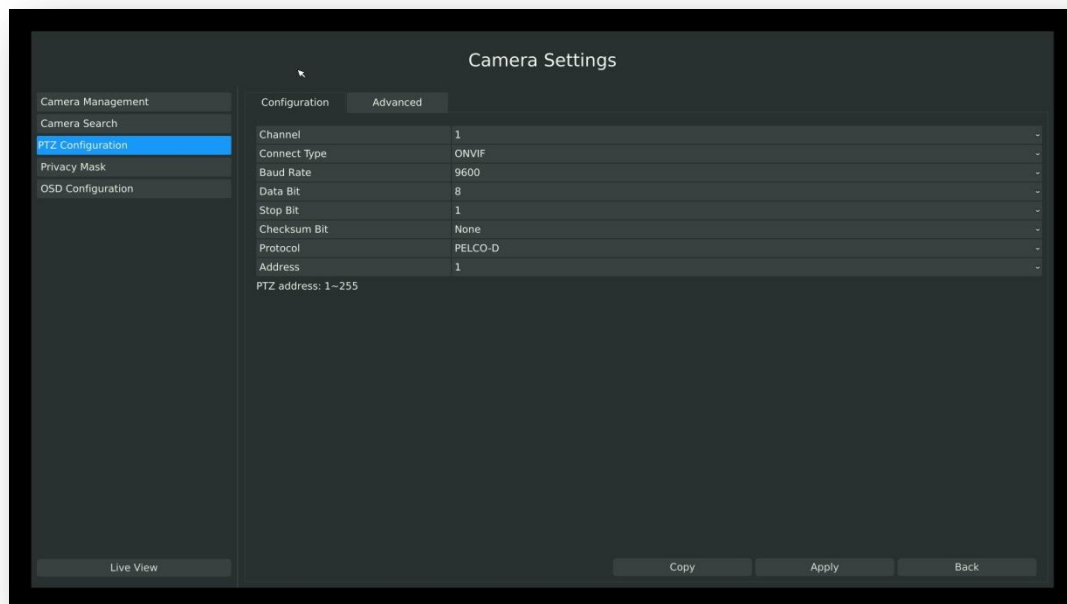

F-3.3.18

Note: The PTZ protocol and address of IP channel must be consistent with those of the PTZ decoder.

3.3.3.2 Advanced Configuration

There are two patrol ways can be set: Track Patrol and Tour Patrol

Note:


1. IP channel does not support configuration and calling of presets, patrols and patterns.
2. The functioning of presets patrols and patterns need front PTZ decoder to support.

Route: Main Menu→ Camera→PTZ Configuration, select “Advanced” page

1. Presets Point Setup


Preset can be set to move your PTZ camera to a desired preset location. The preset point is the preparation for Tour Patrol.

Step1. Use the PTZ direction key to rotate the position of preset. Then select “Set Preset Point” and select a preset number to finish a preset point setting. Repeat above steps to set more preset points.

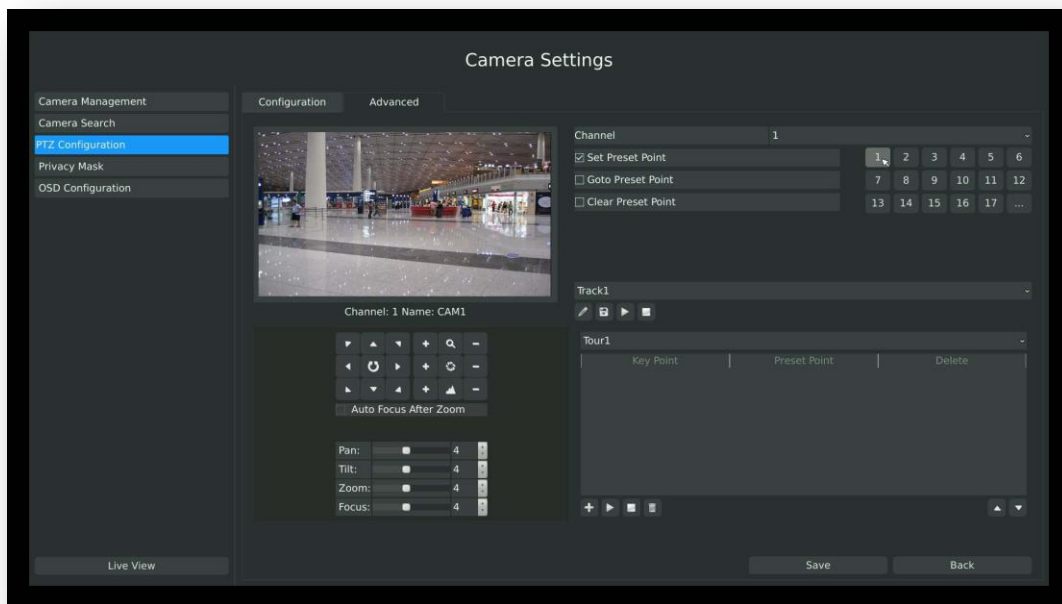


F-3.3.19

Step2. Click  to save or call more preset points after number 17.

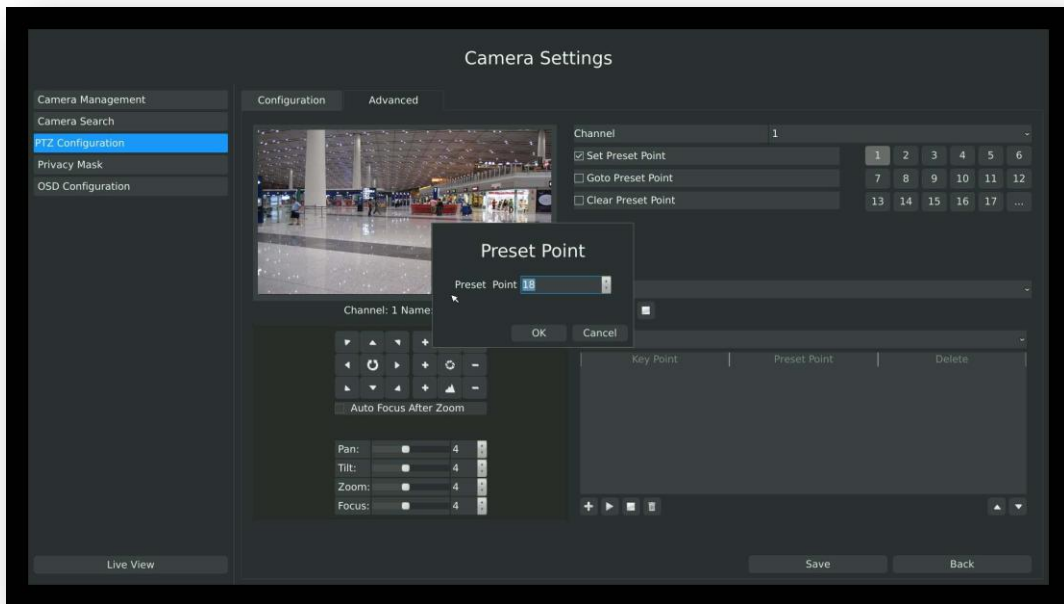


F-3.3.20

Step3. Select ‘Clear Preset Point’ and click a preset number to delete the preset point.

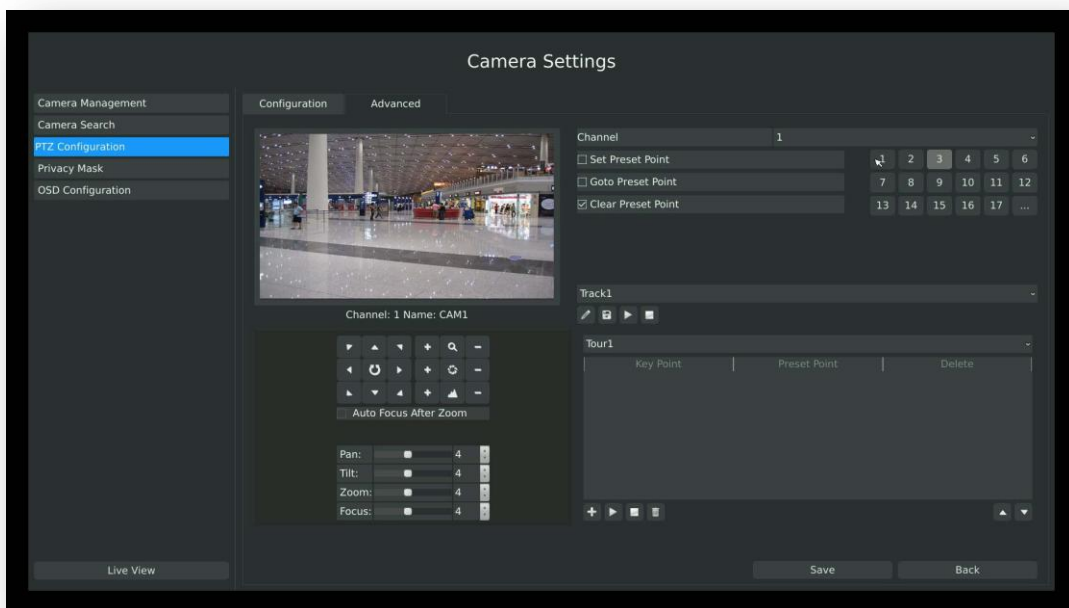

F-3.3.21

Step4. Select “Go to Preset Point”. Click a preset number to check the preset point.

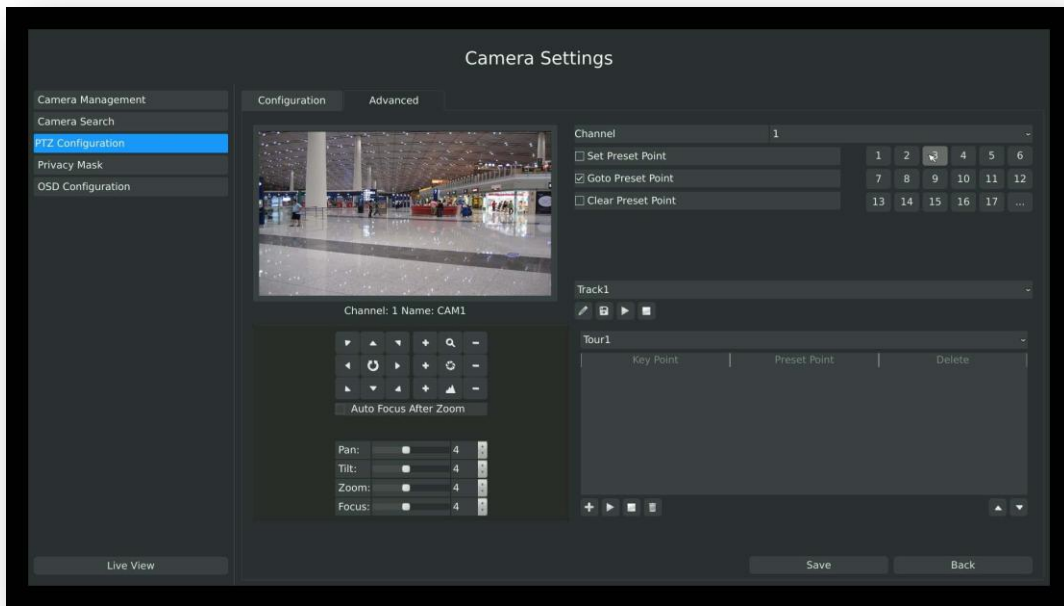


F-3.3.22


2. Tour Patrol

The camera will patrol according to the key points. The total time and patrol speed of the tour is variable.


Step1. Select a tour. Up to 6 tours could be set.

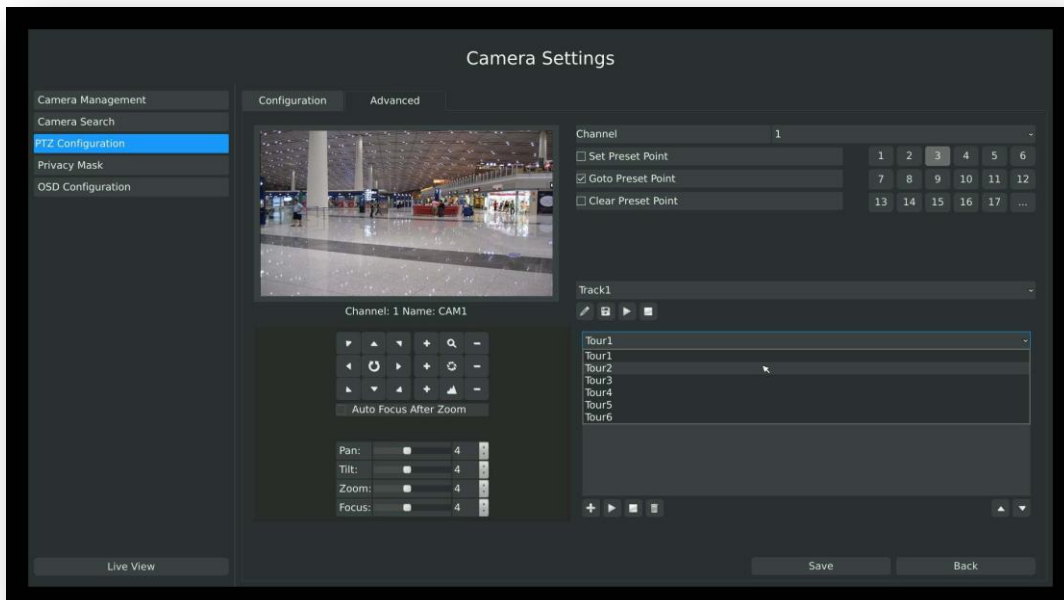

F-3.3.23

Step2. Click  to add key points. Set the key point parameters (including preset point

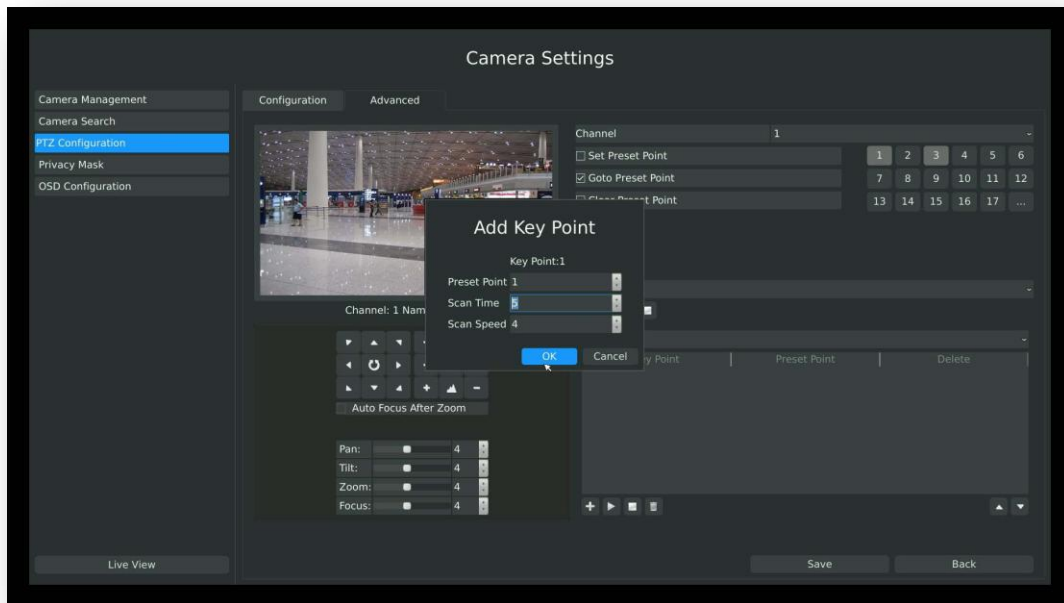

number, scan time and scan speed) and click [OK].



F-3.3.24

Step3. Repeat the above steps to add more key points to the tour patrol.

Step4. Select a key point, select [Delete] and select [Yes] in the dialog box to delete it.

Step5. Click  to preview the tour patrol. Click  to stop.

Step6. Click  and select [Yes] in the dialog box to delete all key points of the tour patrol.


Note:

- 1. The key point decides the patrol path, which will run according to numerical order of the key points.**
- 2. Scan time is how long the patrol stays on the preset point.**
- 3. Scan speed is the rotate speed of speed dome from one preset point to the next.**

3. Track Patrol

The camera will patrol back and forth in a constant speed. There are only a start point and an end point.

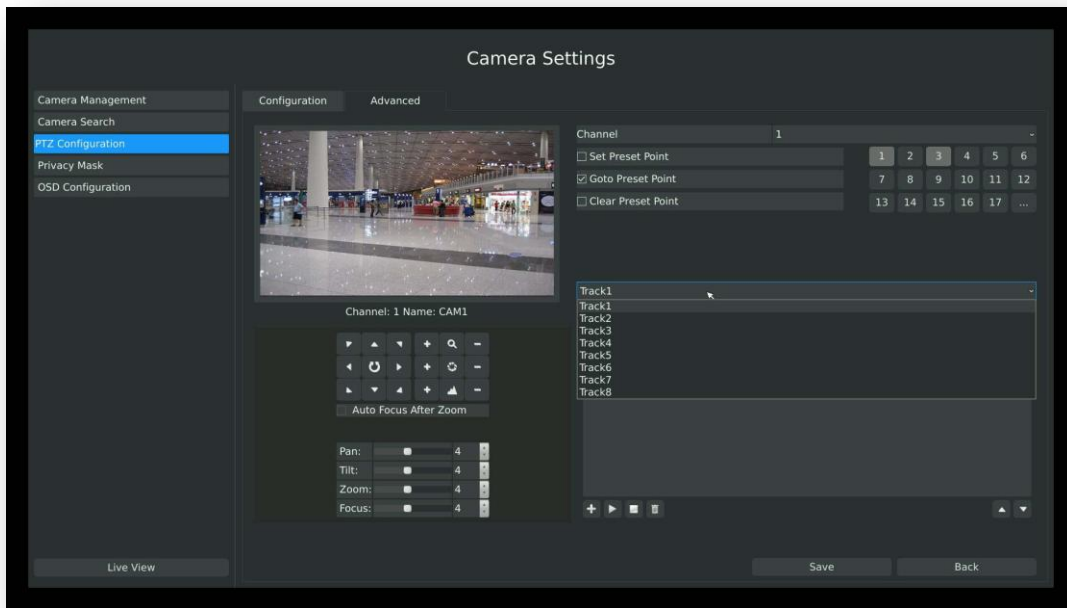

Step1. Select a track and click . Up to 8 tracks could be set.



F-3.3.25

Step2. Drag the mouse or click 8 direction keys of mouse control field to rotate PTZ.

Step3. Click  to save the PTZ movement patterns to the Track Patrol.

Step4. Click  to preview the track patrol. Click  to stop.











3.2.3.3 PTZ Control Operation

In live view mode, select quick menu of live view channel to enter PTZ control mode. It can access PTZ control by PTZ control bar or panel PTZ control button.

Description of PTZ Control Bar




F-3.3.26

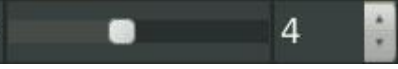Icon	Description	Icon	Description	Icon	Description
	PTZ Direction Control and Auto Scan Button		Adjust Zoom+, Focus+, IRIS+		Adjust Zoom-, Focus-, IRIS-
	Zoom: Zoom in or out		Focus		IRIS
<input type="checkbox"/> Auto Focus After Zoom		Focus automatically after manual zoom			
Pan: 		Horizontal Movement Adjustment			
Tilt: 		Vertical Movement Adjustment			
Zoom: 		Zoom Adjustment			
Focus: 		Focus Adjustment			

3.3.4 Privacy Mask

Milesight NVR support privacy mask. It used to cover some privacy area which is not proper to appear on monitor.

Entering Privacy Mask interface by clicking: Main Menu→ Camera→Privacy Mask.

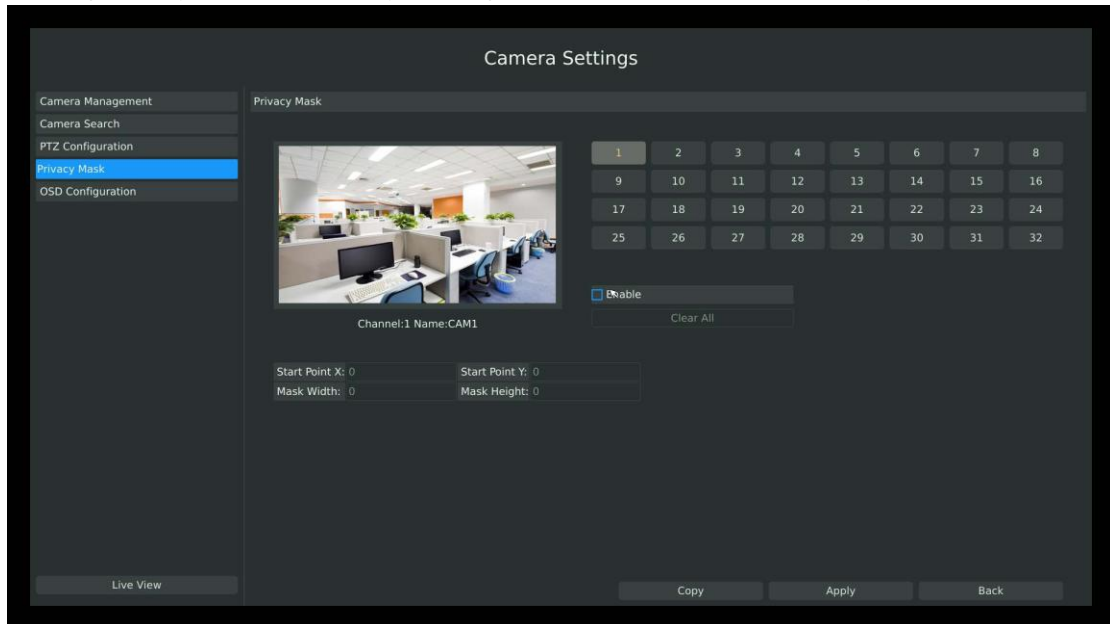

F-3.3.27


You can add a privacy mask by following steps:

Step1: Select channel on the right top of the interface, and enable it on the below of the channel;

Step2: Set the area of privacy mask:

Way1: Drag the mouse to select the area which is privacy on the live window;

Way2: Set the coordinates of privacy area in the columns below the live window;

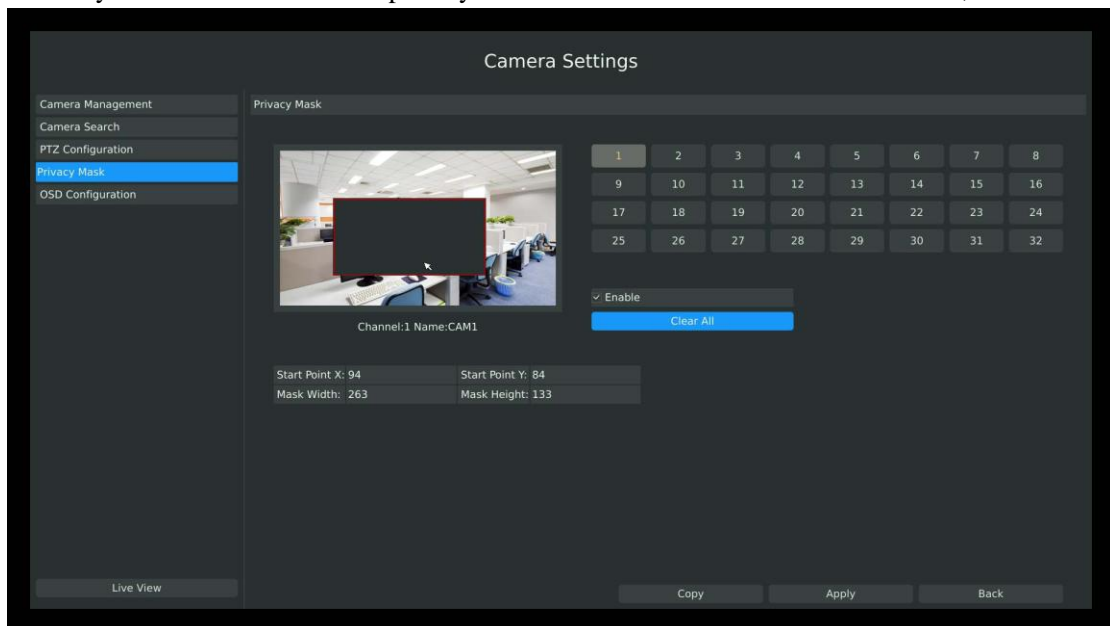

F-3.3.28

Step3: Copy the privacy area to the other channels by click the “copy” button on the bottom of the windows;




F-3.3.29

Step4: Select “Apply” to save the setting;

3.3.5 OSD configuration

You can set OSD (On Screen Display) on NVR, and the OSD will be synchronized on IPC. Entering OSD Configuration interface by clicking: Main Menu → Camera → OSD Configuration.

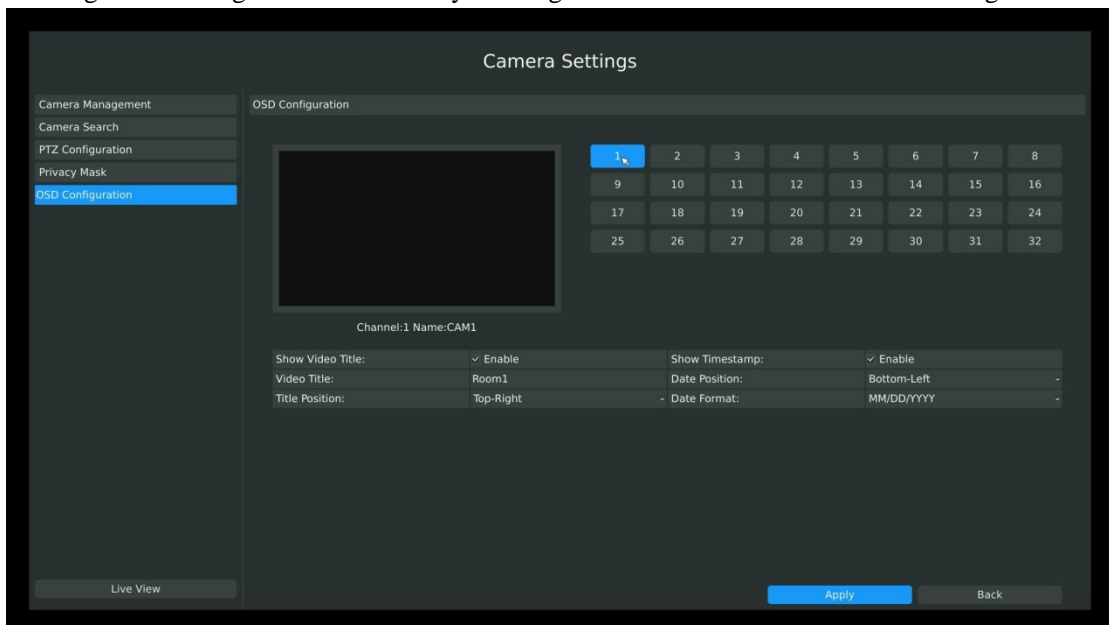

F-3.3.30

Step1: Select channel by clicking the channel number on the right-top, the selected channel will change into gray and the channel number will change into yellow;



Step2: Enable video title and timestamp:


Show Video Title:	✓ Enable	Show Timestamp:	✓ Enable
Video Title:	Room1	Date Position:	Bottom-Left
Title Position:	Top-Right	Date Format:	MM/DD/YYYY

[Video Title]: Set the video title for the channel;


[Title Position]: Set the position for the video title: Top-Left or Top-Right;

[Date Position]: Set the position for the date: Top-Left, Top-Right, Bottom-Left or Bottom-Right;

[Date Format]: Set format for date: YYYY-MM-DD, MM/DD/YY or DD/MM/YYYY;

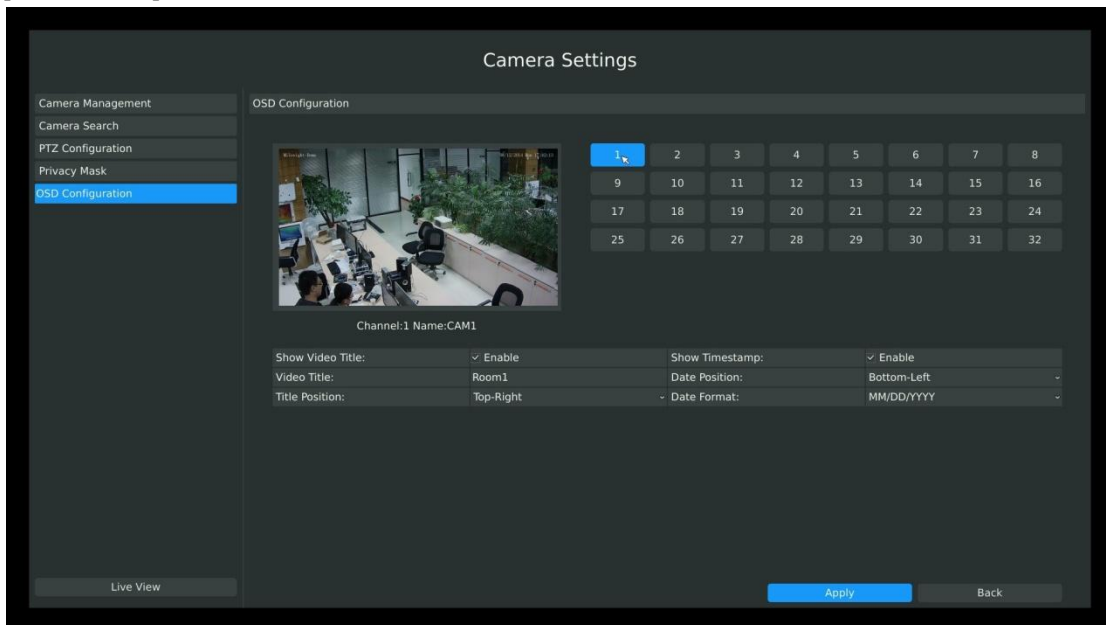

F-3.3.31

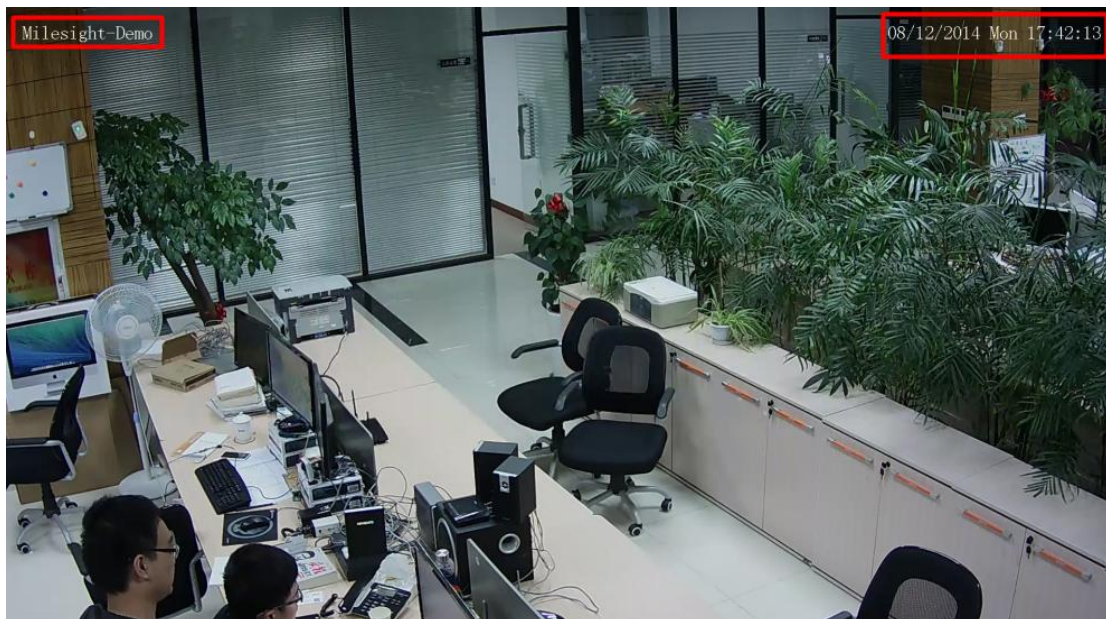

F-3.3.32


Step3: Select “Apply” to save the settings.

3.4 Record Settings

Preparation for Configuration

Step1. Ensure your NVR has Install and initialize the HDD.


Enter disk management interface by clicking System Settings → Disk Management

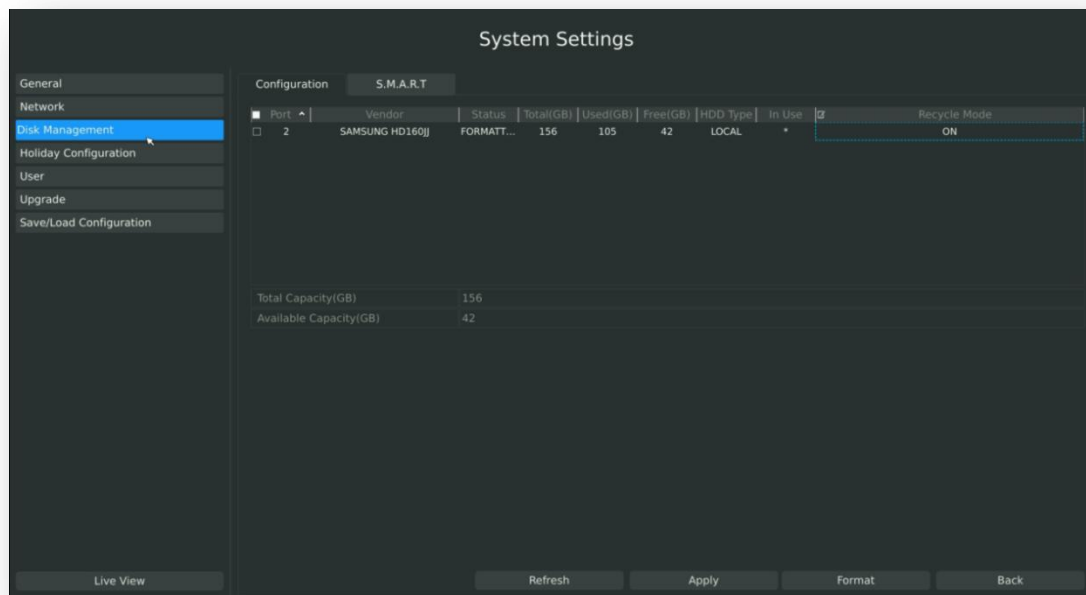

F-3.4.1

Step2. Ensure that HDD has sufficient storage space.

Enter disk management interface by clicking System Setting → Disk Management. Select [Recycle Mode] to ON in the case of insufficient capacity of HDD.

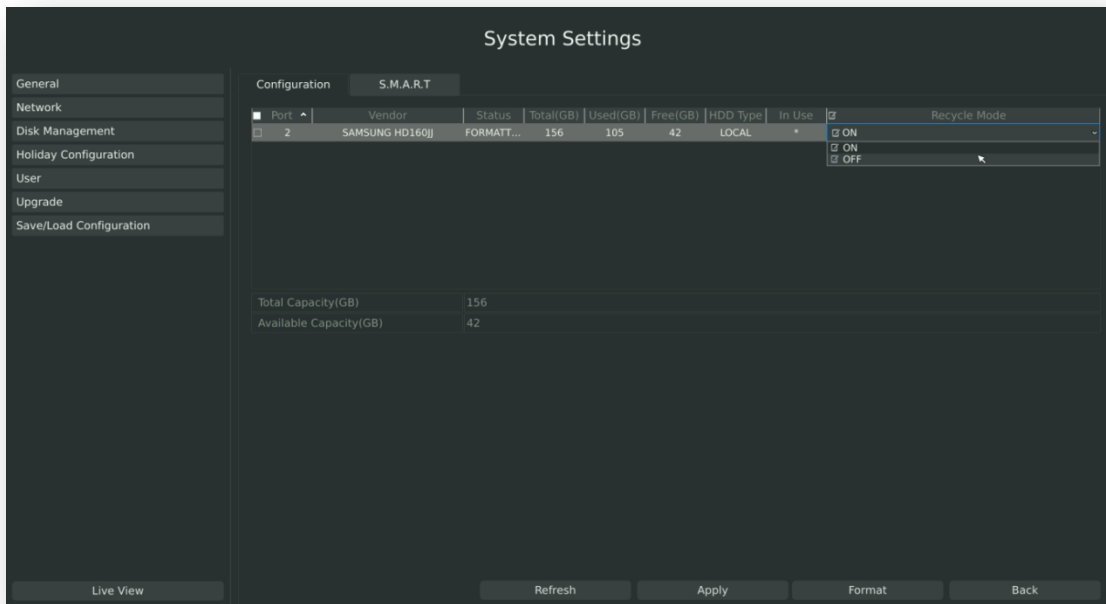


F-3.4.2

3.4.1 Record Mode

Step 1. Enter to record mode menu by clicking Main Manu → Record → Record Mode.

There are three record modes: No Recording/Always Record/Record by Schedule. You can select desired one to every channel.

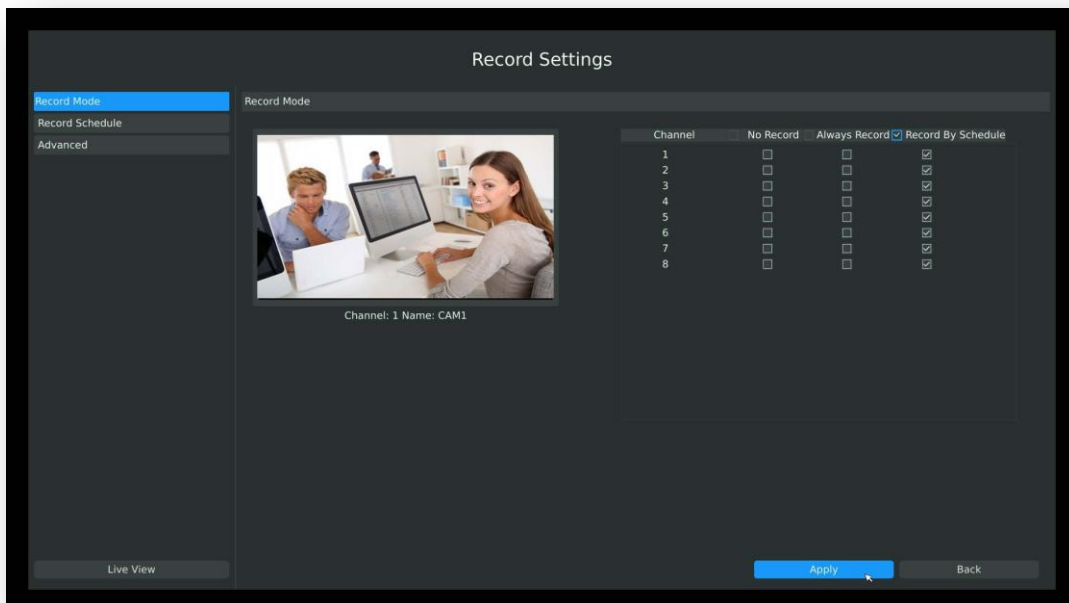

F-3.4.3

[No Record]: NVR will not record if you choose this column;

[Always Record]: It will always record the chosen channel;

[Record By Schedule]: If you want NVR to record by schedule, then you need select this column and then go to 3.4.2;


Step2. Click [Apply] to save the configuration.

3.4.2 Record Schedule Setting

Note: The days are divided as Holiday/Sunday/Monday/Tuesday/Wednesday/Thursday/Friday/Saturday. The schedule of Holiday is superior to other days. To set the holiday information, go to Chapter.3.8.4.


Method1. General Setting

Step1. Enter Record schedule interface by clicking Record Settings→Record Schedule

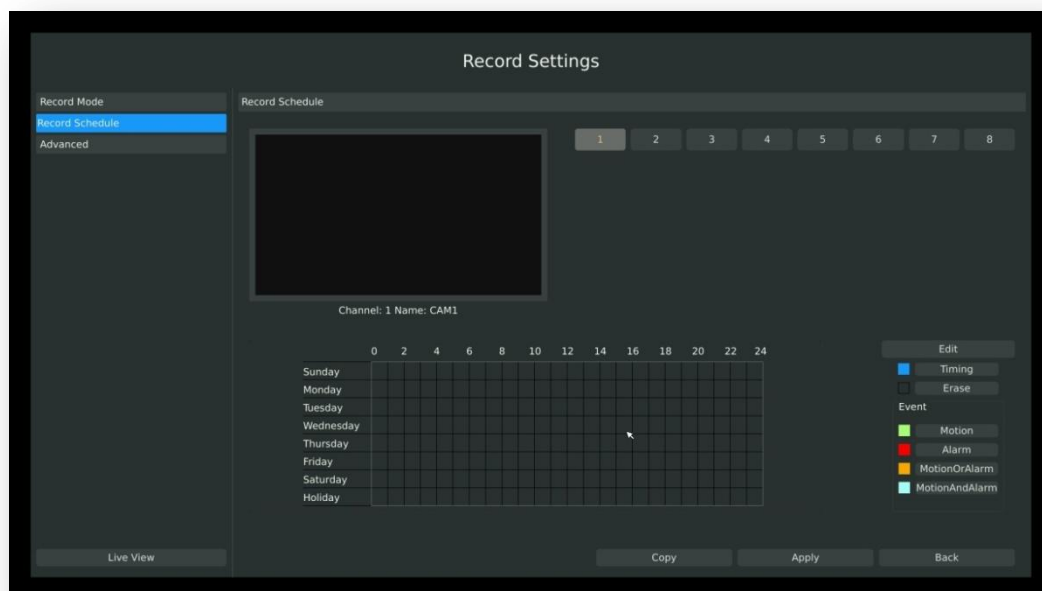

F-3.4.4


Step2. Select desired channel (eg. Channel 1) and click [Edit] button

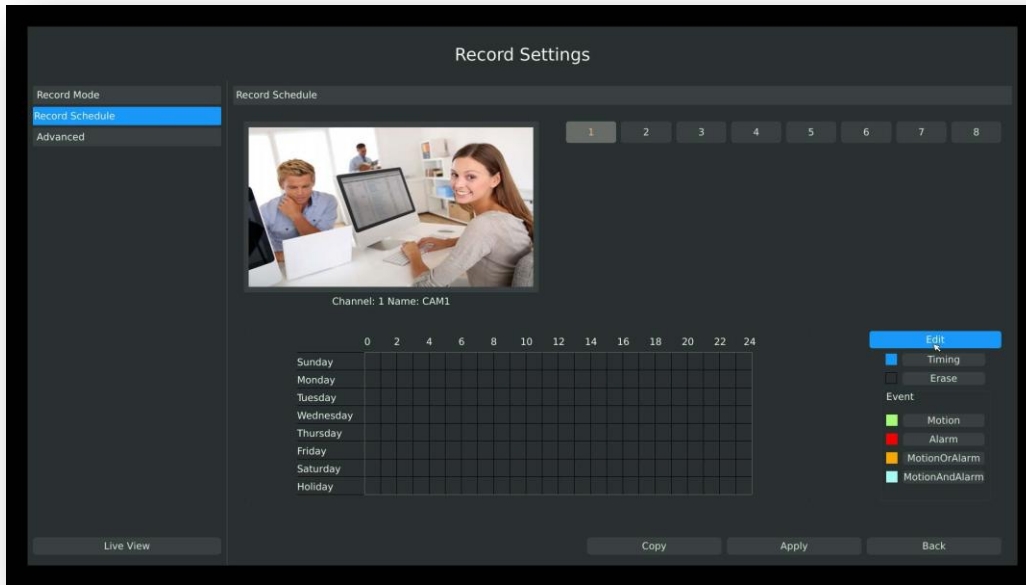

F-3.4.5

Step3.Set record schedule


Select a day from the drop-down list of [Day], and select [Record Type] to setup the recording period, up to 12 periods can be set. (eg.01:00 to 05:00 for none recording; 06:00 to 18:00 for timing recording; 19:00 to 21:00 for Motion recording; 22:00 to 24:00 for Alarm recording)

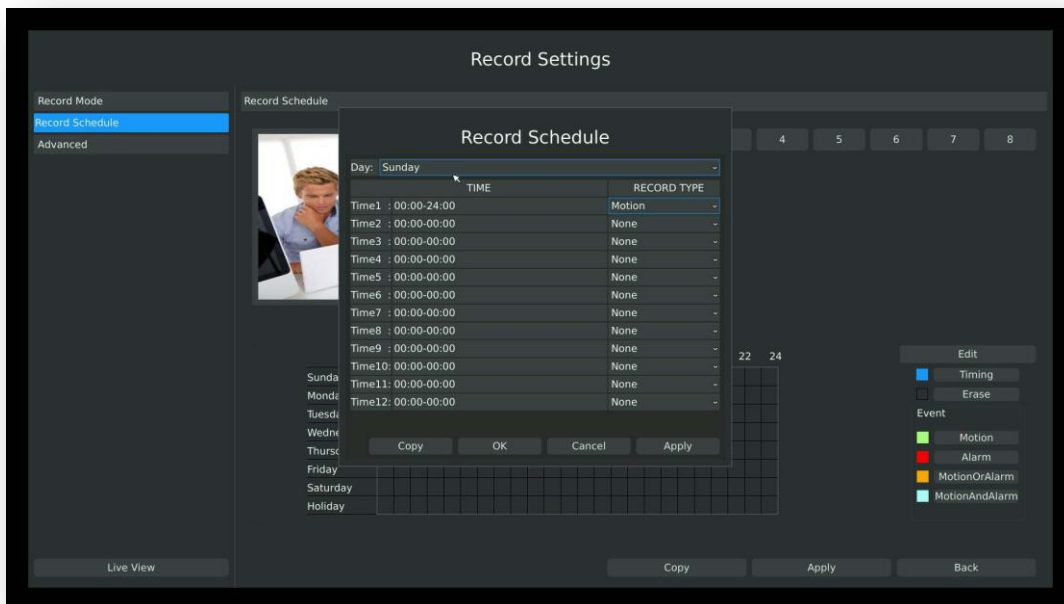

F-3.4.6

Note: Time periods cannot overlap with each other.

Step4.Click [Copy] to copy settings to other weekdays, and then click [Apply] to confirm the setting.

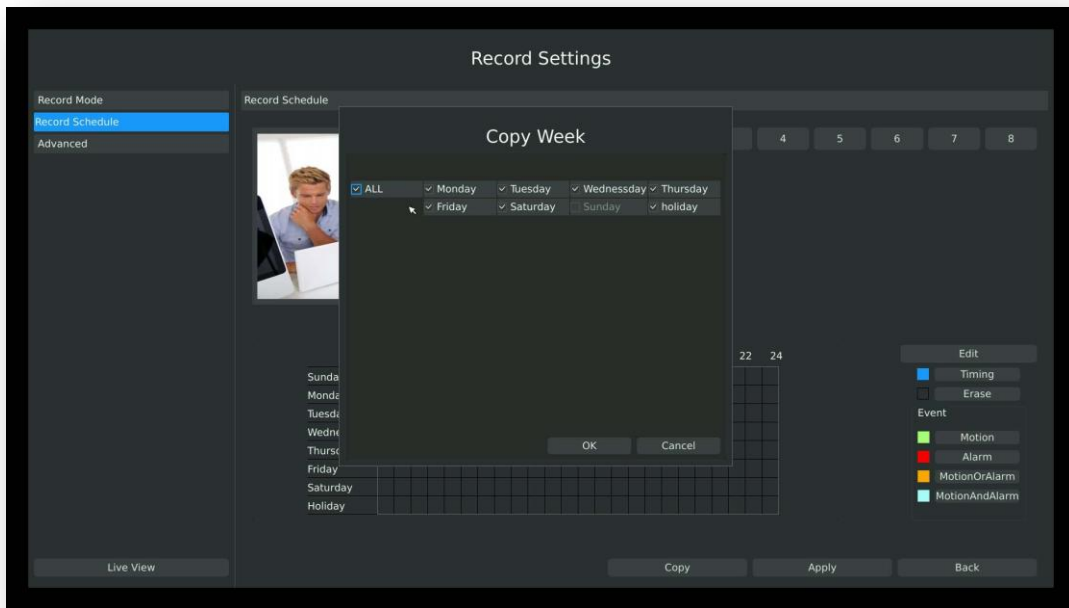

F-3.4.7


Step5.After above steps, this channel with show as below:



F-3.4.8

Step6.Copy the recording settings to other channels

Select [Copy] to copy the same settings to other channels. And click [OK] to save the configuration.

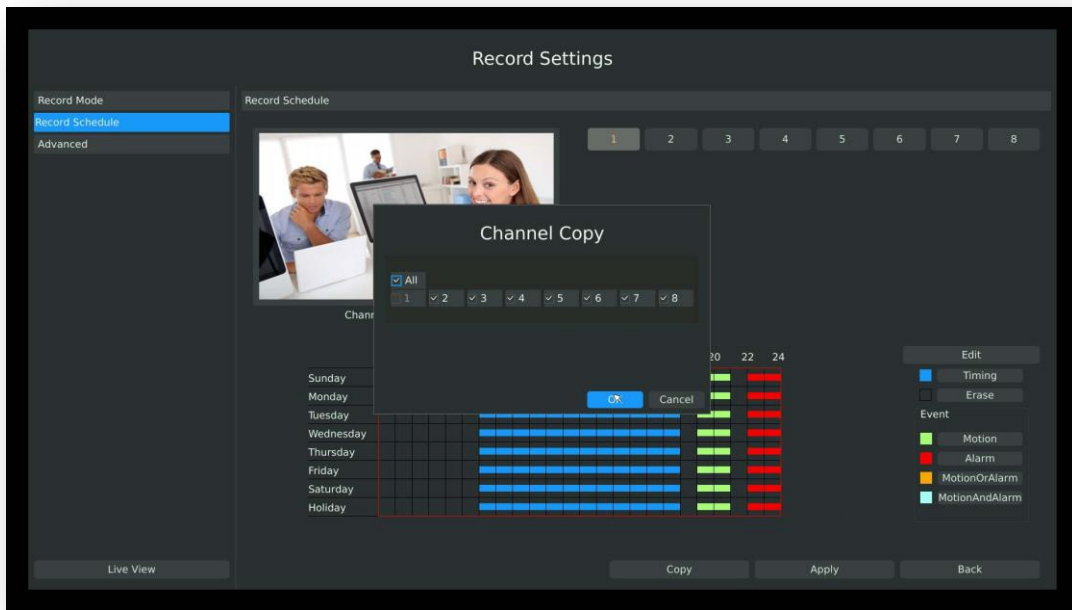

F-3.4.9

Step7. Save the configuration

Click [Apply] button to save the configuration, and then click [Back] to return to the previous menu.


Method2. Set record schedule by drag the mouse

Step1. Enter Record schedule interface by clicking Record Settings→Record Schedule




F-3.4.10

Step2. Click desired channel and record type show as below:

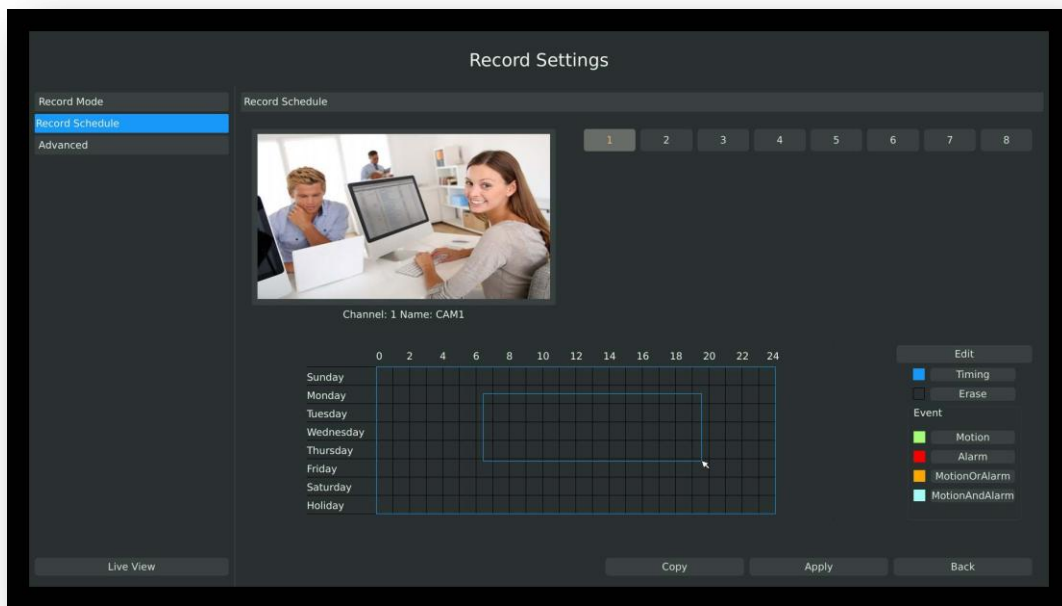

F-3.4.11


Step3. Drag the mouse to draw certain areas in recording setting zone and then click[Apply] to save the configuration.

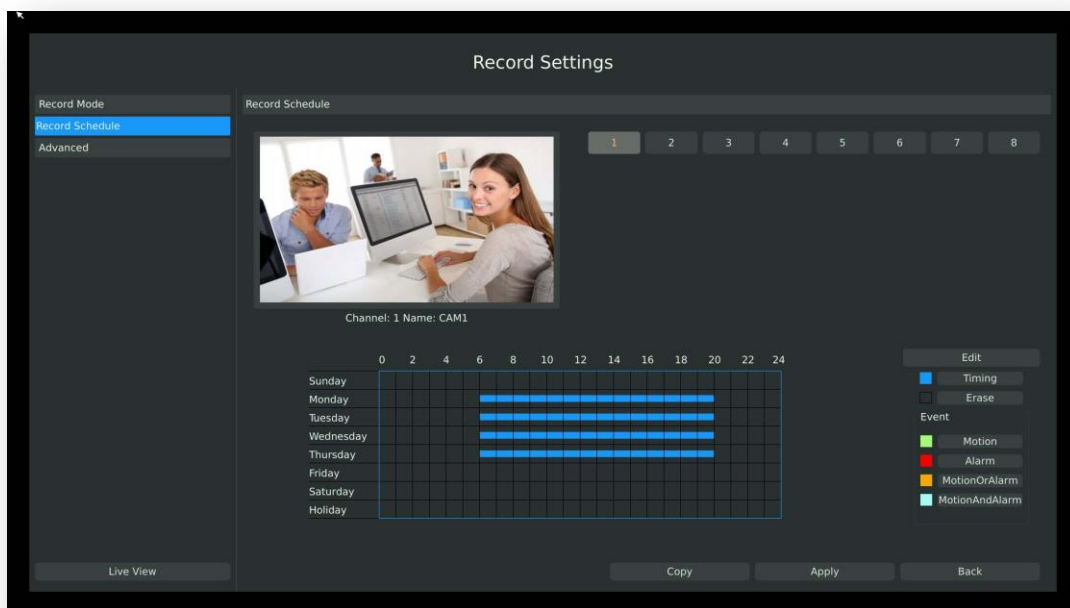

F-3.4.12

Step4. Copy the recording settings to other channels.

Select [Copy] to copy the same settings to other channels. And click [OK] to save the configuration.

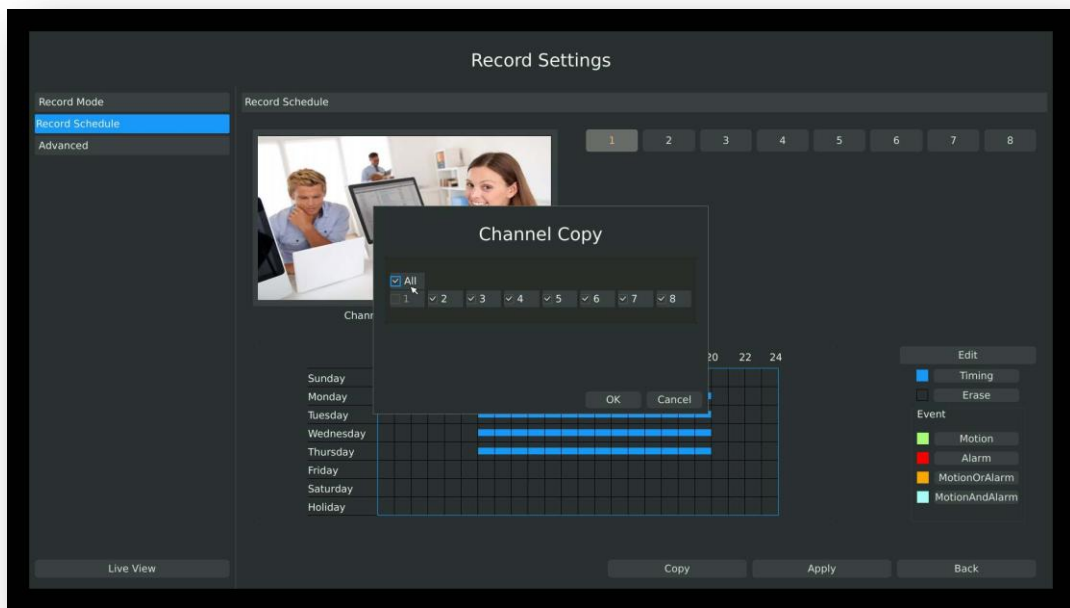

F-3.4.13

3.4.2 Advanced settings

You can set the advanced settings there.



F-3.4.14

Illustration for Parameters

[Channel Selection]: Select the channel which will be set.


[Post Record]: Enable/Disable post record after the event is over

[Duration Time]: Event pre-record duration before event alarm

[Audio Record]: Select to record audio or not

[Record Stream Type]: Select Main stream or sub stream for record

Lastly choose you can choose the copy button to copy the settings of record for other channels.

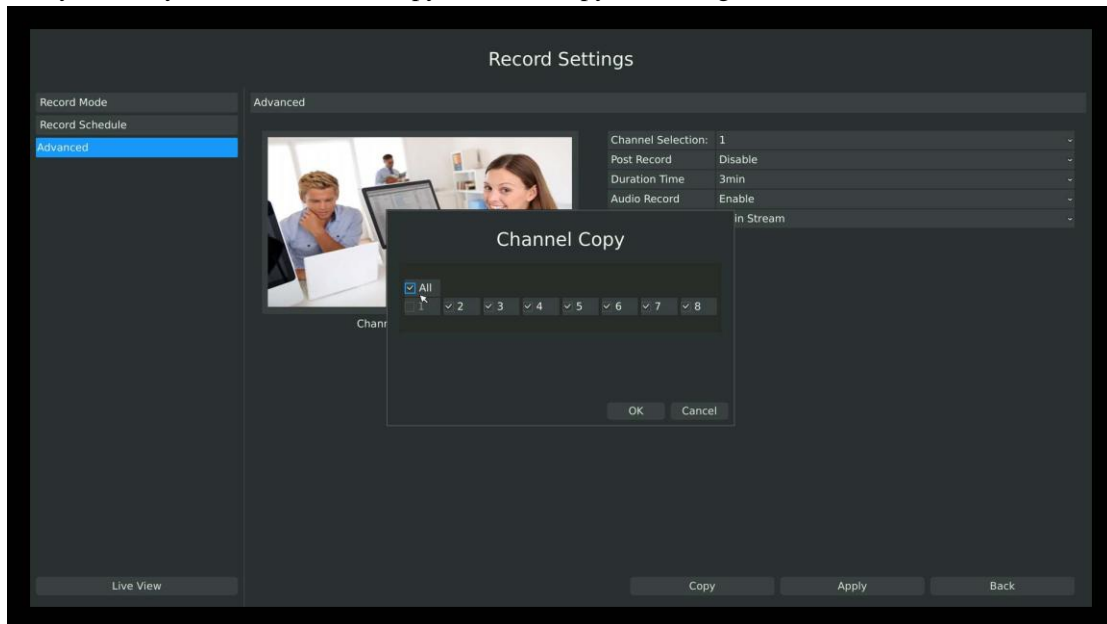


F-3.4.15

3.5 Event Settings

3.5.1 Video Loss


Your NVR can be setup to detect video loss and trigger an action.

Step1. Enter video loss configuration interface by clicking Main Menu→Event→Video Loss .

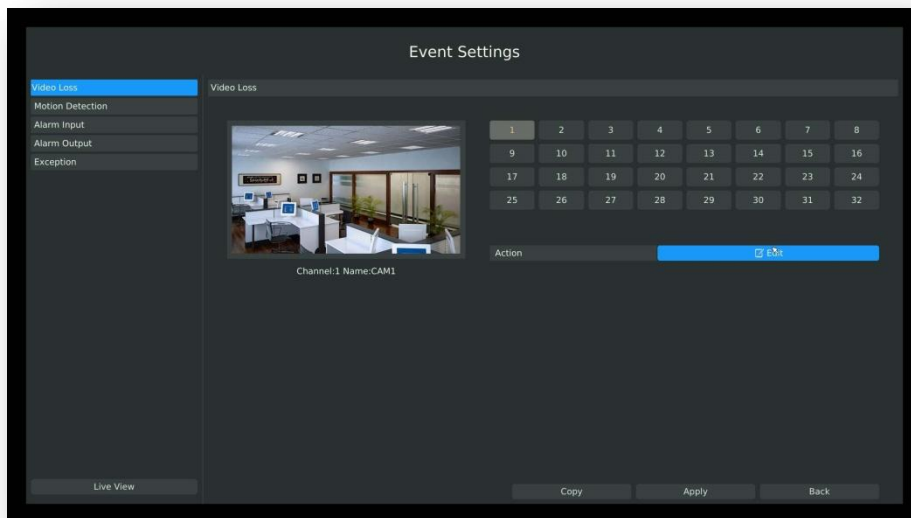

F-3.5.1

Step2. Select a desired channel and click [Edit] to configure video loss.

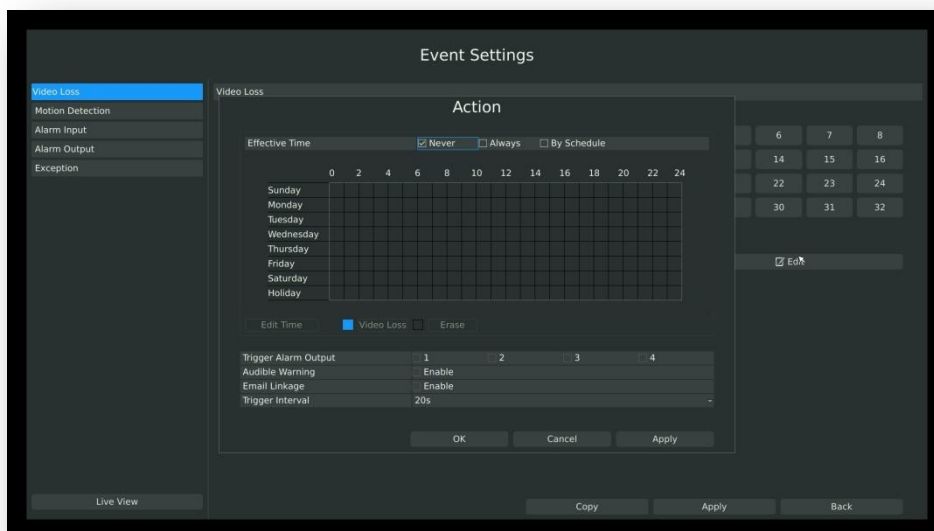

F-3.5.2


Step3. Select effective time to setup when you want to trigger actions once video loss is detected.

Effective Time Never Always By Schedule

[Never]: Your NVR will not trigger any actions when [Never] button is checked. No matter the [Audible Warning] or [Email Linkage] checkboxes are checked or not.


[Always]: Your NVR will always trigger actions when [Always] button is checked. Please make sure [Audible Warning] or [Email Linkage] is checked.

[By Schedule]: You can drag the mouse to draw certain area in schedule setting zone, show as below:

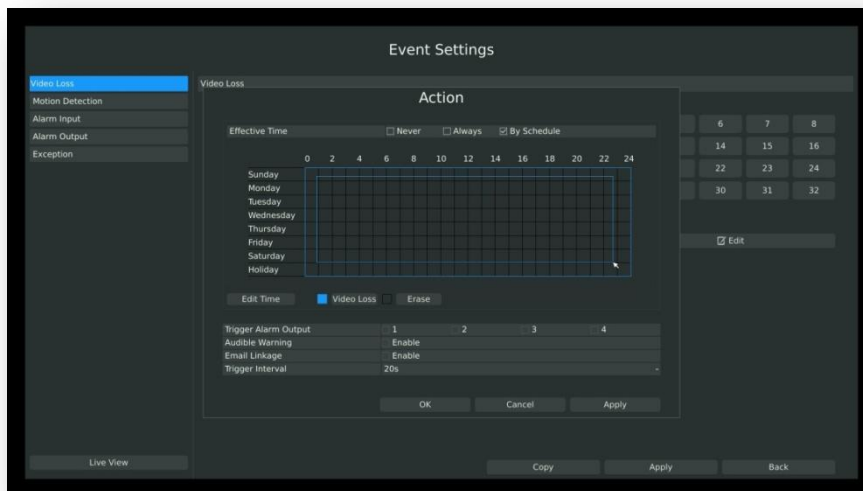


F-3.5.3

After dragging this will show as below:

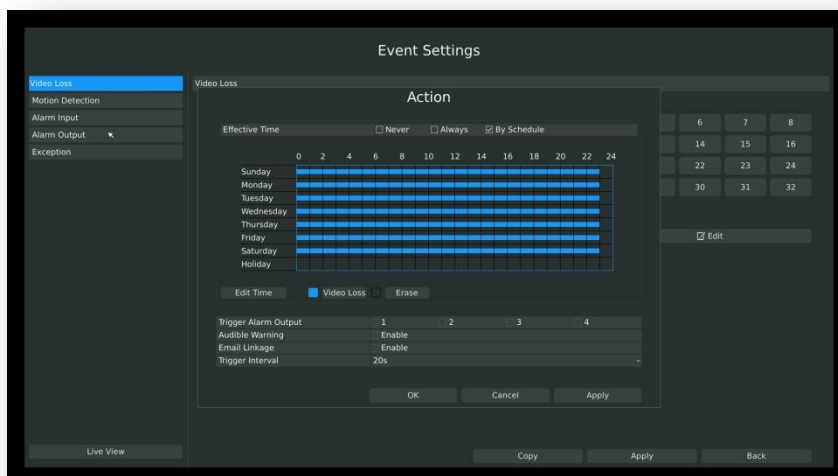

F-3.5.4


Or click [Edit Time] to set schedules. Schedule can be set for all week or any day of the week with up to 12 time periods per day. Video loss actions take effect in the scheduled period only.

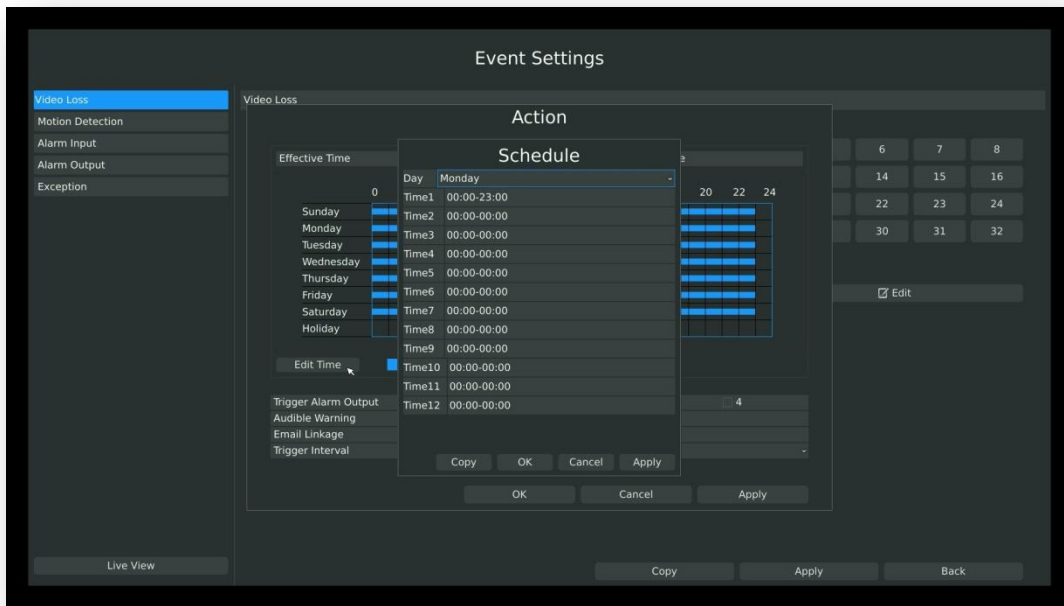

F-3.5.5

Note: Time periods cannot overlap with each other.

Step4. Click [Copy] to copy the video loss schedule to other weeks, and then click [OK].

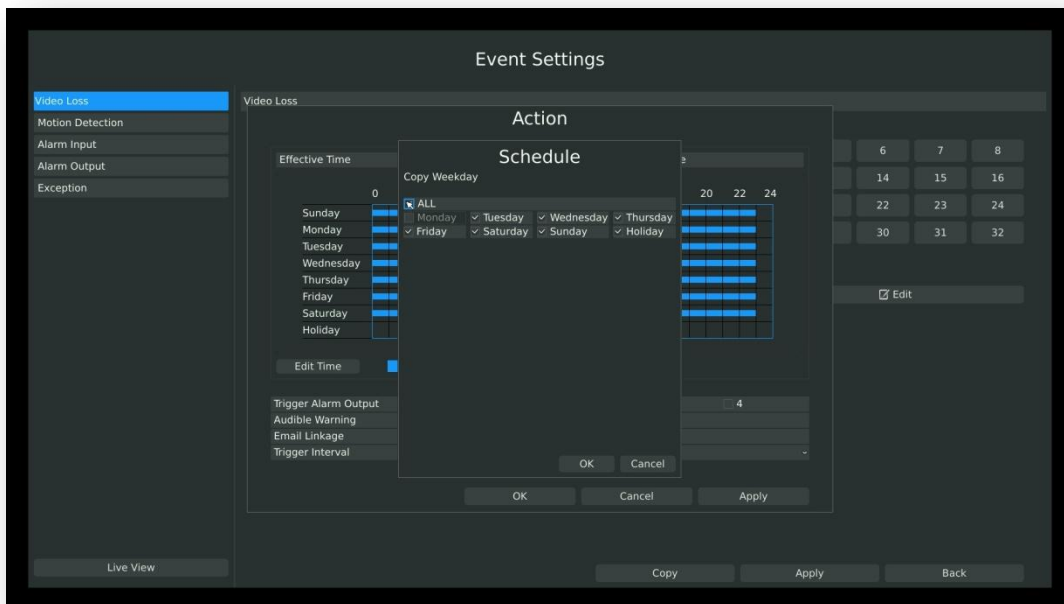

F-3.5.6

Step5: Select actions you want when video loss is detected.

Trigger Alarm Output	<input type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4
Audible Warning	<input type="checkbox"/> Enable			
Email Linkage	<input type="checkbox"/> Enable			
Trigger Interval	20s			

[Trigger Alarm Output]: Select whether trigger the alarm output or not when video loss is detected.


Audible Warning: Trigger an audible beep when video loss is detected

Email Linkage: Send video loss note to specified email address when video loss is detected.(Please refer to 3.8.2.4 *Mail configuration* for mail address setting)

Trigger Interval: Set the interval between two events.

Note: These actions will only take response according to effective time you choose

Step6. Click [OK] or [Apply] to confirm the settings. Repeat above steps for other channels. Or click [Copy] to copy settings to other channels.

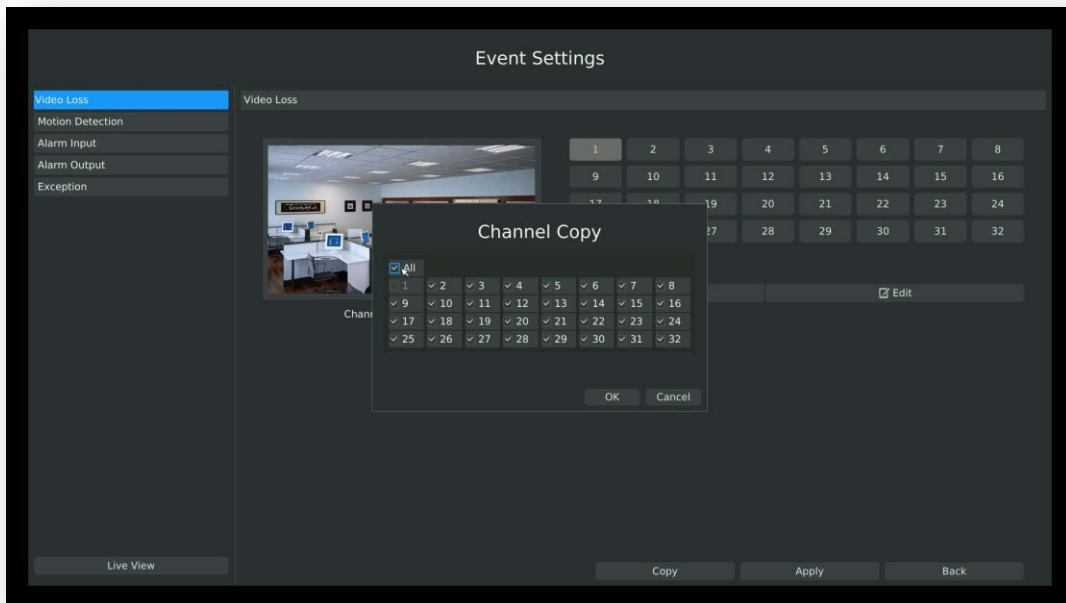

F-3.5.7

3.5.2 Motion Detection

Your NVR can be setup to motion detect and trigger an action. You can set the motion detection on NVR or on IPC web, both sides' settings will be synchronous in both devices.


Step1. Enter motion detection setting interface by clicking Main Menu→Event→Motion Detection.



F-3.5.8

Step2. Set the trigger area for motion detection.

You can set the area by dragging the mouse on live view window:

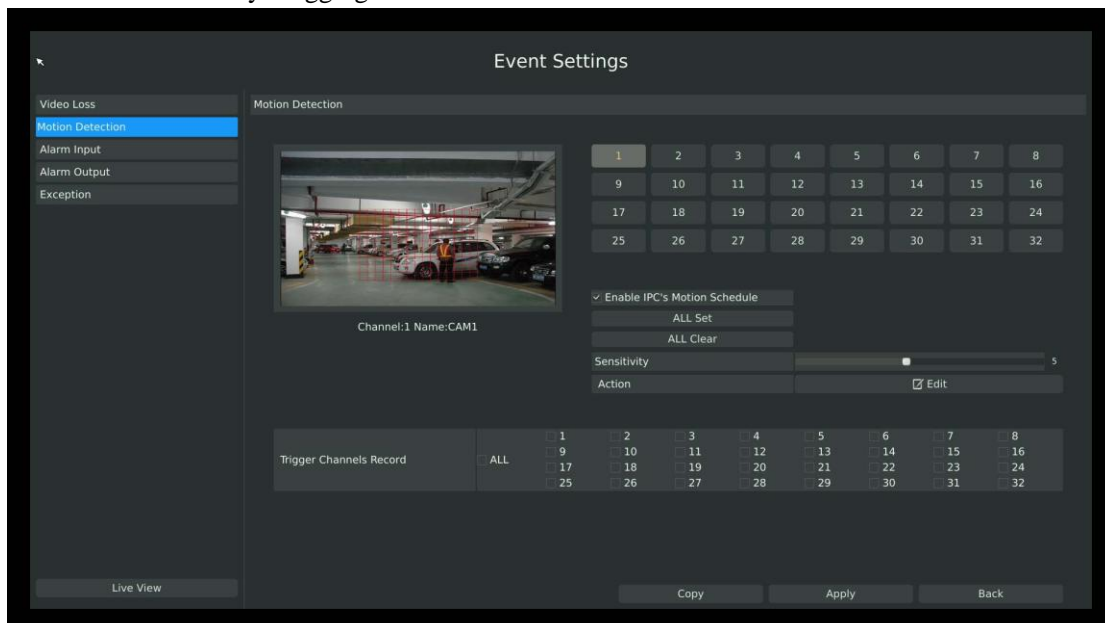


F-3.5.9



F-3.5.10

And meanwhile the area will be synchronized in IPC.

Step2. Select the schedule, sensitivity and trigger area for motion detection.

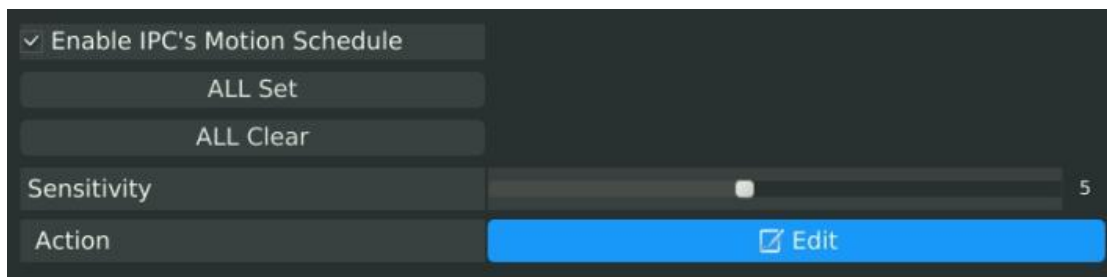

[Enable IPC's Motion Schedule]: If it is enabled here, motion detect will take effect 7*24h; If it is not enabled, motion detect will take effect as the schedule which is **set on the IPC web**.

[All Set]: Set all area as the trigger area;


[All Clear]: Clear all trigger area;

[Sensitivity]: Set sensitivity for motion detection, range from 1 to 10.It will synchronize to IPC if you set sensitivity here;

[Action]: Edit action once motion is detected, refers to next step;

Step3. Select the desired channel and click [Edit] to configure motion detection action.



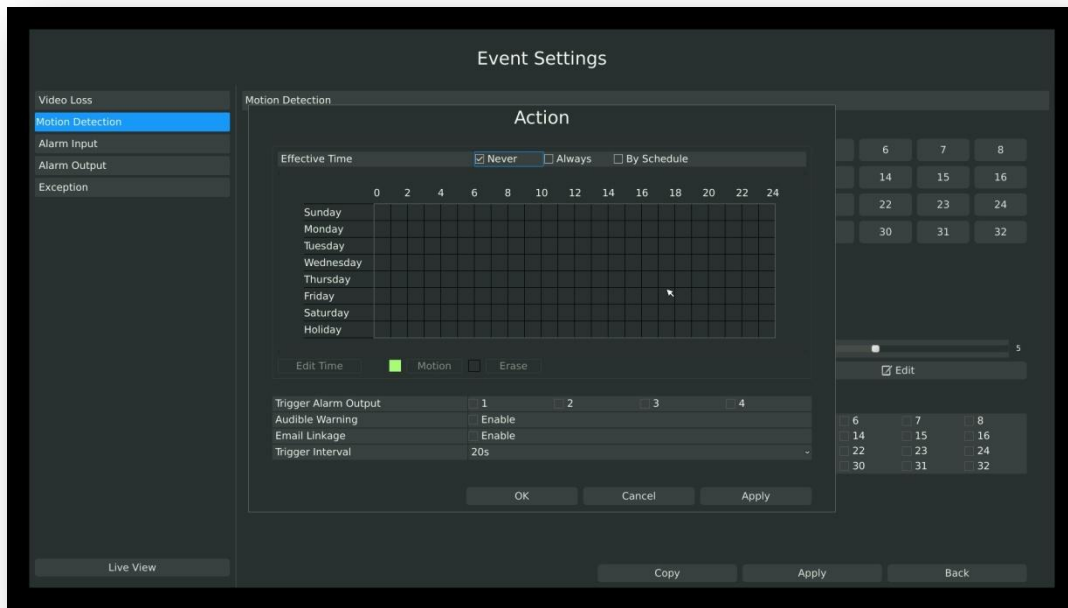

F-3.5.11


Step4. Select effective time to setup when you want to trigger actions once motion is detected.



[Never]: Your NVR will not trigger any actions when [Never] button is checked. No matter the [Audible Warning] or [Email Linkage] checkboxes are checked or not.


[Always]: Your NVR will always trigger actions when [Always] button is checked. Please make sure [Audible Warning] or [Email Linkage] is checked.

[By Schedule]: You can drag the mouse to draw certain area in schedule setting zone, show as below:

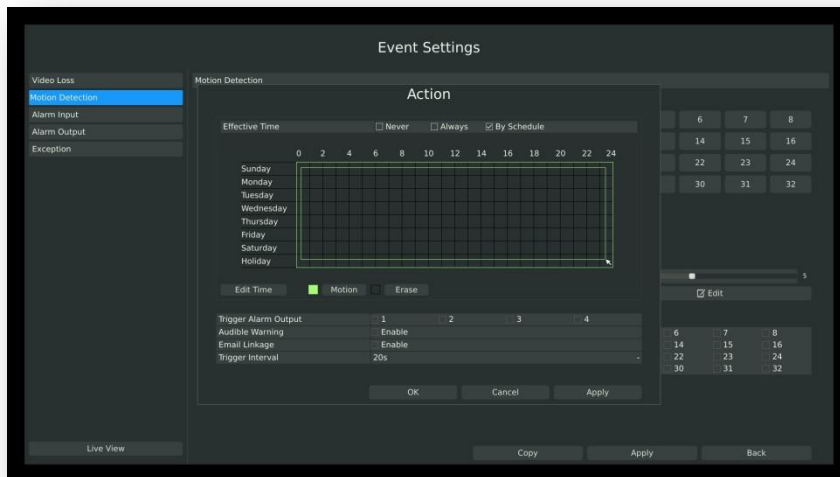


F-3.5.12

After dragging, this channel will show as below:

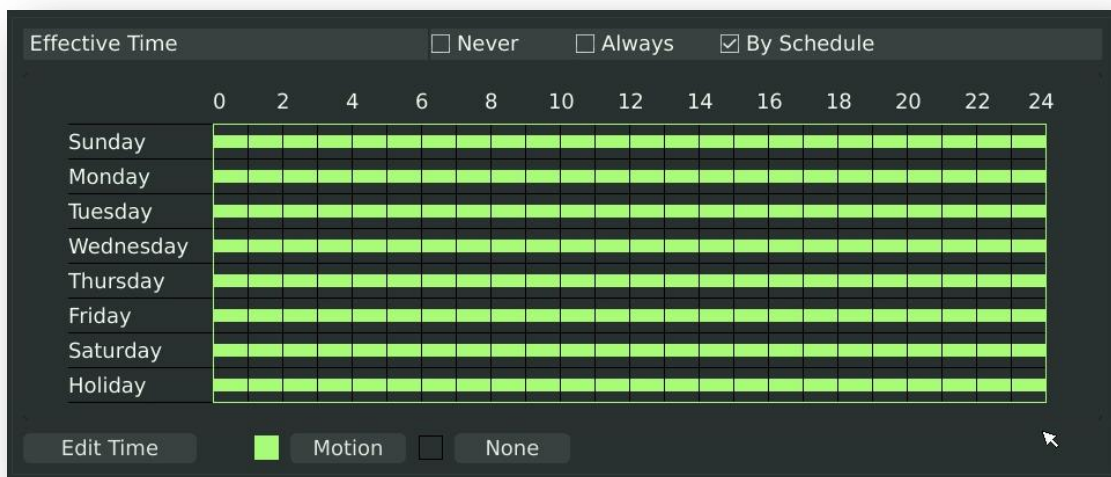

F-3.5.13


Or click [Edit Time] to setup schedules. Schedule can be set for all week or any day of the week with up to 12 time periods per day. Motion detection actions take effect in the scheduled period only.

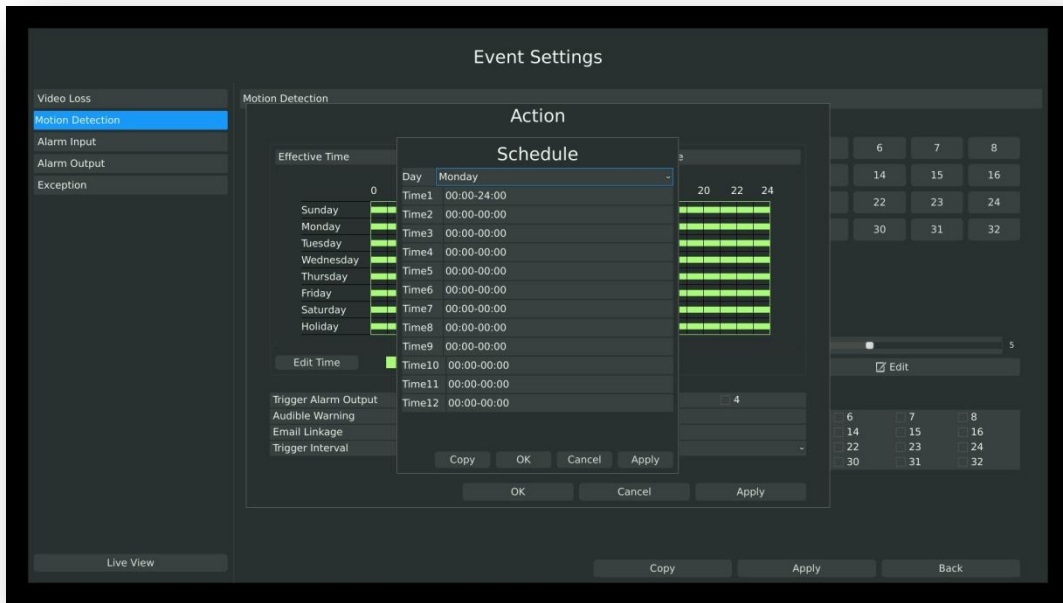

F-3.5.14

Note: Time period cannot overlay with each other

Step5. Click [Copy] to copy the motion detection schedules to other weekdays.

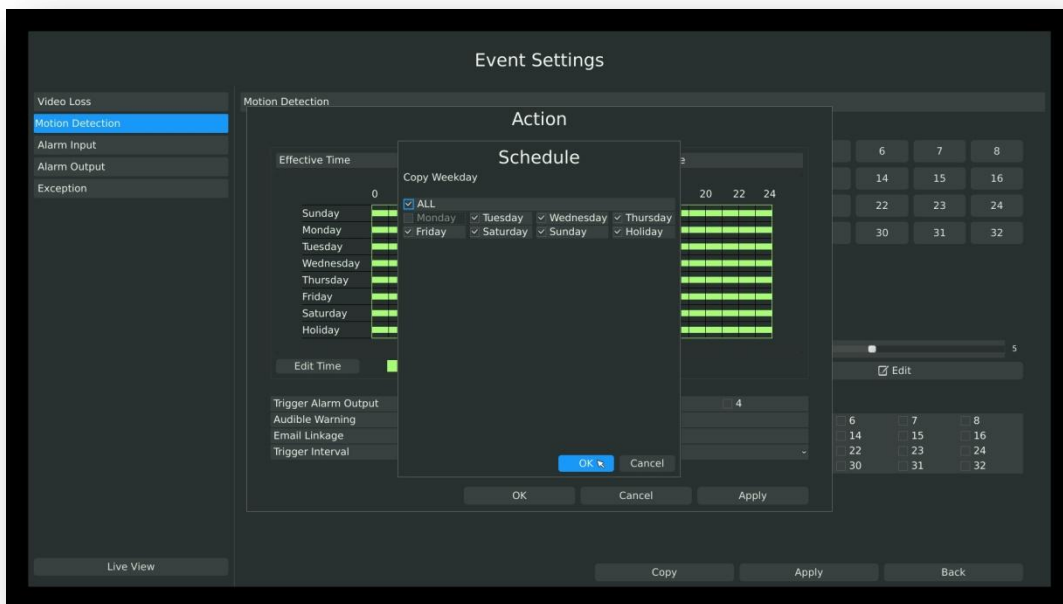

F-3.5.15

Step6. Select actions you want when motion is detected

Trigger Alarm Output	<input type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4
Audible Warning	<input type="checkbox"/> Enable			
Email Linkage	<input type="checkbox"/> Enable			
Trigger Interval	20s			

[Trigger Alarm Output]: Select whether trigger the alarm output or not when video loss is detected.

Audible Warning: Trigger an audible beep when video loss is detected

Email Linkage: Send video loss note to specified email address when video loss is detected. (Please refer to 3.8.2.4 *Mail configuration* for mail address setting)


Trigger Interval: Set the interval between two events.

Note: These actions will only take response according to effective time you choose

Step7:[Trigger Channels Record]: Select channels to trigger for recording when motion is detected by checking the checkboxes under the desired channels. Please make sure other channels has setup motion recording schedule. (Refer to 3.4 Record settings)

Trigger Channels Record	<input type="checkbox"/> ALL	<input type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4	<input type="checkbox"/> 5	<input type="checkbox"/> 6	<input type="checkbox"/> 7	<input type="checkbox"/> 8
		<input type="checkbox"/> 9	<input type="checkbox"/> 10	<input type="checkbox"/> 11	<input type="checkbox"/> 12	<input type="checkbox"/> 13	<input type="checkbox"/> 14	<input type="checkbox"/> 15	<input type="checkbox"/> 16
		<input type="checkbox"/> 17	<input type="checkbox"/> 18	<input type="checkbox"/> 19	<input type="checkbox"/> 20	<input type="checkbox"/> 21	<input type="checkbox"/> 22	<input type="checkbox"/> 23	<input type="checkbox"/> 24
		<input type="checkbox"/> 25	<input type="checkbox"/> 26	<input type="checkbox"/> 27	<input type="checkbox"/> 28	<input type="checkbox"/> 29	<input type="checkbox"/> 30	<input type="checkbox"/> 31	<input type="checkbox"/> 32

Step8. Click [Apply] or [OK] to confirm settings. Repeat above steps to other channel. Or click [Copy] to copy settings to other channel.

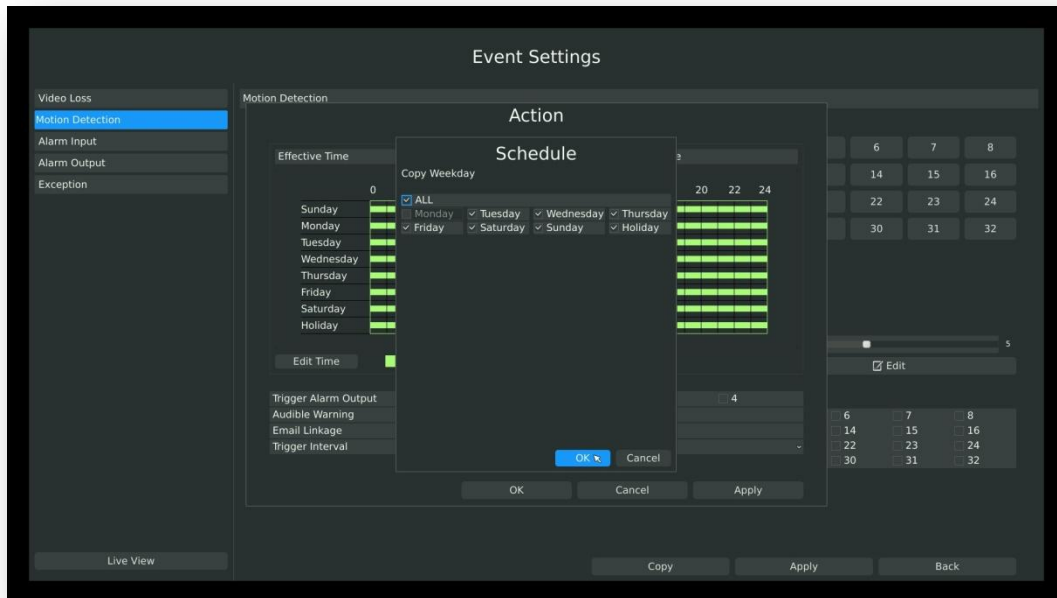


F-3.5.16

3.5.3 Alarm Input

Alarm Input function is supported on MS-N5016, MS-N5116, MS-N8016, MS-N8032.

Step 1: Select Main Menu-Event-Alarm Input:

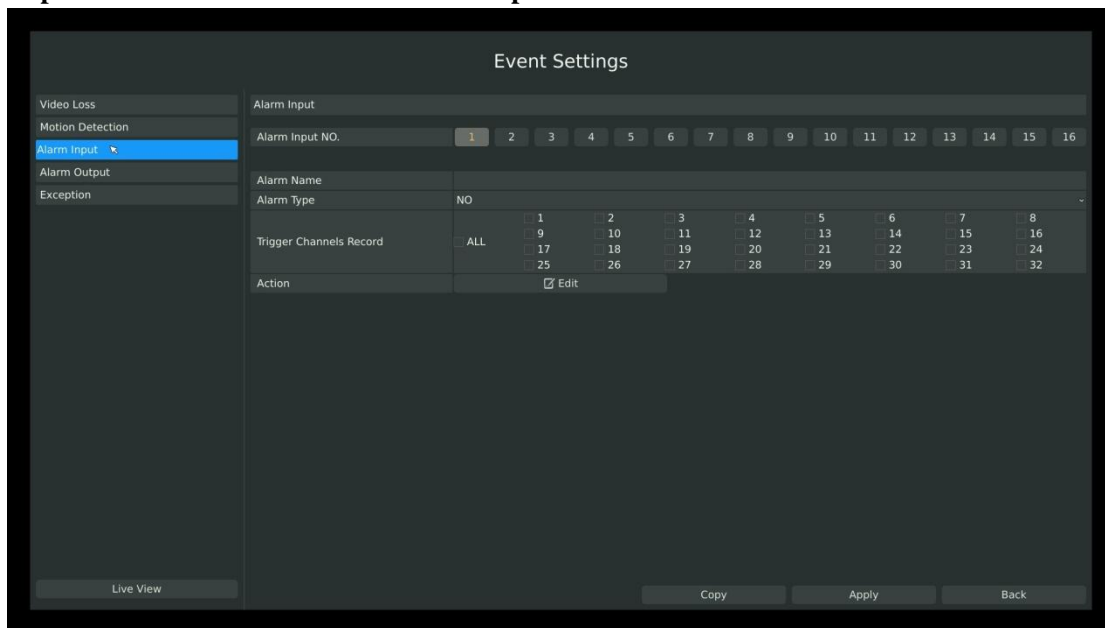

F-3.5.17

Step 2: Set Alarm input channel, Alarm Name, Alarm Type and Record Channels:

Alarm Input NO.	<input checked="" type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4	<input type="checkbox"/> 5	<input type="checkbox"/> 6	<input type="checkbox"/> 7	<input type="checkbox"/> 8	<input type="checkbox"/> 9	<input type="checkbox"/> 10	<input type="checkbox"/> 11	<input type="checkbox"/> 12	<input type="checkbox"/> 13	<input type="checkbox"/> 14	<input type="checkbox"/> 15	<input type="checkbox"/> 16
Alarm Name																
Alarm Type	NO															
Trigger Channels Record	<input type="checkbox"/> 1	<input type="checkbox"/> 2	<input type="checkbox"/> 3	<input type="checkbox"/> 4	<input type="checkbox"/> 5	<input type="checkbox"/> 6	<input type="checkbox"/> 7	<input type="checkbox"/> 8	<input type="checkbox"/> 9	<input type="checkbox"/> 10	<input type="checkbox"/> 11	<input type="checkbox"/> 12	<input type="checkbox"/> 13	<input type="checkbox"/> 14	<input type="checkbox"/> 15	<input type="checkbox"/> 16
	<input type="checkbox"/> 17	<input type="checkbox"/> 18	<input type="checkbox"/> 19	<input type="checkbox"/> 20	<input type="checkbox"/> 21	<input type="checkbox"/> 22	<input type="checkbox"/> 23	<input type="checkbox"/> 24	<input type="checkbox"/> 25	<input type="checkbox"/> 26	<input type="checkbox"/> 27	<input type="checkbox"/> 28	<input type="checkbox"/> 29	<input type="checkbox"/> 30	<input type="checkbox"/> 31	<input type="checkbox"/> 32
	<input type="checkbox"/> ALL															
	<input checked="" type="checkbox"/> Edit															

F-3.5.18

[Alarm Input NO]: The channel which has input signal;


[Alarm Name]: Set a name for the alarm;

[Alarm Type]: Select alarm type: NO or NC;

[Trigger Channels Record]: Once the channel in the [Alarm Input No] has alarm input, which channels will be triggered to record. Refer to 3.4 Record Settings;

Step3: Set action for alarm input by click:


Action	<input checked="" type="checkbox"/> Edit
--------	--

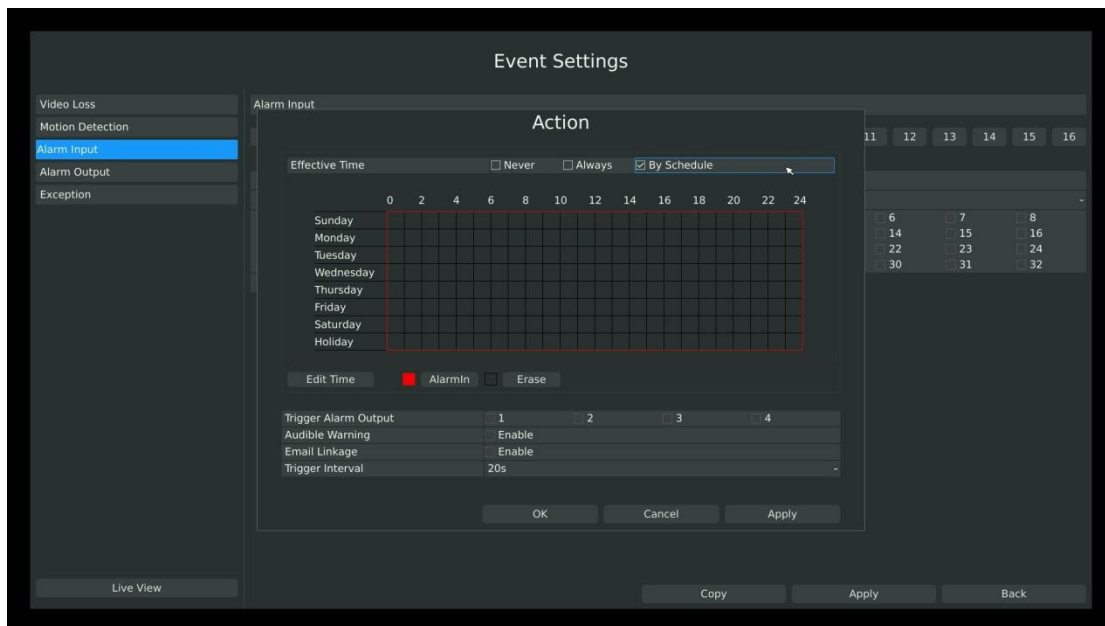

F-3.5.19

You need to set **1.Effective time** and **2.Action** on this Action Interface:

1. Effective time:

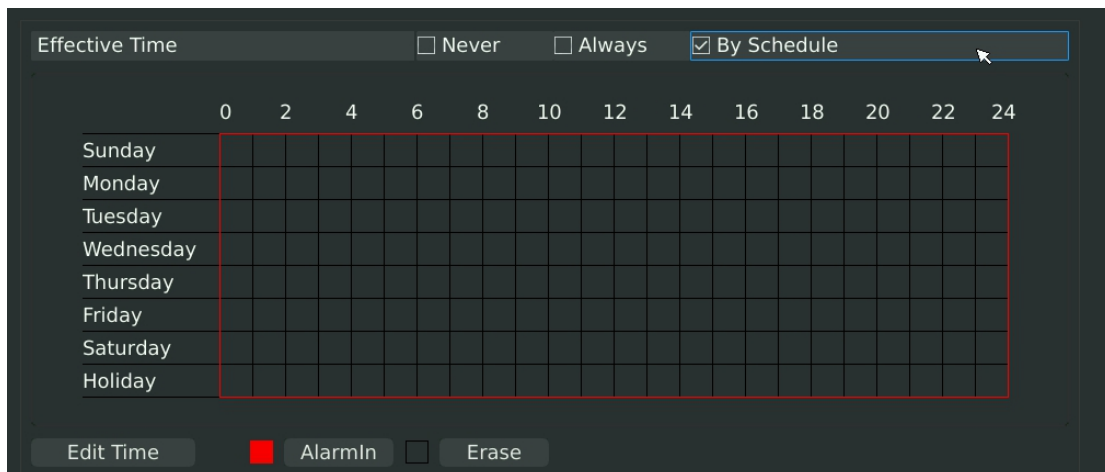

F-3.5.20

You can set three different modes for effective time:


[Never]: Will have no action triggered if it is checked;

[Always]: Will always trigger the action if checked;

[By Schedule]: Will take effect by the schedule you set.

If you choose By Schedule, you need to set schedule by 1.drag the mouse on the time schedule area or 2.by click the “Edit Time” button.

2. Action

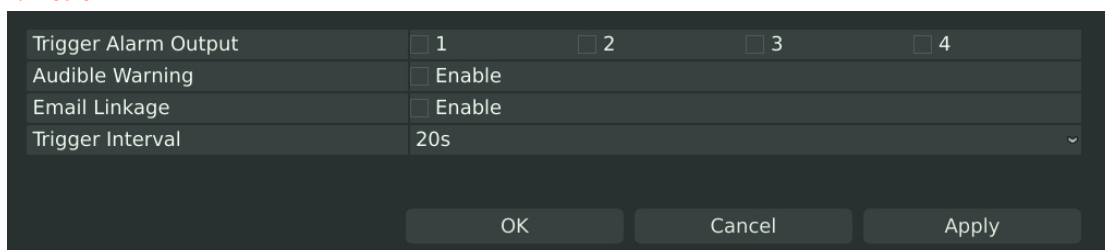

F-3.5.21

[Trigger Alarm Output]: Select whether trigger the alarm output or not when video loss is detected.

Audible Warning: Trigger an audible beep when video loss is detected

Email Linkage: Send video loss note to specified email address when video loss is detected.(Please refer to 3.8.2.4 *Mail configuration* for mail address setting)

Trigger Interval: Set the interval between two events.


Note: These actions will only take response according to effective time you choose.

Lastly need to APPLY these settings to take effect.

3.5.4 Alarm Output

Alarm Output function is supported on MS-N5016, MS-N5116, MS-N8016, MS-N8032.

Step 1: Select Main Menu-Event-Alarm Output:

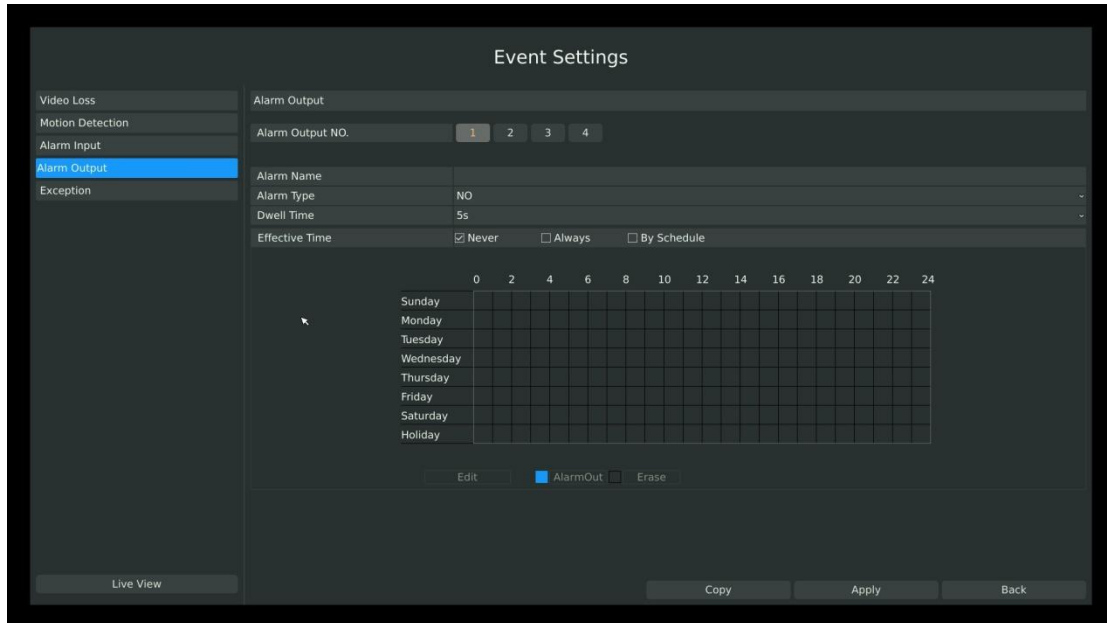

F-3.5.22

Step 2: Set Alarm output channel, Alarm Name, Alarm Type and Record Channels:

Alarm Output NO.	1 2 3 4
Alarm Name	
Alarm Type	NO
Dwell Time	5s


[Alarm Output NO]: The channel which will output the alarm signal;

[Alarm Name]: Set a name for the alarm;

[Alarm Type]: Select alarm type: NO or NC;

[Dwell Time]: Set the output time for alarm, if that is too long when alarm out is outputting, you can select the Manually Clear to stop it.

Step3: Select Effective Time for alarm output:

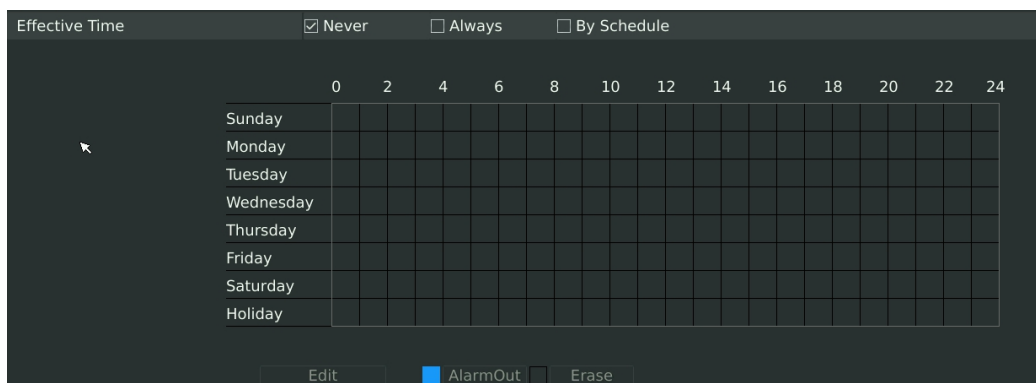

F-3.5.23

You can set three different modes for effective time:

[Never]: Will have no action triggered if it is checked;

[Always]: Will always trigger the action if checked;

[By Schedule]: Will take effect by the schedule you set.


If you choose By Schedule, you need to set schedule by 1.drag the mouse on the time schedule area or 2.by click the “Edit Time” button.

Lastly need to APPLY these settings to take effect.

3.5.4 Exception

Milesight NVR support exception alarm hint for 1. Network Disconnected; 2 .HDD Full; 3.Record Fail; 4.HDD Error;

Step1. Enter Exception by clicking Main Menu-Event-Exception:

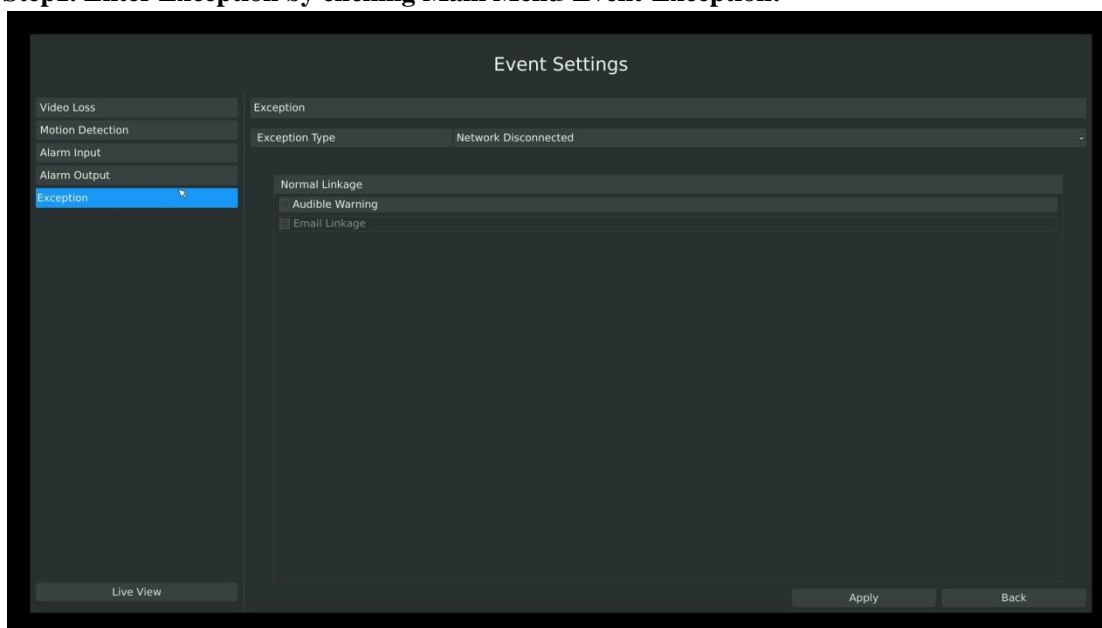

F-3.5.24

Step2. Select Exception Type:

There are 4 kinds of alarm type:

[Network Disconnected]: Lost of network;

[HDD Full]: When HDD is full. It usually happened when Recycle Mode is OFF.

[Record Fail]: When record Failed. Including HDD Error, HDD Full, no HDD and so on.

[HDD Error]: When HDD Error.

Step2. Select alarm type:

[Audible Warning]: Will trigger audio alarm if checked;

[Email Linkage]: Will send alarm Email if checked.


3.6 Status

You can have a quick view of the information of the device, network, camera, disk and event. This part is only for your rapid reference. If you want to make any configuration, please go to corresponding parts accordingly.

3.6.1 Device Information

Step: Enter Device information menu by clicking Main Menu→State→Device Information

It will show you information in F-3.6.1, including: Device ID, Device Name, Hardware Version, Software Version, and Serial Number.

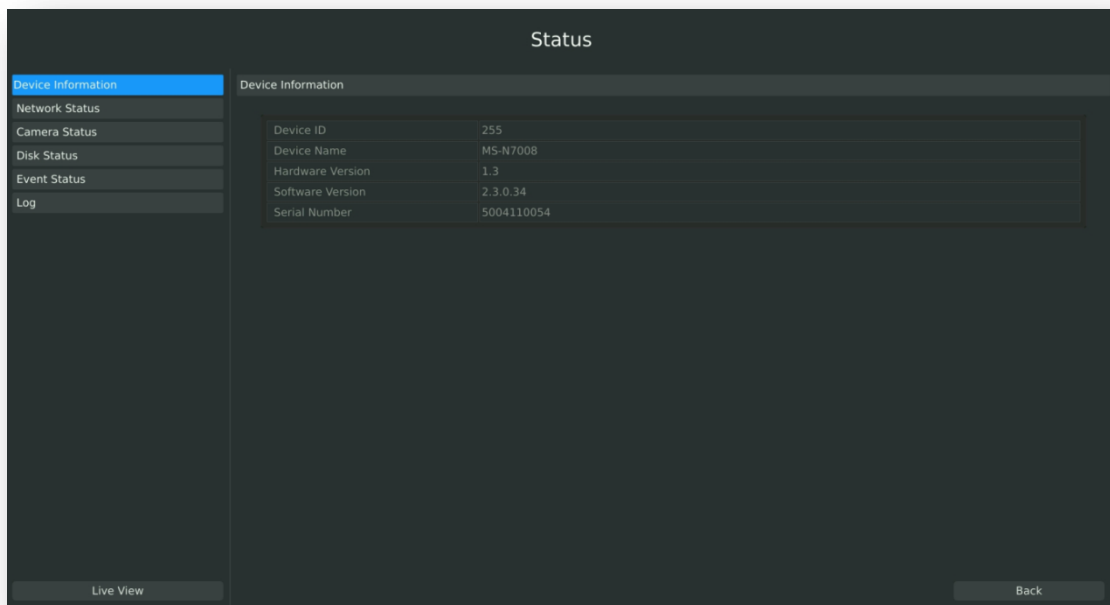

F-3.6.1

3.6.2 Network Status

Step: Enter Network Status menu by clicking Main Menu→State→Network Status

It will show you information in F-3.6.2, including: Connection, Mode, DHCP, MTU(B), IP Address, Net mask, Gateway, MAC, Preferred DNS Server, Alternate DNS Server, Receive Rate, and Send Rate.




F-3.6.2

3.6.3 Camera Status

Step: Enter camera status menu by clicking Main Menu→State→Camera Status

It will show you information in F-3.6.3, including: Channel, Name, Enable, IP Address, Record, Frame Rate, Bitrate, Resolution and State.

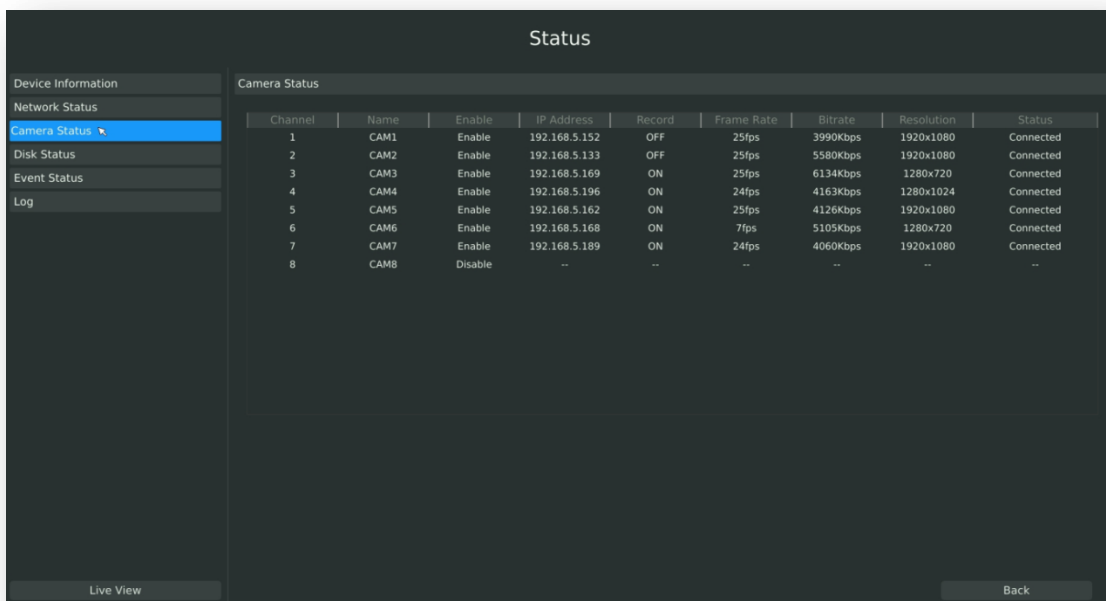


F-3.6.3

3.6.4 Disk Status

Step: Enter disk status menu by clicking Main Menu→State→Disk Status

It will show you information in F-3.6.4, including: Port, Vendor, State, Total(GB), Free(GB), HDD Type, In Use, and Recycle Mode. You can see the Total Capacity (GB) and Available Capacity (GB) as below:

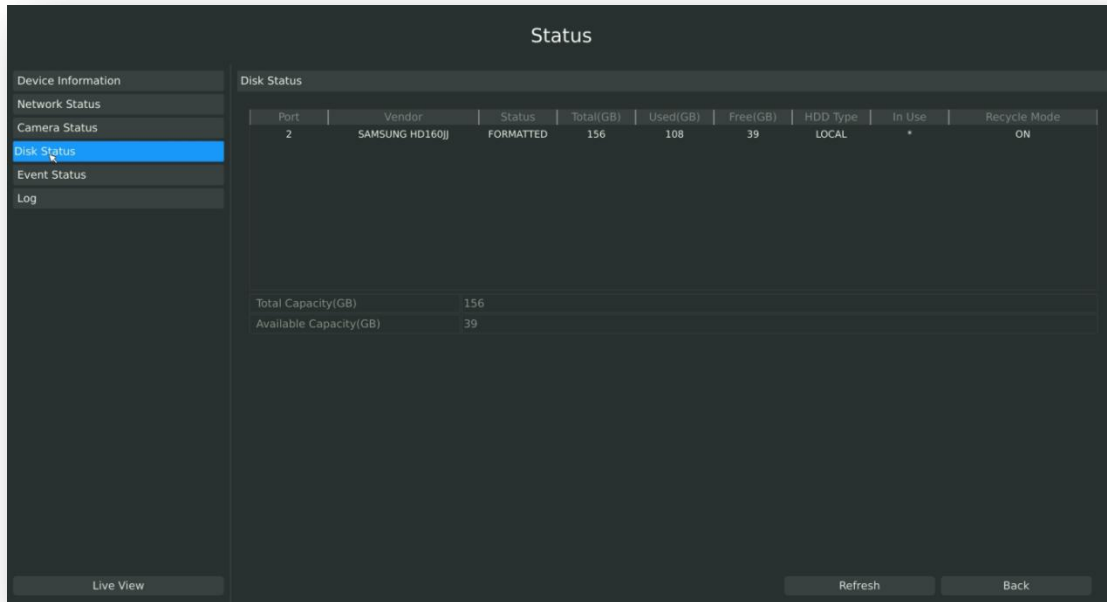


F-3.6.4

3.6.5 Event Status

3.6.5.1 Alarm Status

Step: Enter alarm page by clicking Main Menu→State→Event Status


It will show you the Alarm Input List in F-3.6.5.

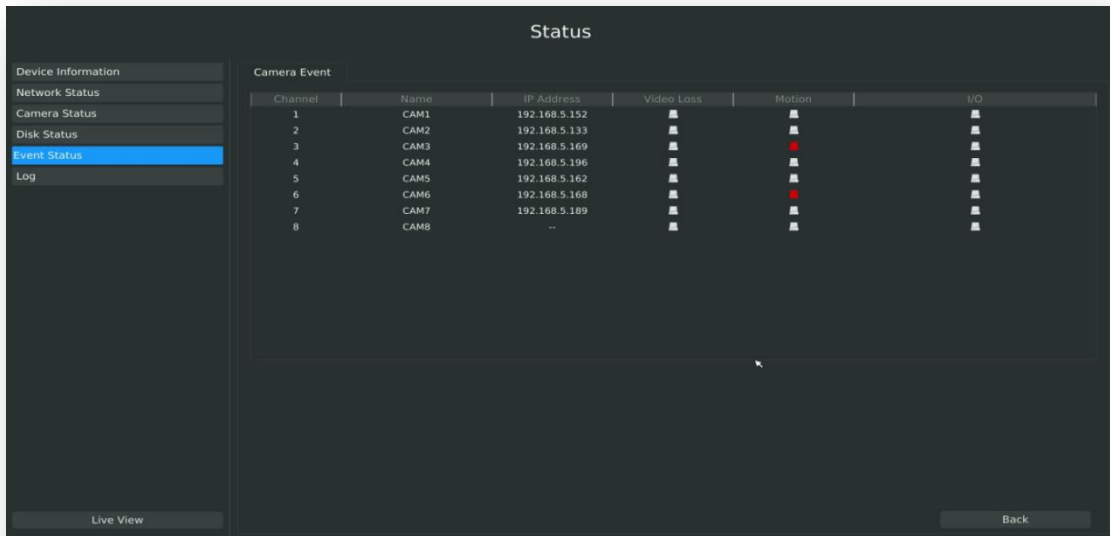


F-3.6.5

3.6.5.2 Camera Event Status

Step: Enter camera event page by clicking Main Menu → State → Event Status.

It will show you the camera event status in F-3.6.6. If the  shows in red, it means the corresponding project is active.

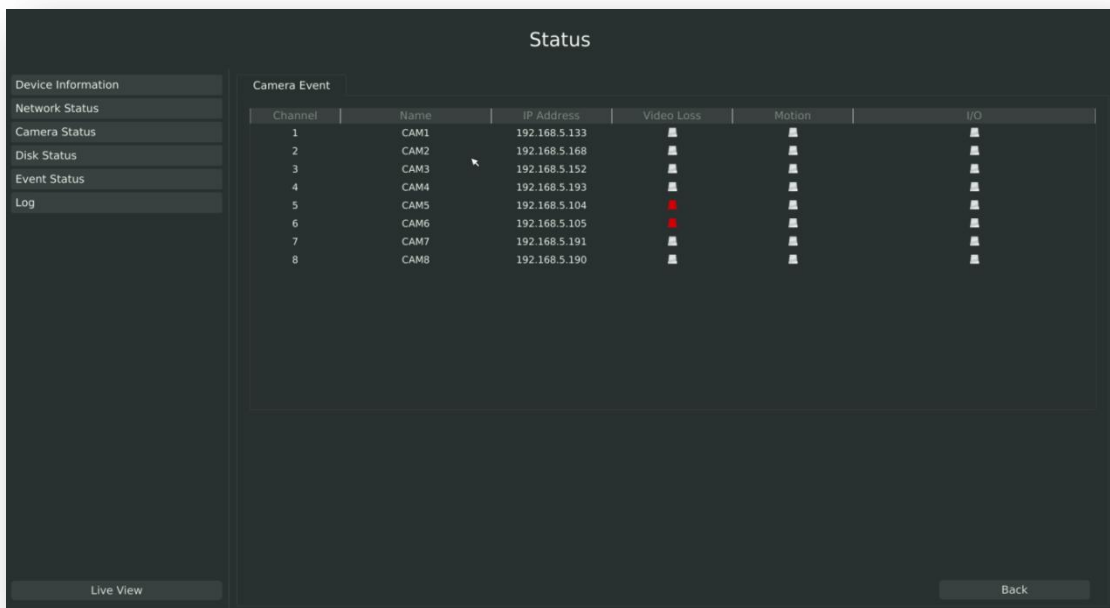





F-3.6.6

3.7 Live View Settings


3.7.1 Live View

Watching a Live View

There are multiple icons on each channel displayed in live view mode, indicating the recording and alarm status of the channel.

Icons	Descriptions
	Indicates video loss or tampering alarm
	Indicates motion detection alarm
	Indicates the current channel is recording. The recording may have been started manually, from a schedule, motion detection, alarm, and/or triggered from motion and alarm.
	Indicates exception alarm and recording.

Use the Right Button of the Mouse in Live View

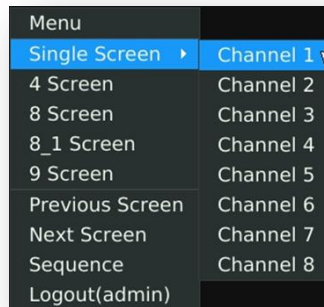

F-3.7.1

Item	Description
Menu	Enter main menu
Single Screen	The channel chosen will spread the whole screen. You could also reveal this function by double clicking the channel.
Sub Screen Ctrl	Switch to sub screen to operate.
Previous Screen	Switch to the previous screen
Next Screen	Switch to the next screen
Sequence	Enable single/multi-screen cruise in live view mode
Sub Sequence	Enable single/multi-screen cruise in AUX live view mode
Logout	Click it to logout current user account.

Quick Operation for Live View

Enter the live view interface; left click the channel, the quick menu will appear.

Quick menu operations include playback, recording manually, snapshot, PTZ, zoom, and image configuration.


Quick Menu Instructions for Main Output Live View



Icon	Description	Icon	Description	Icon	description
	Manually recording		Image configure		PTZ Control
	Sound on/off		Digital zoom		Snapshot by manually
	Close				

3.7.2 Layout Configuration


Step1: Enter layout configuration menu by clicking Main Menu→Live View→Layout configuration

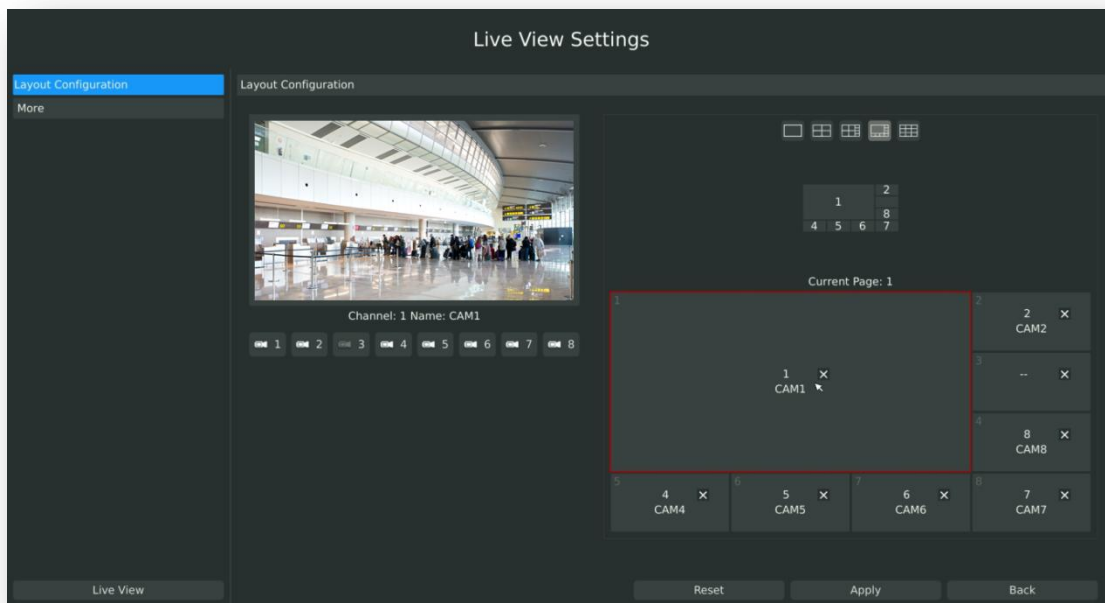

F-3.7.2

You can choose single screen/4/ 8 /8-1/9 screens for layout configuration according to your needs and preferences.

Step2. Click to close a channel, or click a desired channel (shown F-3.7.3) to add in and then click “Apply” to confirm settings. Click “Reset” to reset the layout.

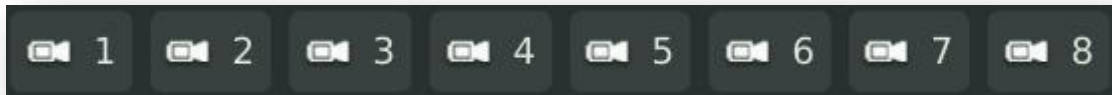


F-3.7.3

3.7.3 More Settings

Live View Parameters Settings

Step: Enter the more setting interface by clicking **Main Menu**→**Live View**→**More**

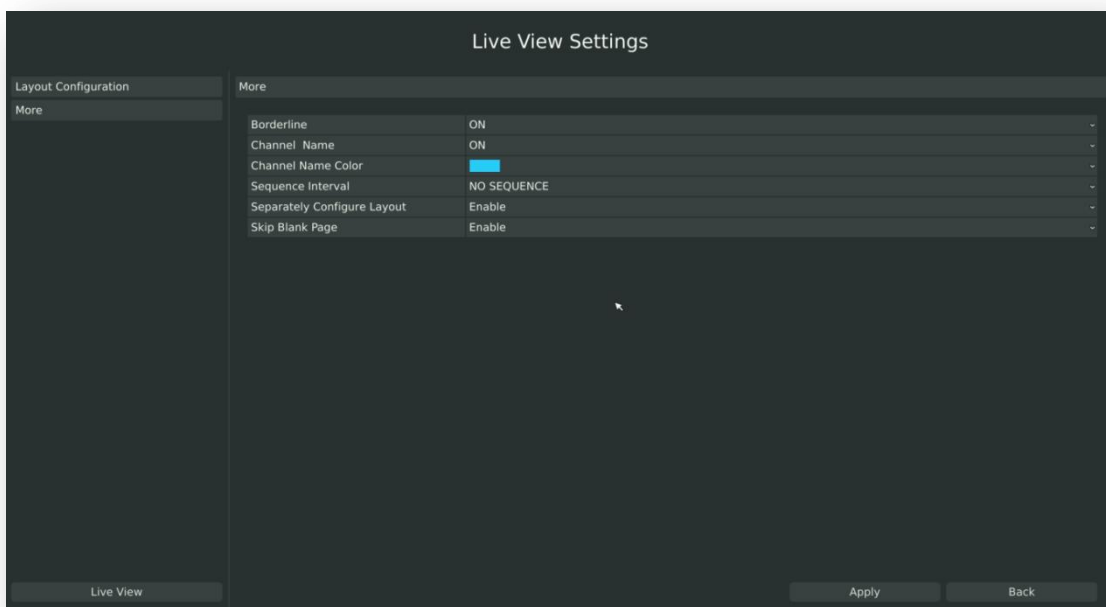

F-3.7.4


Item	Description
Borderline	Borderline ON/OFF
Channel Name	Display the channel name
Channel Name Color	To change the color of the channel name
Sequence Interval	Set sequence interval in live view mode
Separately Configure Layout	To configure channel order of all layouts respectively
Skip Blank Page	Skip blank page in sequence mode

3.8 System Settings

3.8.1 General Setting

Step: Enter general menu by clicking Main Menu→System Settings→General

To setup the general parameters of NVR, including modify the host name, device ID, select resolution, and set system time manually, etc.

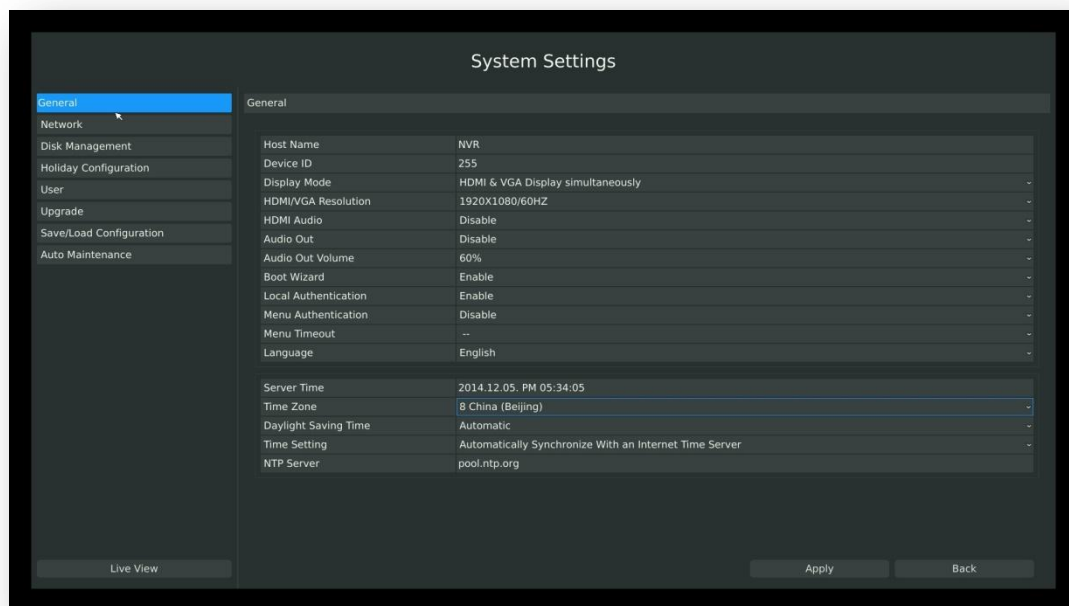


F-3.8.1

3.8.2 Network Settings

3.8.2.1 Basic Configuration

Step: Enter the network setting menu to set the network parameters by clicking Main Menu→System Settings→Network, select “Basic” page

Basic configuration includes working mode, IP address, subnet mask, gateway, MTU, DNS server, etc.

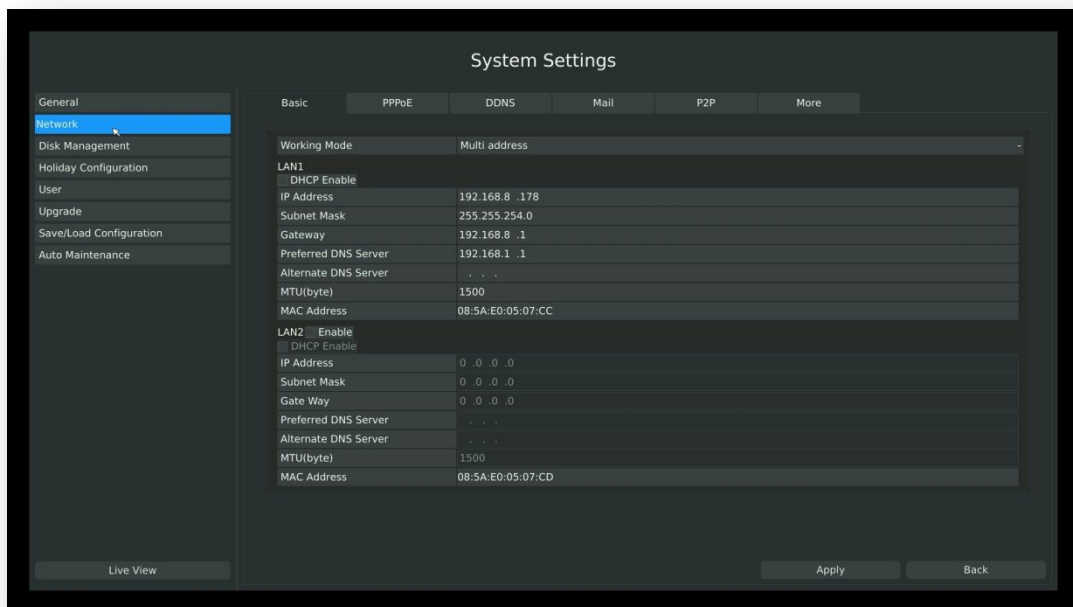

F-3.8.2


Notes:

- 1. Check the DHCP checkbox if there has a DHCP server running in networks.**
- 2. The valid range of MTU is 500~9676.**
- 3. Do not input an IP address conflict with another device.**

3.8.2.2 PPPOE Configuration

Step: Enter PPPOE menu by clicking Main Menu→System Settings→Network. Select “PPPOE” page

Check the PPPoE checkbox to enable the feature, and then input user name, password and confirm password for PPPoE access.

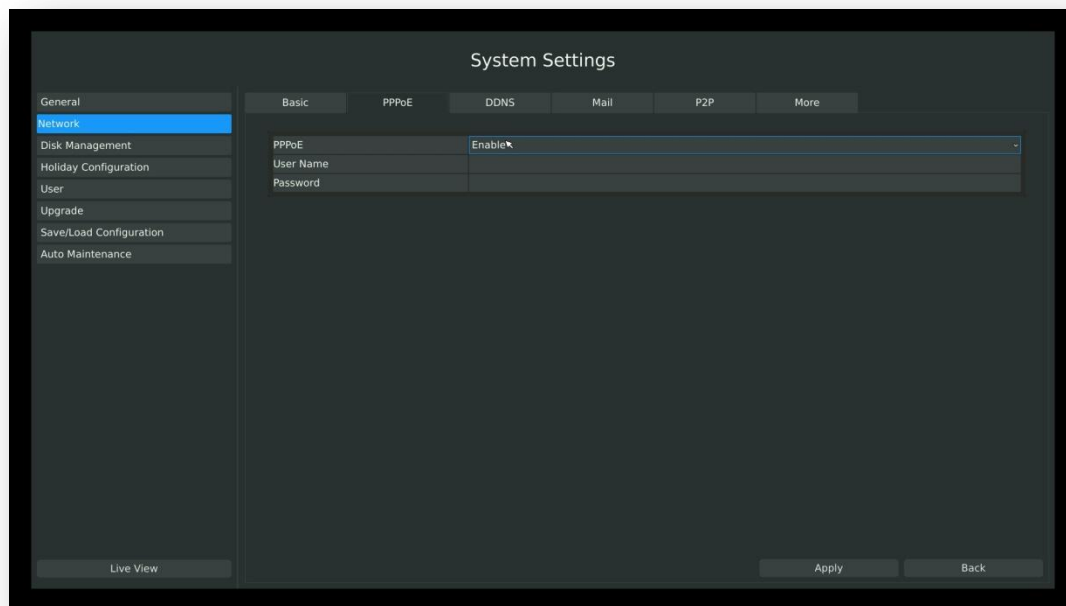

F-3.8.3

Note:

PPPoE user name and password can be obtained from your service provider. Once the setup is completed, a connected status will be shown.

3.8.2.3 DDNS Configuration


If your NVR is setup to use PPPoE to connect public network, you may need to use DDNS (Dynamic Domain Name System) to solve the problems from dynamic IP address.

Steps: Enter DDNS configuration menu by clicking Main Menu→System Settings→Network, Select “DDNS” page

Check the DDNS checkbox to enable the feature. Select “DDNS Server”, and input username, password and host name, and then confirm.

Click [Apply] for application.

Note: “host name” can use letters, figures and hyphen (-), and must begin with letters.

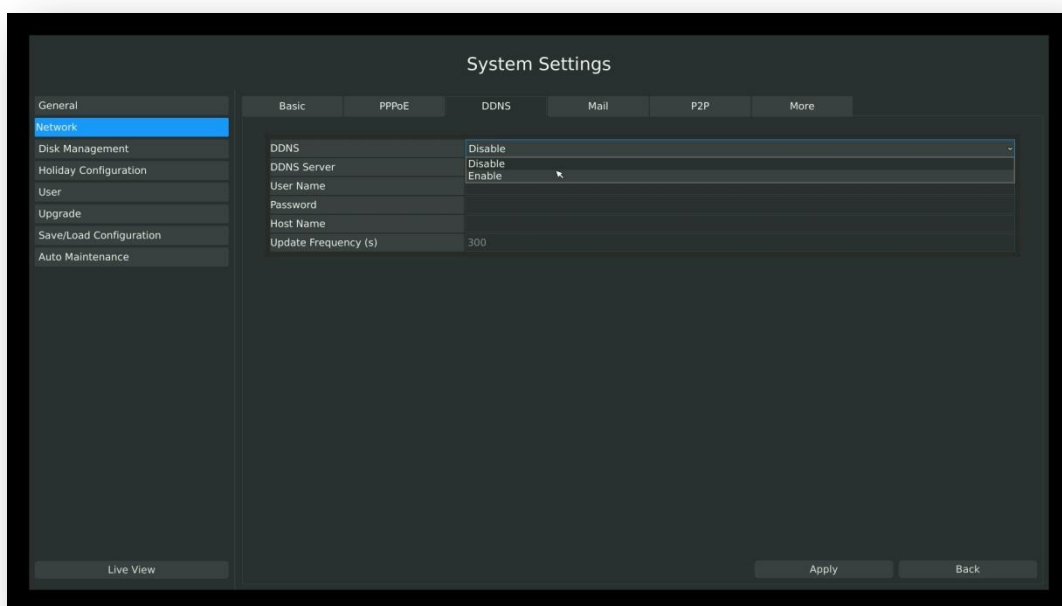


F-3.8.4

3.8.2.4 MAIL Configuration

Check if the SMTP port can be set or not. Please enable SSL/TLS according to actual mailbox. (Some SMTP server needs to secure connection)

Steps: Enter Mail configuration page by clicking Main Menu→System Settings→Network→Mail

Set the Sender E-mail Address, User Name, Password, and SMTP Server:

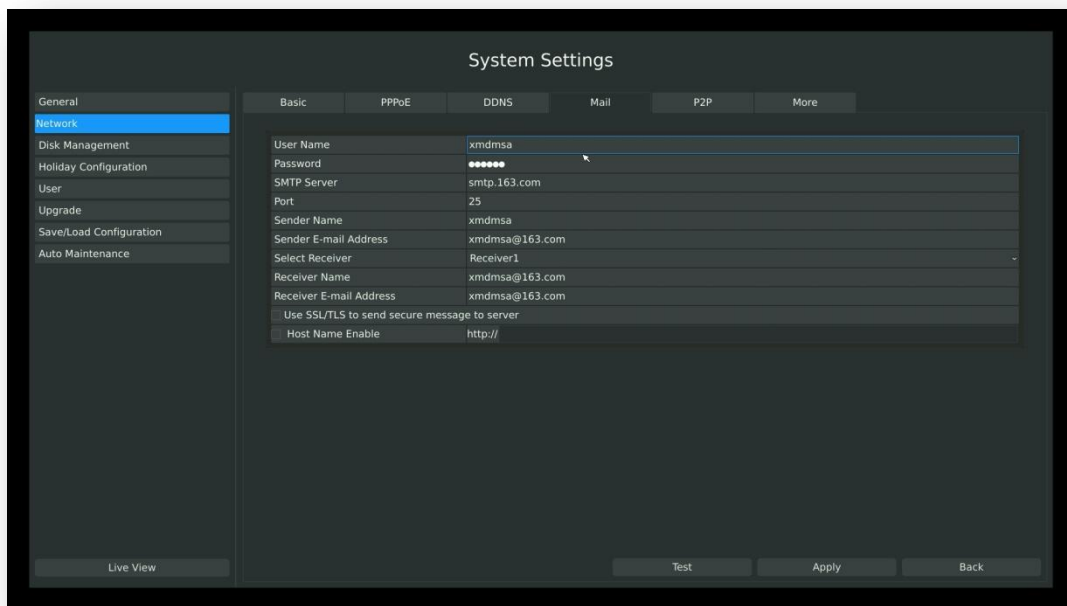

F-3.8.5

[Username]: The E-mail address you choose to send emails.

[Password]: The password of the E-mail.

[SMTP Server]: The SMTP Server of your E-mail.

[Port]: The port of SMTP Server, it's usually 25.

[Sender Name]: Named by yourself for the Sender E-mail.

[Sender E-mail Address]: It must be same with [Username].

[Select Receiver]: You can have 3 receivers once.


[Receiver Name]: Named by yourself for the Receiver E-mail.

[Receiver E-mail Address]: E-mail Address for the receivers.

[Enable SSL/TLS]: Security Protocol of email sending.

[Host Name Enable]: For attaching URL when sending emails.

Select [Test] to check if the Mail function is workable

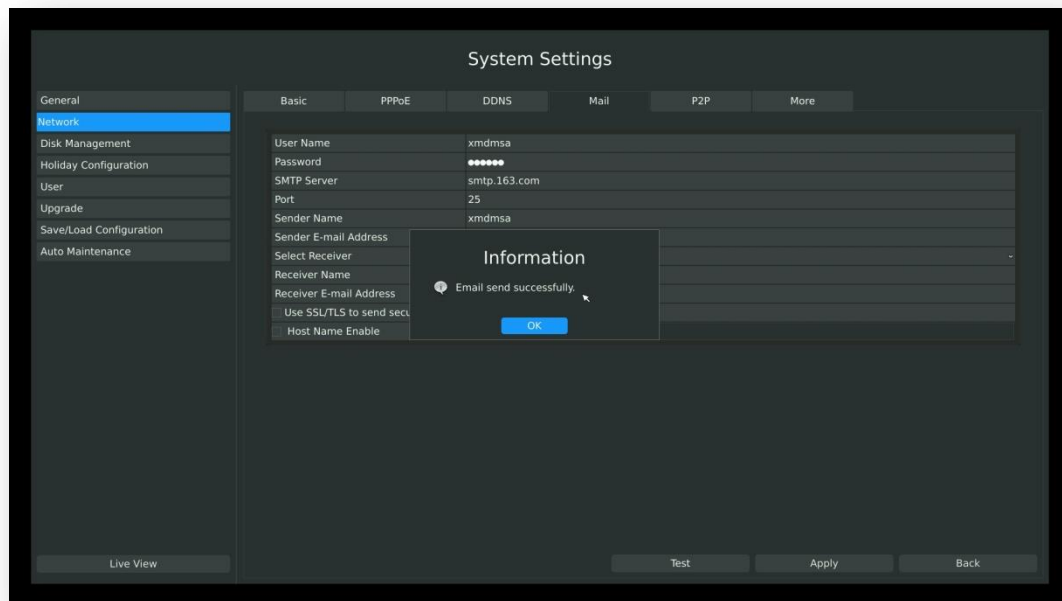

F-3.8.6

Noted:

- 1). You will get a screenshot every time for motion detection email sending.
- 2). If you use a port forward IP of NVR for the Host Name, please type the entire address including the port.
- 3). If click the URL in the alarm emails **within 10 minutes**, you can visit NVR Web GUI without login.




F-3.8.7

3.8.2.5 P2P

You can use M-VMS to watch the remote live view by P2P. With the introduction of P2P, you can watch the NVR Live view from WAN without do any port forwardings on the router.

Right click on the live view and choose “Menu”->“System”->“Network”->“P2P”, you will see the image like bellow:

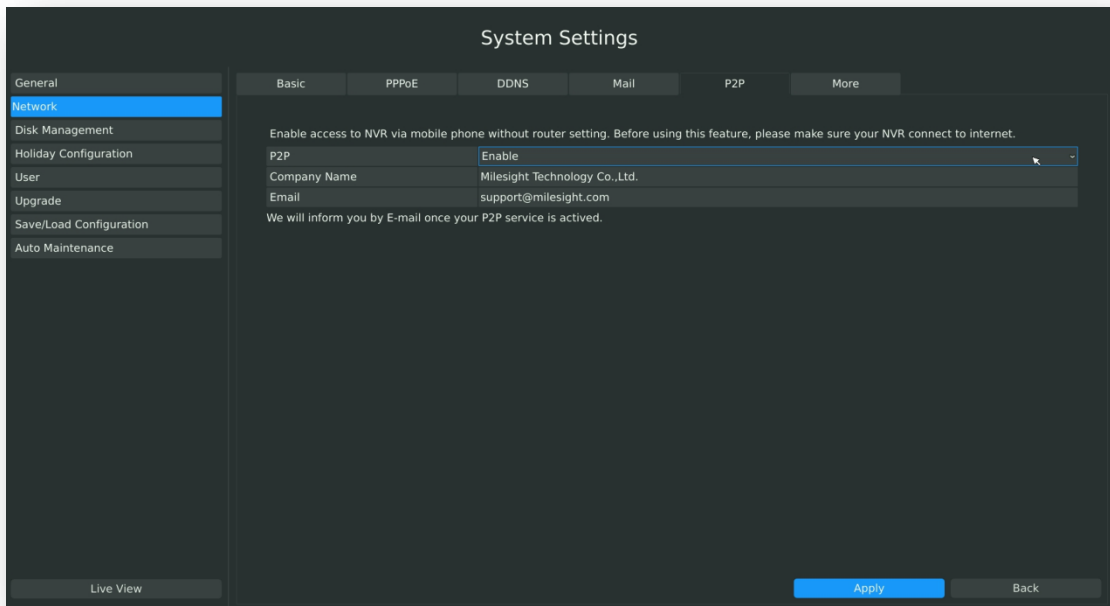


F-3.8.8

1. Choose “Enable” from the drop-down list of “P2P”;
2. Fill in your Company Name or your Individual Name in the “Company Name”;
3. Fill in your Email address in the “Email” for active;
4. Apply the settings.

3.8.2.6 More

Steps :Enter More configuration page by clicking Main Menu→System Settings→Network →More

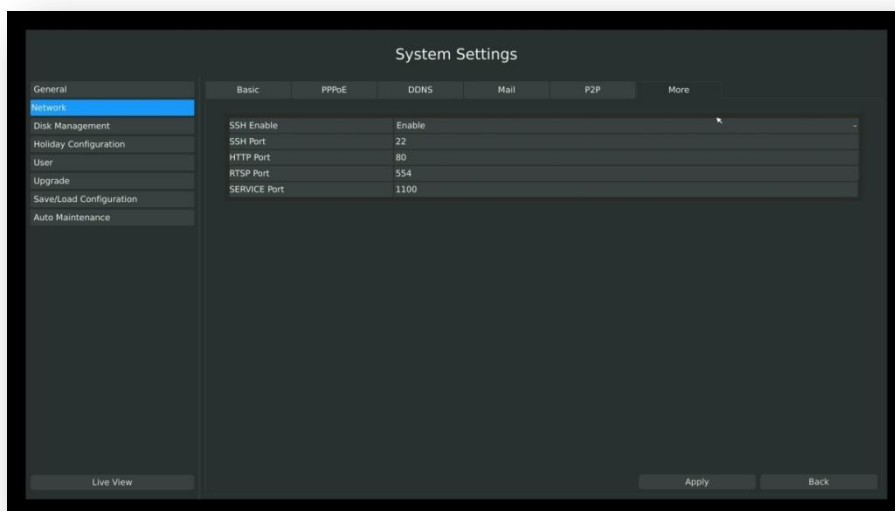

F-3.8.9

SSH Port Setting

Secure Shell (SSH) has many functions; it can replace Telnet, and also provides a secure channel for FTP, POP, even for PPP.

1. Check the SSH Enable checkbox to enable the feature.
2. Please modify SSH ports according to actual application.

Note: The default SSH port is 22.

HTTP Port Setting

The default HTTP port is 80. Please modify HTTP ports according to actual application.

Notes:

- 1. The default HTTP port for IE browser is 80.**
- 2. HTTP port is used for remote network access.**

RTSP Port Setting

Real Time Streaming Protocol (RTSP) is an application layer protocol in TCP/IP protocol system. The default RTSP port is 554. Please modify RTSP port according to actual application.

Note:

- 1. RTSP port is used for remote network live view.**
- 2. RTSP port valid range is 554 or 1024~65535.**

Service Port Setting

Service port is used to remote access when add NVR by mobile device.

The default RTSP port is 1100. Please modify RTSP port according to actual application.

Note:


- 1. You can add this port when using P2P/port mapping/LAN IP to add NVR.**
- 2. When port mapping, you still need map 554 to 554. Only then you can use 1100 to watch the live view by remote WAN.**

3.8.3 Disk Management

3.8.3.1 Disk Configuration

Steps: Enter disk configuration menu by clicking Main Menu→System Settings→Disk Management→Configuration

Configuration page contains the basic information of the disk, see F-3.8.8. Select a disk and click [Format] to format the disk.

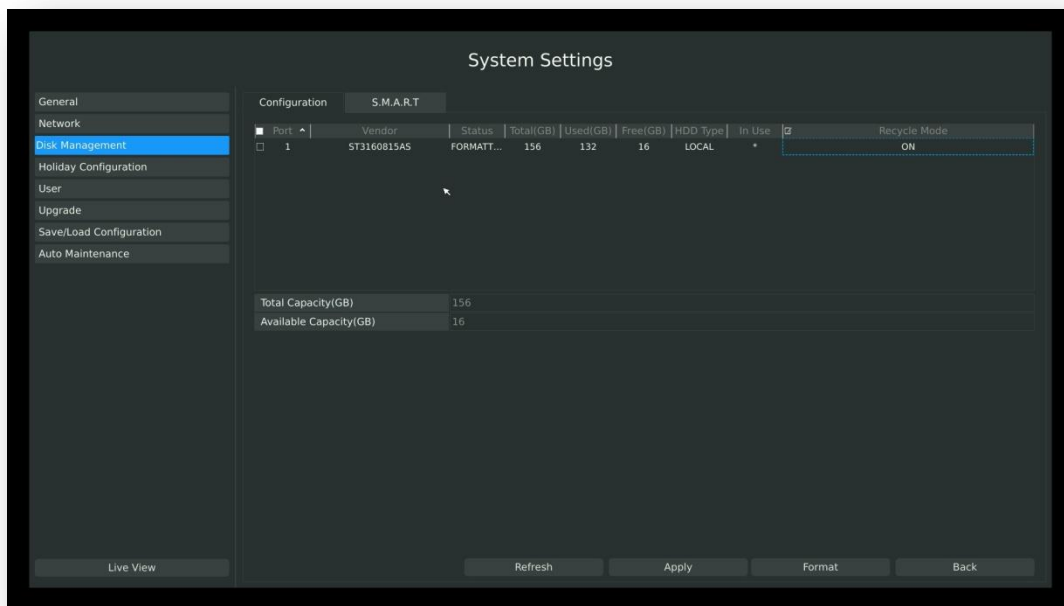


F-3.8.10

3.8.3.2 S.M.A.R.T Detection

S.M.A.R.T detection is a monitoring system of HDD that detects and reports on various indicators of anticipating failures of HDD.

Step: Enter S.M.A.R.T configure page by clicking Main Menu → System Settings → Disk Management → S.M.A.R.T

You can command S.M.A.R.T self-checking function to check the HDD status. Select “Test type”, and click “apply” for S.M.A.R.T detection.

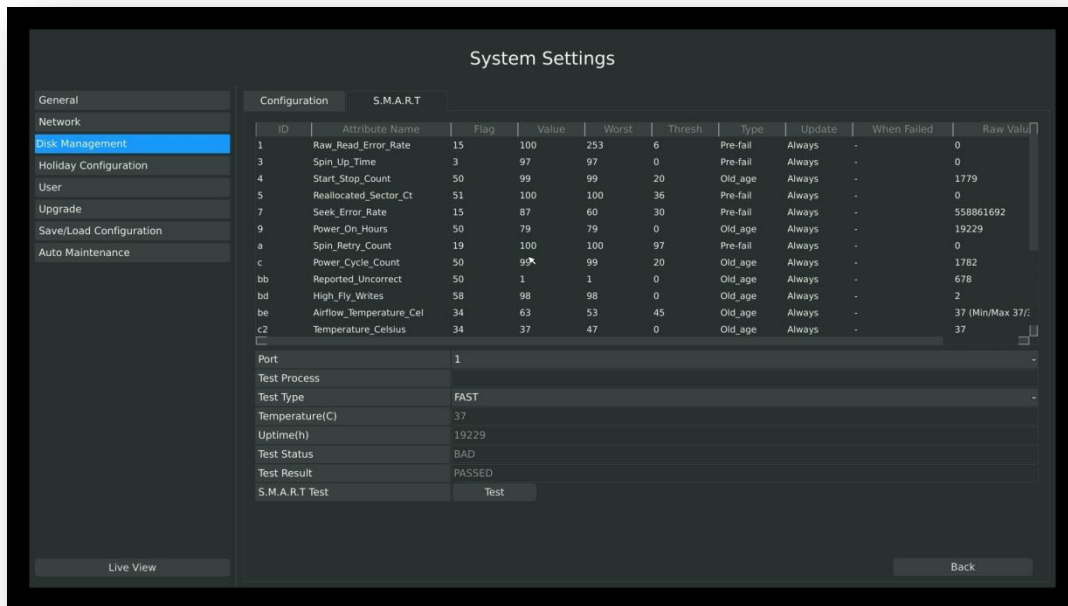

F-3.8.11


Note:

1. Test type has “fast” and “full” options.
2. Test Status can be “status good”, “status bad” and “bad tracks exist”.
3. Test result can be “passed” or “failed”.

3.8.4 Holiday Configuration

It can configure the record or image capture schedule for holidays of the current year.

Step1. Enter holiday setting menu by clicking System Setting → Holiday Configuration.

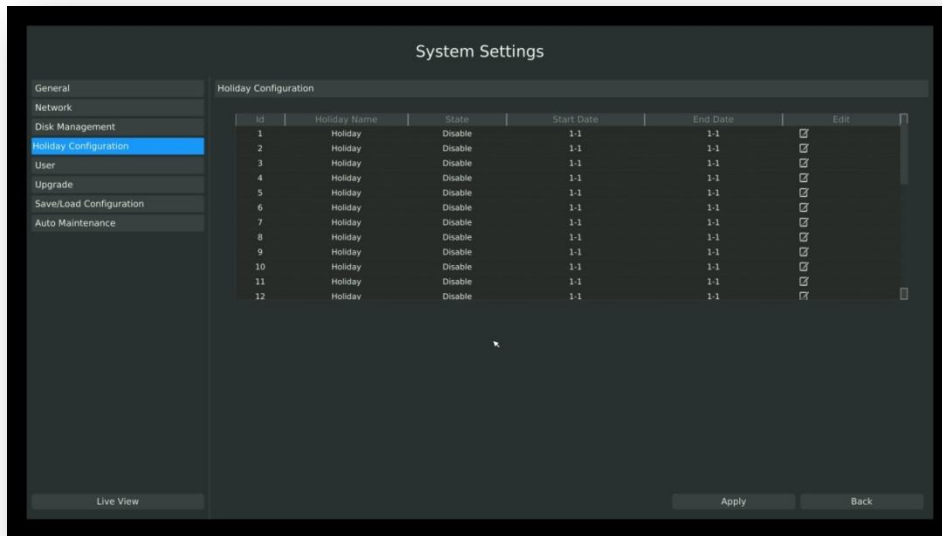


F-3.8.12

Step2. Edit the holiday schedule

Click to open holiday configuration page to modify holiday name, check the ‘Holiday Enable’ checkbox, and then select [style] to setup Start/End date. Then click [OK] to save the configuration and return to holiday configuration page. Click [Apply] to confirm settings.

Note: There are Month, Week, and Date in “Style” mode.

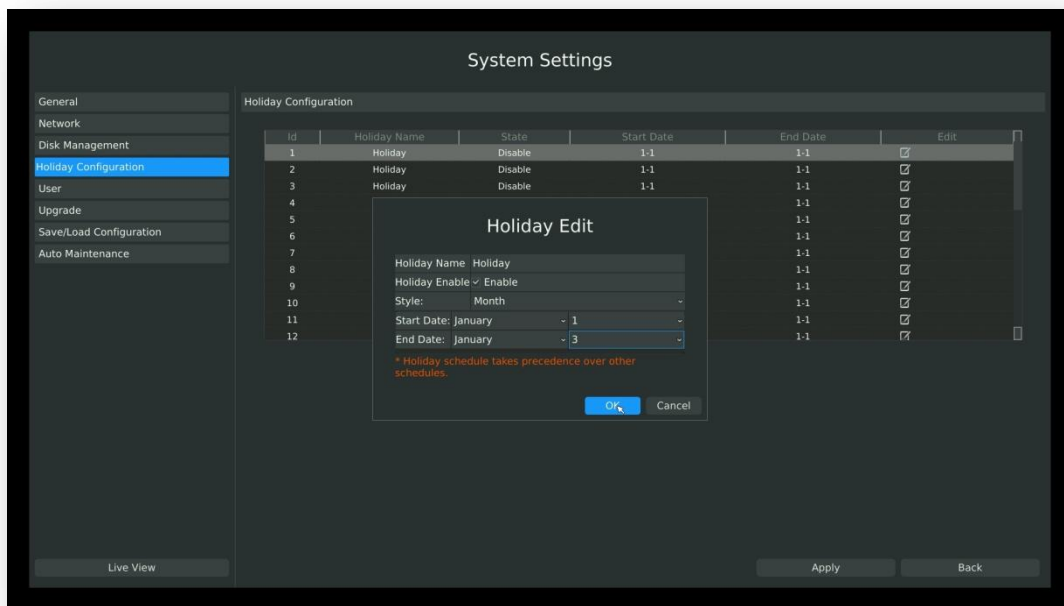

F-3.8.13


3.8.5 User Account Settings

By default, your NVR comes with the user name: “admin” and the password: “123456”. The administrator has the authority to add or delete a user account and configure parameters for the user.

Add New User

Step1: Enter user setting menu by clicking Main Menu → System Settings → User

Click [Add] to enter add user menu, input information for the new user, select user level and click [OK].

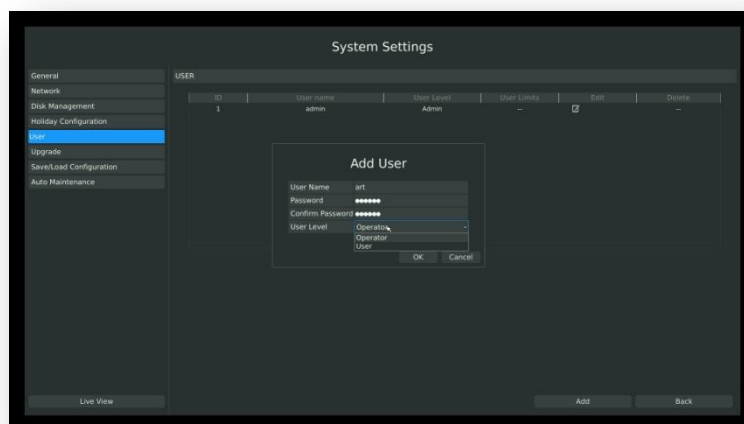

F-3.8.14

Note:

User name can be comprised of letters and figures. The user level is separated into User and Operator with different authority.


Step2: Set user privileges

Select the user that has been added and click [limit] button to enter user privilege menu.




F-3.8.15

Step3. Click  to delete a user.

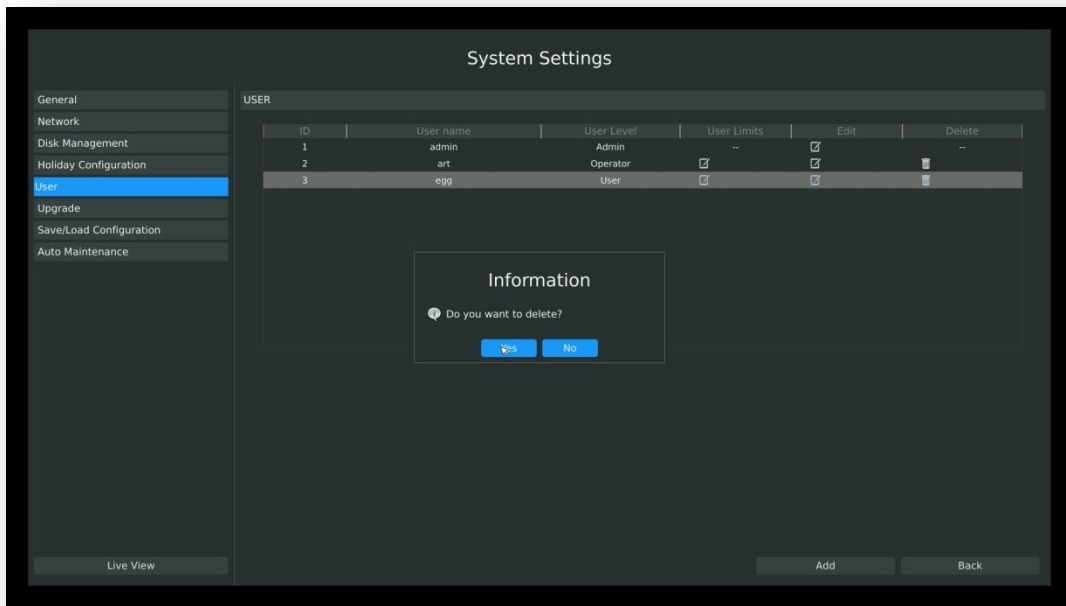

F-3.8.16

Step4. Click  to edit a user.

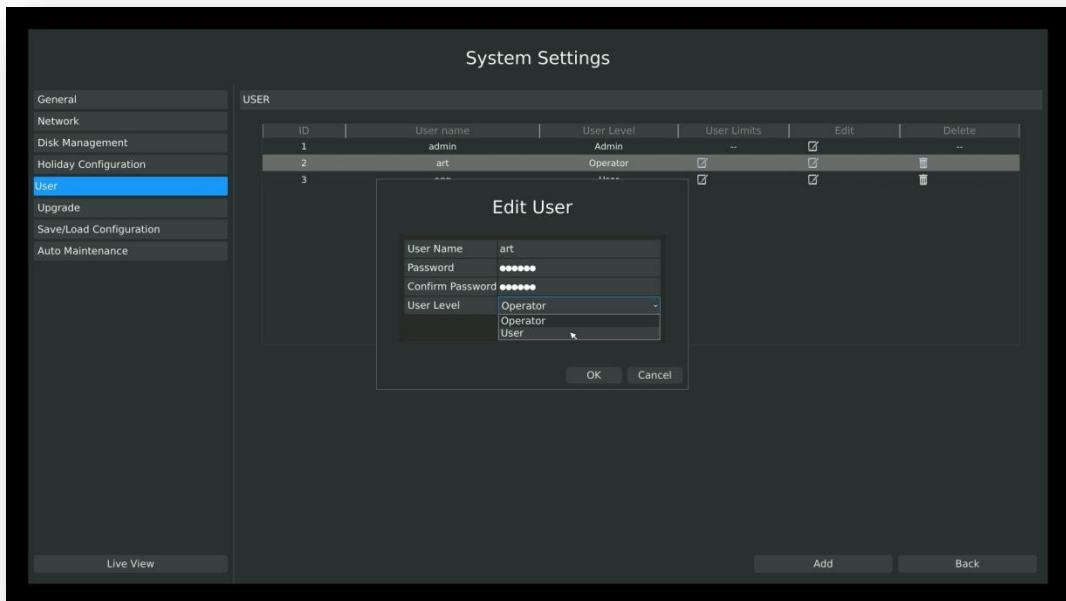


F-3.8.17

3.8.6 Upgrade


Your NVR supports firmware upgrade.

Step1. Enter upgrade menu by clicking Main Menu→System Settings→Upgrade

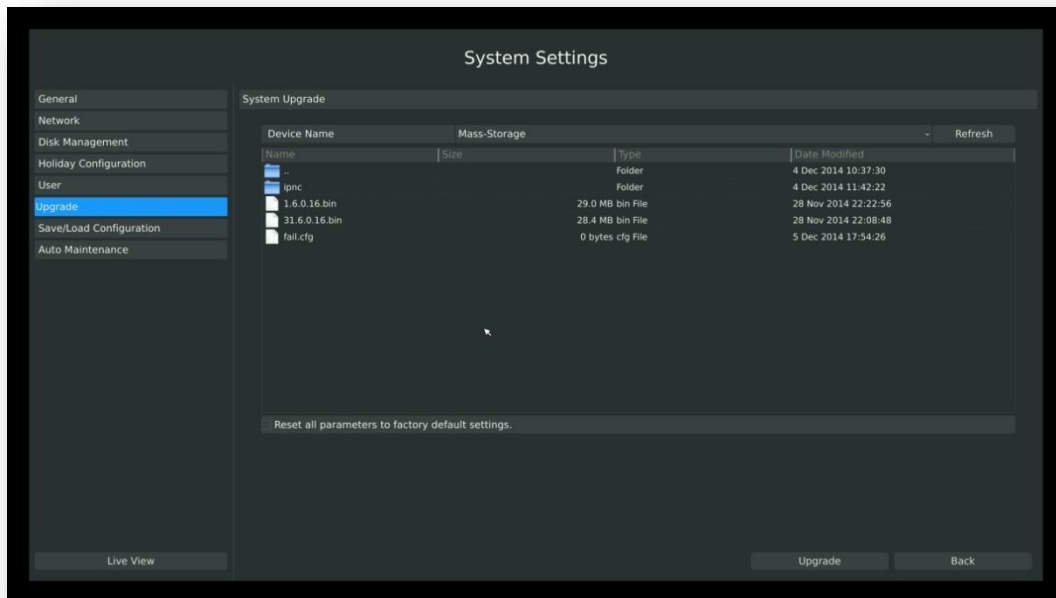


F-3.8.18

Step2. Search for device, and select the .bin file

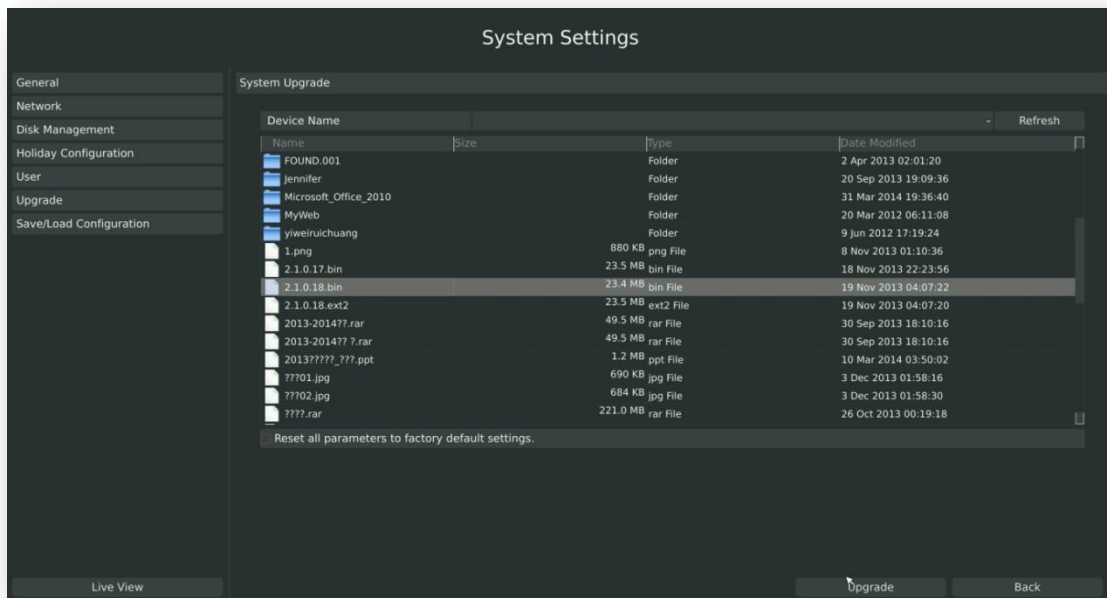

F-3.8.19

Step3. Click [Upgrade] button to confirm the upgrade

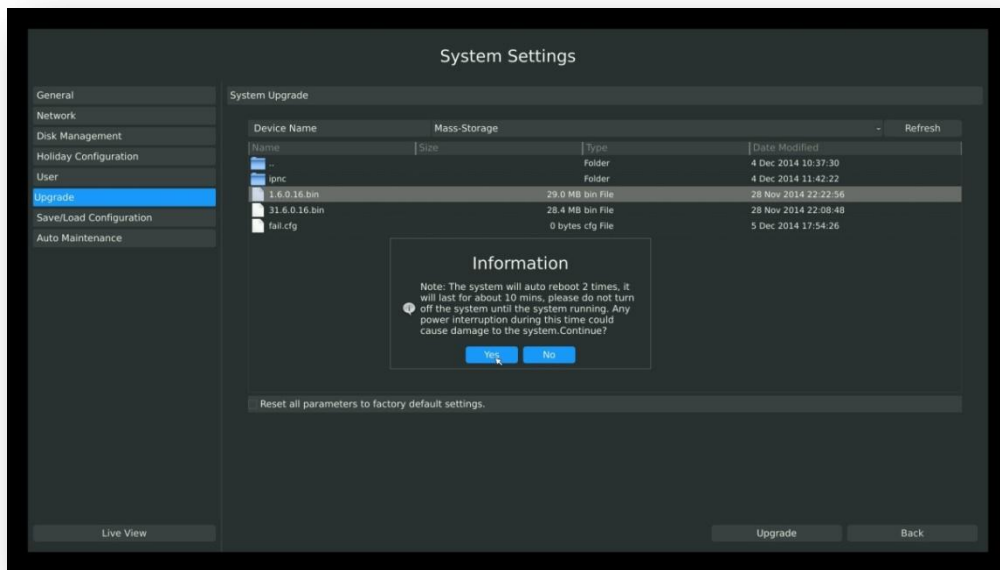

F-3.8.20


Note: The system will auto reboot after confirming upgrade.

3.8.7 Save/Load Configuration

3.8.7.1 Backup/Restore


Your NVR supports backup and restore configuration.

Step1: Enter profile menu by clicking Main Menu→System→Save/Load Configuration→Backup/Restore

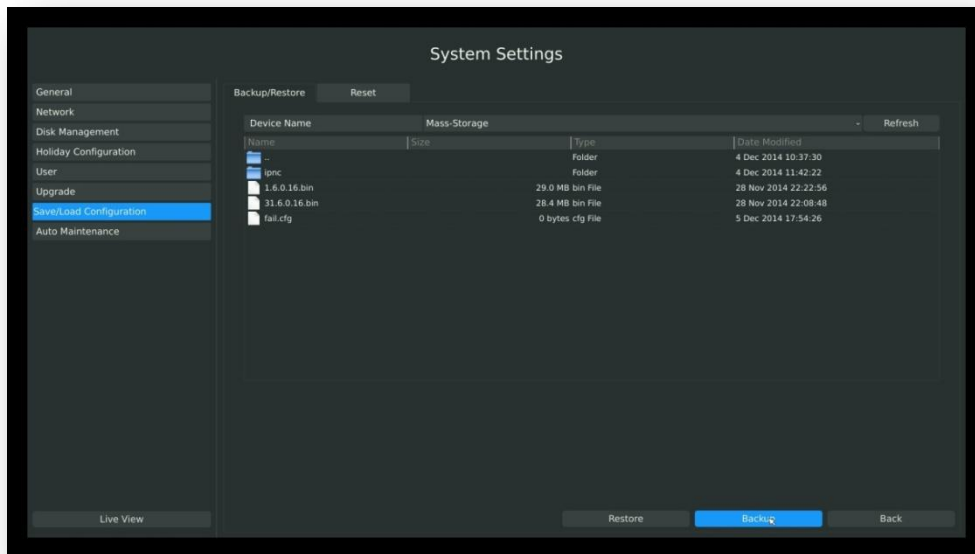


F-3.8.21

Step2. Select a folder and then click [Backup] to export configuration to USB device.

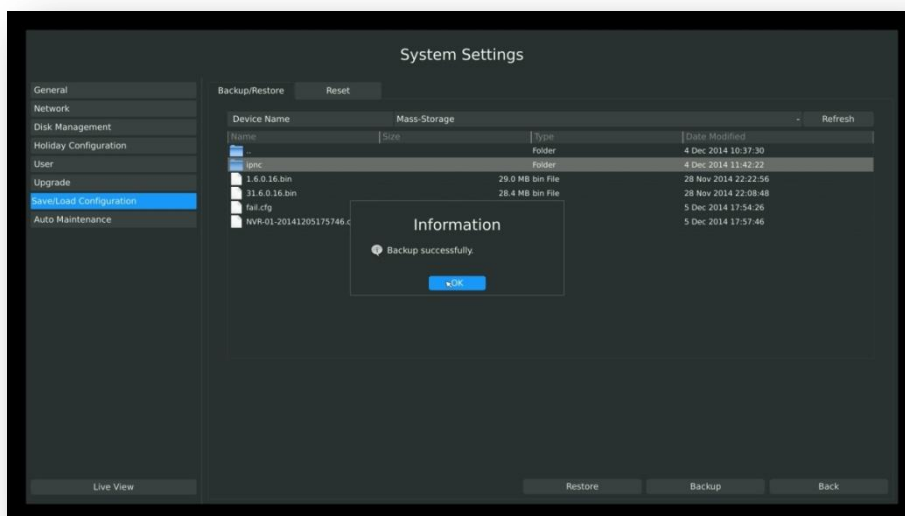

F-3.8.22

Step3. Select a cfg file and then click [Restore] to import configuration to your NVR.

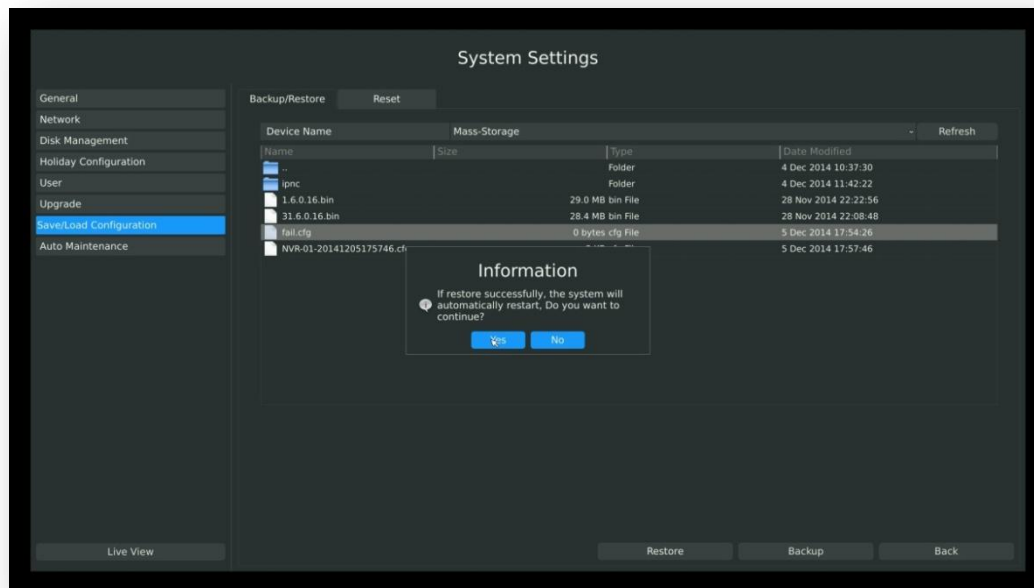


F-3.8.23

3.8.7.2 Reset

You can reset all parameters to default settings.


Enter to reset menu by clicking Main Menu → System → Save/Load Configuration → Reset

Click “yes” to confirm reset.

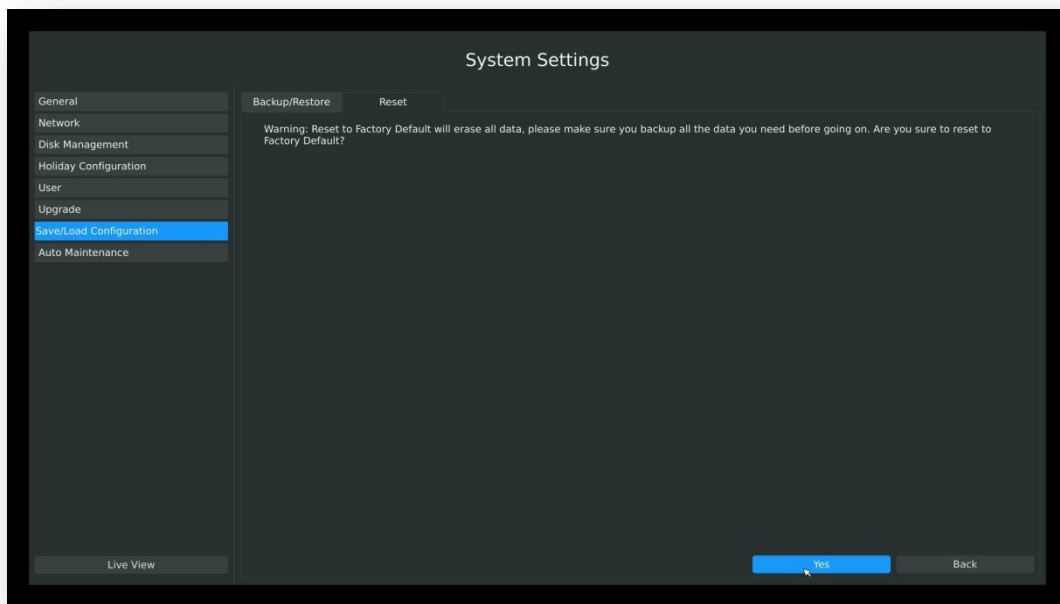

F-3.8.24

3.8.8 Auto Maintenance

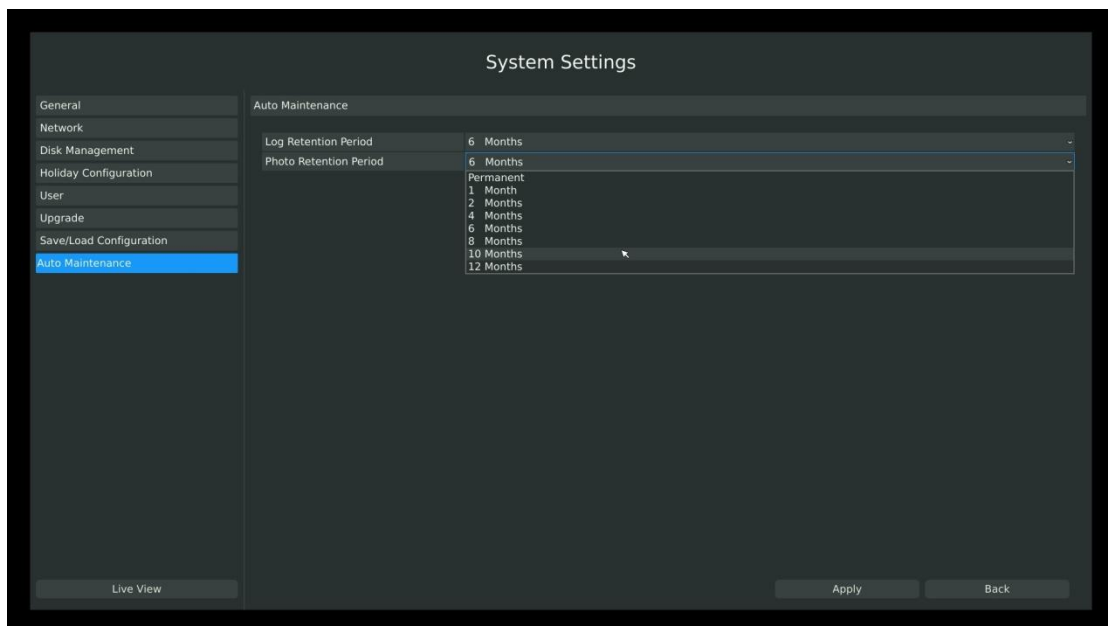


F-3.8.25

You can set the Log and Photo Retention period for Log and Photo.

Once is expired, it will automatically delete by NVR.

The retention period is ranged from 1 to 12 months, if you don't want those files be deleted, you can select Permanent.

3.9 Shutdown

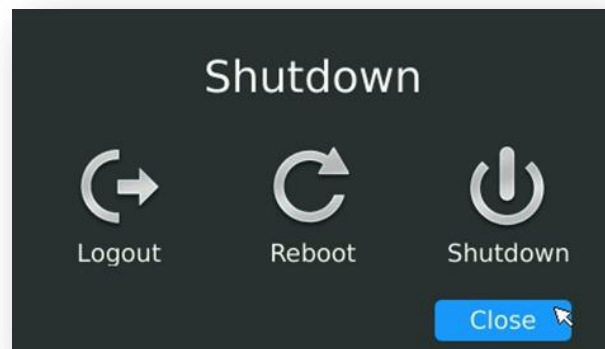

F-3.8.26

3.9.1 Logout

Click [Logout] to exit the current logon account.

3.9.2 Reboot

Click [Reboot] to restart the NVR.

3.9.3 Shutdown

Click [Shutdown] to close the NVR.

3.9.4 Close

Click [Close] to exit.

4. Service

Milesight Technology Co., Ltd provides customers with timely and comprehensive technical support services. End-users can contact your local dealer to obtain technical support. Distributors and resellers can contact directly with Milesight for technical support.

Technical Support Mailbox: support@milesight.com

Web: <http://www.milesight.com>

Online Problem Submission System: <http://www.milesight.com/service/feedback.asp>

Address: No.23Wanghai Road,2nd Software Park, Xiamen,China

Zip Code: 361006

TEL: +86-592-5922772

FAX: +86-592-5922775

Milesight
More in Sight